

ALPHABETICAL INDEX

PART NAME	FIG. NO.	PART NAME	FIG. NO.
A			
ABSORBER, shock	39	BELT, fan (2L)	15A
AB VALVE	2B	BELT, safety	60C
Accelerator LINKAGE (L drive)	13	BLANK KEY	62
Accelerator LINKAGE (R drive)	12	BLOCK, cylinder (1.6L)	1
Accelerator WIRE (L drive)	13	BLOCK, cylinder (2L)	1A
Accelerator WIRE (R drive)	12	Body outside VIEW	54
ACCESSORIES	62	Bottom COVER, transmission (1.6L)	31
Air CLEANER (1.6L)	9	BRACKET KIT, fuel connector (1.6L) ...	8
Air CLEANER (2L for solex)	9A	BRACKET KIT, fuel connector (2L)	8A
Air CLEANER (2L "SU")	9B	Brake DRUM	42
AIR PUMP with pulley	2B	BRAKE, front	40
ALTERNATOR (Mitsubishi)		Brake master CYLINDER (single)	
(1.6L EXC. Emission control)	19	(to E/# R-40000)	44
ALTERNATOR (Mitsubishi)		Brake master CYLINDER (tandem)	
(1.6L Emission control & 2L)	19A	(from E/# R-40001)	44A
AMMETER	23	Brake PEDAL	48
ANTENNA, radio	28B	Brake PIPING	47
APRON, front	54	Brake PIPING (SINGLE CYLINDER).....	47
ARMATURE ass'y (1.6L)	20	BRAKE, rear	43
ARMATURE ass'y (2L)	20A	Bridge TUBE, brake	40
ARM, idler	50	BUMPER, front	54
ARM, knuckle	38	BUMPER, rear	57A
ARM, steering gear (from oct-67).....	49A	BUSHING, cam shaft (1.6L)	1
ARM, steering gear (R.B. type)	49B		
ARM, steering gear (to sep-67)	49	C	
ASH TRAY	56A	CABLE, hand brake	35
AXLE, rear	42	CABLE, ventilator control	56A
B		CAM SHAFT (1.6L)	4
Back-up LAMP	28	CAM SHAFT (2L)	4A
BACK MIRROR, inside	56A	CAP, distributor	18
BACK MIRROR, outside	55	CAP, distributor	18
BALL JOINT	38	CARBURETOR (1.6L "SU")	8
BAR torsion stabilizer	39	CARBURETOR (2L "solex")	8A
BATTERY	22B	CARBURETOR (2L "SU")	8B
BEARING, crankshaft (1.6L)	3	Carburetor REPAIR KIT (1.6L)	8
BEARING, crankshaft (2L)	3A	CASE, rear axle	42
BEARING, front wheel	41	CASE transmission (1.6L)	31
BELT, air pump	2B	CASE, transmission (2L)	31A
BELT, fan (1.6L)	15	CHAIN, cam shaft (1.6L)	4

PART NAME	FIG. NO.	PART NAME	FIG. NO.
CHAIN, cam shaft (2L)	4A	CYLINDER, brake rear wheel	43
Chain TENSIONER (1.6L)	4	CYLINDER, clutch master	45
Chain TENSIONER (2L)	4A	CYLINDER, clutch operating	46
Chassis HARNESS	22	CYLINDER, front brake	40
Check VALVE	2B	CYLINDER, lock set	61B
Choke control WIRE (R drive)	12		
Choke control WIRE (R drive)	13	D	
Cigarette LIGHTER	22A	Differential gear CASE	37
CLAMP, spare tire	58	DIODE SET (1.6L)	19
CLEANER Air (2L "SU")	9B	DIODE SET (2L)	19A
CLOCK	28B	DISC, brake rear	43
CLUTCH	29	DISTRIBUTOR (hitachi)	18
Clutch DISC	29	Door LOCK	61A
Clutch master CYLINDER	45	Door PANEL	61
Clutch operating CYLINDER	46		
Clutch PEDAL	48	E	
Clutch release BEARING	29	Electrical parts MOUNTING	21
Clutch switch	2B	Electric UNIT	22A
Companion FLANGE	37	EMBLEM, body side	55
CONDENSER, distributor	18	EMBLEM, hood	55
Connecting Rod (1.6L)	3	EMBLEM, radiator grille	54
Connecting Rod (2L)	3A	EMBLEM, rear panel	58
Console FITTING	56A	ENGINE (1.6L)	0
Console PANEL	56	ENGINE (2L)	0A
CONTACT SET	18	Engine GASKET kit (1.6L)	0
CONTROL, hood lock	55A	Engine GASKET kit (2L)	0A
Control LEVER, transmission	33	Engine MOUNTING	17
CONTROL, throttle	13A	Engine room HARNESS	22
CONTROL, transmission	33	EVAPOR control TUBE	2B
COVER, road wheel	41	Evaporative emission control DEVICE	
Cowl PANELS.....	55B	(CALIFORNIA)	10A
Cowl VENTILATOR	55B	Exhaust emission CONTROL	2B
Crank SHAFT (1.6L)	3	Exhaust emission control DEVICE	
Crank SHAFT (2L)	3A	(USA & ONTARIO)	2B
CROSS MEMBER	52	Exhaust MANIFOLD (1.6L)	5
CROSS Rod, hand brake	35	Exhaust MANIFOLD (2L)	5A
CROSS Rod, steering	50	Exhaust VALVE (1.6L)	4
Cylinder BLOCK (1.6L)	1	Exhaust VALVE (2L)	4A
Cylinder BLOCK (2L)	1A	Exhaust TUBE (to C/# SP311-03000,	
CYLINDER, brake master (single)		SPL311-17000, SR311-00007,	
(to E/# R-40000)	44	SRL311-00069)	14
CYLINDER, brake master (tandem)			
(from E/# R40001)	44A		

PART NAME	FIG. NO.	PART NAME	FIG. NO.
Exhaust TUBE (from C/# SP311-03001, SPL311-17001, SR311-00008, SRL311-00070)	14A	Fuel pump REPAIR KIT	10
F		Fuel STRAINER	10
FAN (1.6L)	15	Fuel TANK (CALIFORNIA)	10A
FAN (2L)	15A	Fuel TANK (Exc. CALIFORNIA)	11
Fan BELT (1.6L)	15	FUSE	22A
Fan BELT (2L)	15A	Fuse BLOCK	22A
FENDER, front	55	G	
FENDER, rear	57A	GASKET kit, engine (1.6L)	0
Flasher UNIT	22A	GASKET kit, engine (2L)	0A
FIELD COIL (1.6L)	20	GASKET kit, valve regrind (1.6L)	0
FIELD COIL (2L)	20A	GASKET kit, valve regrind (2L)	0A
Flexible SHAFT, speedometer	23	GAUGE, fuel tank (CALIFORNIA)	10A
FLOAT, carburetor (1.6L)	8	GAUGE, fuel tank (Exc. CALIFORNIA)	11
FLOAT, carburetor (2L SOLEX)	8A	GAUGE, oil level (1.6L)	1
FLOAT, carburetor (2L SU)	8B	GAUGE, oil level (2L)	1A
Floor TRIMMING	57	GAUGES, combined	23
Flow guide VALVE	2B	Gear CARRIER	37
Fly WHEEL (1.6L)	3	GEAR HYPOID	37
Fly WHEEL (2L)	3A	GEAR, steering (to sep-67)	49
FITTING, console	56A	GEAR, steering (from oct-67)	49A
FOG LAMP	28	GEAR, steering (R.B type)	49B
FOG & REVERSE LAMP	28	GEAR, transmission (1.6L) (WARNER)	32A
Fork Rod, transmission control	33	GEAR, transmission (1.6L) (SERVO SYNCHROMESH)	32
FRAME	52	GEAR, transmission (2L) (SERVO SYNCHROMESH)	32B
FRAME, windshield	56B	GEAR, transmission (2L) (WARNER) ...	32C
Front APRON	54	GLASS, back window	59
Front BRAKE	40	GLASS, door ventilator	61
Front BUMPER	54	GLASS, door window	61
Front FENDER	55	GLASS, windshield	56B
Front HUB	41	GLOVE BOX, floor	56A
Front LAMPS.....	26	GLOVE BOX instrument	56
Front STABILIZER	39	GRILLE, cowl top	55B
Front suspension LINK.....	38	GRILLE, radiator	54
FUEL connector BRACKET KIT (1.6L) ..	8	H	
FUEL connector BRACKET KIT (2L SU)	8B	Hand brake CONTROL	34
Fuel PIPING	11A		
Fuel PIPING (from oct-67)	11A		
Fuel PUMP	10		

PART NAME	FIG. NO.	PART NAME	FIG. NO.
		K	
Hand brake LINKAGE	35	Kit TOOL	61C
Hard TOP	59	Knuckle ARM	38
HEATER (Option)	28A	Knuckle SPINDLE	38
HEAD, cylinder (1.6L)	2		
HEAD, cylinder (2L)	2A	L	
Head LAMP	25	LAMPS Front	26
Head REST	60C	LAMPS rear (from july-69)	27A
HEAD, rotor	18	LAMPS rear (to june-69)	27
Heater control CABLE	28A	Leaf SPRING, rear	53
Heater MOTOR	28A	LICENSE LAMP	28
High tension CABLE	21	Lid TRUNK	58
Hinge PILLAR	55	LINK, front suspension	38
HOOD	55	LINKAGE, accelerator (L drive)	13
HOOD LEDGE	55	LINKAGE, accelerator (R drive)	12
Hood LOCK	55A	LINKAGE, hand brake	35
HORN	22A	LINKAGE, steering	50
HORN BUTTON	51	LOCK, door	61A
HOSE, radiator (from C/# SP-05001, SPL-25001, SR-04001, SRL-09001)	16A	LOCK, glove box lid	56
HOSE, radiator (to C/# SP-05000 SPL-25000, SR-04000, SRL-09000)	16	LOCK, steering	61B
HUB, front	41	LOCK, trunk lid	58
Hypoid GEAR SET	37		
		M	
I		Magnetic SWITCH (1.6L)	20
IDLER, steering	50	Magnetic SWITCH (2L)	20A
Ignition COIL	21	MANIFOLD (1.6L)	5
Instrument HARNESS	22	MANIFOLD (2L) (2L "SU")	5A
Instrument PANEL	56	MAP LAMPS	26B
INSULATOR, carburetor (1.6L)	5	MASK, radio aperture	28B
INSULATOR, carburetor (2L)	5A	MASTER CYLINDER, brake (single) ...	44
Intake MANIFOLD (1.6L)	5	MASTER CYLINDER, brake (tandem)...	44A
Intake MANIFOLD (2L)	5A	MASTER CYLINDER, clutch	45
Intake VALVE (1.6L)	4	METER, instrument	23
Intake VALVE (2L)	4A	MODEL NO. PLATE	62
		MODULATOR THERMAL	2B
J		MOUNTING, electrical parts	21
JACK set	61C	MOUNTING, engine	17
JOURNAL KIT	36	MOTOR, starter (1.6L)	20
		MOTOR, starter (2L)	20A

PART NAME	FIG. NO.	PART NAME	FIG. NO.
MUFFLER (from C/# SP311-03001, SPL311-17001, SR311-00008, SRL311-00070)	14A	PIPE, air gallery	2B
MUFFLER (to C/# SP311-03000, SPL311-17000, SR311-00007, SRL311-00069)	14	PIPE, air injection	2B
N		PIPING, brake	47
Neutral SWITCH	2B	PIPING, brake (SINGLE CYLINDER) ..	47
O		PIPING, fuel	11A
Oil FILLER (1.6L)	2	PIPING, fuel (from oct-67)	11A
OIL FILTER (1.6L)	7	PISTON, engine (1.6L)	3
OIL FILTER (2L)	7A	PISTON, engine (2L)	3A
Oil level Gauge (1.6L)	1	Piston RING (1.6L)	3
Oil level GAUGE (2L)	1A	Piston RING (2L)	3A
Oil PAN (1.6L)	1	Propeller SHAFT	36
Oil PAN (2L)	1A	Pulley, alternator (1.6L)	19
OIL PUMP (1.6L)	6	Pulley, alternator (2L)	19A
OIL PUMP (2L)	6A	Pulley, crankshaft (1.6L)	3
OIL STRAINER (1.6L)	6	Pulley, crankshaft (2L)	3A
Operating CYLINDER, clutch	46	Push ROD (1.6L)	4
OUTSIDE, rear	57A	R	
Over flow TUBE (1.6L)	5	RADIO	28B
OVERRIDE	54	RADIATOR (from C/# SP-05001, SPL-25001, SR-04001, SRL-09001)	16A
P		RADIATOR (to C/# SP-05000, SPL-25000, SR-04000, SRL-09000)	16
PAD, disc brake	40	Radiator GRILLE	54
PAD, instrument	56A	Rear AXLE	42
PAINT	62	Rear BRAKE	43
PANELS, cowl	55B	Rear EXTENSION (1.6L)	31
PANEL, door	61	Rear EXTENSION (2L)	31A
Parking & turn signal LAMP, front	26	Rear FENDER	57A
Parts SWITCH (from july-69)	22A	Rear LAMPS	27
Parts SWITCH (to june-69)	22A	Rear LAMPS (from july-69)	27A
PILLAR, hinge	55	Rear LAMPS (to june-69)	27
PINION & CLUTCH, starter motor (1.6L)	20	Rear PANEL	58
PINION & CLUTCH, starter motor (2L)	20A	REAR, outside	56
		Rear SUSPENSION	53
		REFLECTOR	27
		REGULATOR	58
		REGULATOR, door window	61A
		Remote CONTROL, door	61A

PART NAME	FIG. NO.	PART NAME	FIG. NO.
T			
TACHOMETER	23	TUBE, evaporative emission control (CALIFORNIA)	10A
TANK fuel (EXC. CALIFORNIA)	11	Turn signal LAMP, rear	27
Tail & stop LAMP, rear	27	Turn signal & Parking LAMP, front	26
TANK, fuel	11		
THERMOSTAT (1.6L)	2	V	
THERMOSTAT (2L)	2A	Vacuum CONTROL	18
Throttle CONTROL	13A	Valve LIFTER (1.6L)	4
Throttle SHAFT (1.6L)	8	Valve regrind GASKET kit (1.6L)	0
Throttle SHAFT (2L SOLEX)	8A	Valve regrind GASKET kit (2L)	0A
Throttle SHAFT (2L SU)	8B	Valve rocker COVER (2L)	2A
Tonneau COVER	59	VENTILATOR	55B
TOOL KIT	61D	VENTILATOR, door window	61
Torque ROD	53	Voltage REGULATOR	21
Torsion BAR, stabilizer	39		
Trunk LID	58	W	
TRANSMISSION, ass'y	30	Waist PANEL	57A
Transmission CASE (1.6L)	31	Waist PANEL	58
Transmission CASE (2L)	31A	WASHER, windshield	24A
Transmission CONTROL	33	Water PUMP (1.6L)	15
Transmission SHAFT & GEAR (1.6L) (SERVO SYNCHROMESH)	32	Water PUMP (2L)	15A
Transmission SHAFT & GEAR (1.6L) (WARNER)	32A	WEIGHT, governor	18
Transmission SHAFT & GEAR (2L) (SERVO SYNCHROMESH)	32B	WHEEL, road	41
Transmission SHAFT & GEAR (2L) (WARNER)	32C	WHEEL steering	51
TRIM, lock pillar	57	Windshield GLASS	56B
TRIM, wheel house	57	Windshield WASHER	24A
TRIMMING, cowl side	57	Windshield WIPER	24
TRIMMING, console side	56A	Wiper ARM	24
TRIMMING, door	61	Wiper BLADE	24
TRIMMING, floor	57	Wiper MOTOR	24
TRIMMING, parcel shelf	57	WIPER, windshield	24
TRIMMING, sill panel	57	WIRE, accelerator (L drive)	13
TRIMMING, trunk floor	58	WIRE, accelerator (R drive)	12
TUBE, exhaust (to C/# SP311-03000, SPL311-17000, SR311-00007, SRL311-00069)	14	WIRE, choke control (L drive)	13
TUBE, exhaust (from C/# SP311-03000, SPL311-17000, SR311-00008, SRL311-00070)	14	WIRE, choke control (R drive)	12
TUBE, evapo control	2B	WIRE, throttle control	13A
		WIRING	22
		Withdrawal LEVER	29