

Datsun Maintenance Schedule 1967

600miles (1,000kms)

Lubrication

- (1) Change engine oil.
 - (2) Change transmission and differential gear oil.
-

Inspection and Adjustment

(1) Engine

- (1) Re-tighten cylinder head, manifolds and exhaust pipe flange.
- (2) Adjust tappet clearance.
- (3) Check ignition timing (adjustment).
- (4) Check carburetor and re-tighten fitting parts.
- (5) Measure specific gravity of battery electrolyte.
- (6) Check fan belt tension.
- (7) Check leak from oil pan (re-tighten if necessary).
- (8) Re-tighten engine mountings.

(2) Chassis

- (1) Check clutch pedal play.
- (2) Re-tighten steering box.
- (3) Re-tighten steering idler.
- (4) Check knuckle arm fittings.
- (5) Check steering linkage.
- (6) Check remote control linkage.
- (7) Re-tighten universal joint flanges.
- (8) Re-tighten spring U-bolts.

(3) Others

- (1) Re-tighten and check doors' opening and closing.

(4) Additional items for only diesel engine

- (1) Re-tighten fuel system fitting.
- (2) Check amount of oil in injection pump.
- (3) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

2,000miles (3,000kms)

Lubrication

- (1) Change engine oil.
 - (2) Change oil filter.
-

Inspection and Adjustment

(1) Engine

- (1) Check amount of cooling water and leakage.
- (2) Check fuel strainer.
- (3) Check leakage of fuel.
- (4) Check leakage of engine oil.
- (5) Check spark plugs (clean and check gap).
- (6) Check distributor cap, rotor and point (clean and adjust if necessary).
- (7) Check engine starting, sound and color of exhaust gas.
- (8) Check engine idling (adjust if necessary).
- (9) Check amount of fluid in battery.

(2) Chassis

- (1) Check leakage and amount of fluid in brake and clutch devices.
- (2) Check damage or leakage of brake pipes and hoses.
- (3) Check clutch operation.
- (4) Check foot and hand brake operation.
- (5) Check looseness, damage of brake rods and cables.
- (6) Check steering linkage and wheel play.
- (7) Check front and rear suspension.
- (8) Check tire pressure.

(3) Others

- (1) Check direction indicators, horn, all lights and switches operation.
- (2) Check back mirror.
- (3) Check dirt, damage of reflectors and number plate.
- (4) Check instrument meters operation.
- (5) Check unusual smell, sound vibration.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Change oil filter element.
- (3) Check fuel strainer.
- (4) Change amount of oil in injection pump.
- (5) Drain oil in governor.
- (6) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

4,000miles (6,000kms)

Lubrication

- (1) Change engine oil. [every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Check engine idling.
- (5) Check engine starting, sound and color of exhaust gas.
- (6) Check amount of cooling water and leakage.
- (7) Check amount of fluid in battery.
- (8) Check fuel leakage.

(2) Chassis

- (1) Check damage or leakage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage and wheel play.
- (4) Check foot and hand brake operation.
- (5) Check clutch operation.
- (6) Check tire pressure.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Change oil filter element [every 2,000miles (3,000kms)].
- (3) Check fuel strainer.
- (4) Drain oil in governor.
- (5) Change amount of oil in injection pump.
- (6) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

6,000miles (10,000kms)

Lubrication

- (1) Change engine oil. [Every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
 - (6) Check amount of oil in steering gear box.
 - (7) Lubricate linkage of carburetor.
 - (8) Lubricate distributor rotor shaft and breaker arm shaft.
 - (9) Lubricate linkage of accel, clutch, and brake pedal.
 - (10) Lubricate lever of hand brake, remote control.
 - (11) Lubricate door hinges, engine hood lock and trunk linkage.
 - (12) Apply grease to distributor cam heel.
 - (13) Grease up all nipples.
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Set engine idling.
- (5) Replace oil filter. [Every 2,000miles (3,000kms) for Diesel].
- (6) Change cooling water (cf) unnecessary for NISSAN Long Life Coolant.
- (7) Re-tighten cylinder head and manifolds.
- (8) Check fuel strainer.
- (9) Adjust tappet clearance.
- (10) Check ignition timing.
- (11) Check dirt of battery cords and terminals.
- (12) Check charging operation.

(2) Chassis

- (1) Check damage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage.
- (4) Check front and rear suspension.
- (5) Check joints of propeller shaft.
- (6) Check wear of front wheel bearings.
- (7) Rotate tire position.
- (8) Check wheel disc.
- (9) Check wheel balance.
- (10) Check foot and hand brake operation.
- (11) Check clutch operation (adjust if necessary).
- (12) Check damage of electric wirings, connections.
- (13) Check tire pressure.
- (14) Check steering wheel play.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.
- (3) Road test.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Check fuel strainer.
- (3) Drain oil in governor.
- (4) Change amount of oil in injection pump.
- (5) Lubricate injection pump governor, diaphragm.
- (6) Check nozzles.

Datsun Maintenance Schedule 1967

9,000miles (15,000kms)

Lubrication

- (1) Change engine oil. [every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Check engine idling.
- (5) Check engine starting, sound and color of exhaust gas.
- (6) Check amount of cooling water and leakage.
- (7) Check amount of fluid in battery.
- (8) Check fuel leakage.

(2) Chassis

- (1) Check damage or leakage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage and wheel play.
- (4) Check foot and hand brake operation.
- (5) Check clutch operation.
- (6) Check tire pressure.
- (7) Check leakage and amount of fluid in brake and clutch devices.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Change oil filter element [every 2,000miles (3,000kms)].
- (3) Check fuel strainer.
- (4) Drain oil in governor.
- (5) Change amount of oil in injection pump.
- (6) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

12,000miles (20,000kms)

Lubrication

- (1) Change engine oil. [Every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage.
 - (5) Grease up upper and lower spindles, ball joints.
 - (6) Check amount of oil in steering gear box.
 - (7) Lubricate linkage of carburetor.
 - (8) Lubricate distributor rotor shaft and breaker arm shaft.
 - (9) Lubricate linkage of accel, clutch, and brake pedal.
 - (10) Lubricate lever of hand brake, remote control.
 - (11) Lubricate door hinges, engine hood lock and trunk linkage.
 - (12) Apply grease to distributor cam heel.
 - (13) Grease up all nipples.
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Replace spark plugs.
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Set engine idling.
- (5) Replace oil filter. [Every 2,000miles (3,000kms) for Diesel].
- (6) Change cooling water (cf) unnecessary for NISSAN Long Life Coolant.
- (7) Re-tighten cylinder head and manifolds.
- (8) Check fuel strainer.
- (9) Adjust tappet clearance.
- (10) Check ignition timing.
- (11) Check dirt of battery cords and terminals.
- (12) Check charging operation.
- (13) Clean air cleaner (unnecessary for viscous type).
- (14) Re-tighten mounting of engine and auxillary parts.
- (15) Check generator, voltage regulator function.
- (16) Check starter motor operation and fittings.
- (17) Measure specific gravity of battery electrolyte.

(2) Chassis

- (1) Check damage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage.
- (4) Check front and rear suspension.
- (5) Check joints of propeller shaft.
- (6) Check wear of front wheel bearings.
- (7) Rotate tire position.
- (8) Check wheel disc.
- (9) Check wheel balance.
- (10) Check foot and hand brake operation.
- (11) Check clutch operation (adjust if necessary).
- (12) Check damage of electric wirings, connections.

- (13) Check tire pressure.
- (14) Check steering wheel play.
- (15) Check operational mechanism of transmission.
- (16) Check shock absorbers.
- (17) Check stabilizer.
- (18) Re-tighten door hinges.
- (19) Check front wheel alignment.
- (20) Check brake drums, linings.
- (21) Re-tighten mountings of transmission, steering gear box.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.
- (3) Road test.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Replace fuel strainer.
- (3) Drain oil in governor.
- (4) Change amount of oil in injection pump.
- (5) Lubricate injection pump governor, diaphragm.
- (6) Check nozzles.
- (7) Check feed pump.

Datsun Maintenance Schedule 1967

15,000miles (25,000kms)

Lubrication

- (1) Change engine oil. [every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Check engine idling.
- (5) Check engine starting, sound and color of exhaust gas.
- (6) Check amount of cooling water and leakage.
- (7) Check amount of fluid in battery.
- (8) Check fuel leakage.

(2) Chassis

- (1) Check damage or leakage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage and wheel play.
- (4) Check foot and hand brake operation.
- (5) Check clutch operation.
- (6) Check tire pressure.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Change oil filter element [every 2,000miles (3,000kms)].
- (3) Check fuel strainer.
- (4) Drain oil in governor.
- (5) Change amount of oil in injection pump.
- (6) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

18,000miles (30,000kms)

Lubrication

- (1) Change engine oil. [Every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
 - (6) Check amount of oil in steering gear box.
 - (7) Lubricate linkage of carburetor.
 - (8) Lubricate distributor rotor shaft and breaker arm shaft.
 - (9) Lubricate linkage of accel, clutch, and brake pedal.
 - (10) Lubricate lever of hand brake, remote control.
 - (11) Lubricate door hinges, engine hood lock and trunk linkage.
 - (12) Apply grease to distributor cam heel.
 - (13) Grease up all nipples.
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Set engine idling.
- (5) Replace oil filter. [Every 2,000miles (3,000kms) for Diesel].
- (6) Change cooling water (cf) unnecessary for NISSAN Long Life Coolant.
- (7) Re-tighten cylinder head and manifolds.
- (8) Check fuel strainer.
- (9) Adjust tappet clearance.
- (10) Check ignition timing.
- (11) Check dirt of battery cords and terminals.
- (12) Check charging operation.

(2) Chassis

- (1) Check damage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage.
- (4) Check front and rear suspension.
- (5) Check joints of propeller shaft.
- (6) Check wear of front wheel bearings.
- (7) Rotate tire position.
- (8) Check wheel disc.
- (9) Check wheel balance.
- (10) Check foot and hand brake operation.
- (11) Check clutch operation (adjust if necessary).
- (12) Check damage of electric wirings, connections.
- (13) Check tire pressure.
- (14) Check steering wheel play.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.
- (3) Road test.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Check fuel strainer.
- (3) Drain oil in governor.
- (4) Change amount of oil in injection pump.
- (5) Lubricate injection pump governor, diaphragm.
- (6) Check nozzles.

Datsun Maintenance Schedule 1967

21,000miles (35,000kms)

Lubrication

- (1) Change engine oil. [every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage. (**DATSUN SPORTS** only)
 - (5) Grease up upper and lower spindles, ball joints. (**DATSUN SPORTS** only)
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Check spark plugs (clean and check gap).
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Check engine idling.
- (5) Check engine starting, sound and color of exhaust gas.
- (6) Check amount of cooling water and leakage.
- (7) Check amount of fluid in battery.
- (8) Check fuel leakage.

(2) Chassis

- (1) Check damage or leakage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage and wheel play.
- (4) Check foot and hand brake operation.
- (5) Check clutch operation.
- (6) Check tire pressure.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Change oil filter element [every 2,000miles (3,000kms)].
- (3) Check fuel strainer.
- (4) Drain oil in governor.
- (5) Change amount of oil in injection pump.
- (6) Lubricate injection pump governor, diaphragm.

Datsun Maintenance Schedule 1967

24,000miles (40,000kms)

Lubrication

- (1) Change engine oil. [Every 2,000miles (3,000kms) for diesel engines]
 - (2) Check amount of oil in transmission and differential gear case.
 - (3) Check amount of fluid in brake and clutch devices.
 - (4) Grease up steering linkage.
 - (5) Grease up upper and lower spindles, ball joints.
 - (6) Check amount of oil in steering gear box.
 - (7) Lubricate linkage of carburetor.
 - (8) Lubricate distributor rotor shaft and breaker arm shaft.
 - (9) Lubricate linkage of accel, clutch, and brake pedal.
 - (10) Lubricate lever of hand brake, remote control.
 - (11) Lubricate door hinges, engine hood lock and trunk linkage.
 - (12) Apply grease to distributor cam heel.
 - (13) Grease up all nipples.
 - (14) Change amount of oil in transmission and differential gear case.
 - (15) Change wheel bearing grease.
 - (16) Change propeller shaft joint grease.
 - (17) Apply grease to brake shoe linkages.
-

Inspection and Adjustment

(1) Engine

- (1) Check fan belt tension.
- (2) Replace spark plugs.
- (3) Check distributor cap, rotor and point (clean and adjust if necessary).
- (4) Set engine idling.
- (5) Replace oil filter. [Every 2,000miles (3,000kms) for Diesel].
- (6) Change cooling water (cf) unnecessary for NISSAN Long Life Coolant.
- (7) Re-tighten cylinder head and manifolds.
- (8) Check fuel strainer.
- (9) Adjust tappet clearance.
- (10) Check ignition timing.
- (11) Check dirt of battery cords and terminals.
- (12) Check charging operation.
- (13) Clean air cleaner (unnecessary for viscous type).
- (14) Re-tighten mounting of engine and auxiliary parts.
- (15) Check generator, voltage regulator function.
- (16) Check starter motor operation and fittings.
- (17) Measure specific gravity of battery electrolyte.
- (18) Check fuel pump function.
- (19) Measure compression pressure of cylinder.
- (20) Clean jets, float chamber of carburetor.
- (21) Check condenser of distributor.

(2) Chassis

- (1) Check damage of brake pipes and hoses.
- (2) Check looseness, damage of brake rods and cables.
- (3) Check steering linkage.
- (4) Check front and rear suspension.

- (5) Check joints of propeller shaft.
- (6) Check wear of front wheel bearings.
- (7) Rotate tire position.
- (8) Check wheel disc.
- (9) Check wheel balance.
- (10) Check foot and hand brake operation.
- (11) Check clutch operation (adjust if necessary).
- (12) Check damage of electric wirings, connections.
- (13) Check tire pressure.
- (14) Check steering wheel play.
- (15) Check operational mechanism of transmission.
- (16) Check shock absorbers.
- (17) Check stabilizer.
- (18) Re-tighten door hinges.
- (19) Check front wheel alignment.
- (20) Check brake drums, linings.
- (21) Re-tighten mountings of transmission, steering gear box.
- (22) Check and clean brake pipes and hoses.
- (23) Check exhaust pipe and fittings.
- (24) Check head lamp aiming and brightness.

(3) Others

- (1) Check instrument meters operation.
- (2) Check direction indicators, horn, all lights and switches operation.
- (3) Road test.

(4) Additional items for only diesel engine

- (1) Check air breather.
- (2) Replace fuel strainer.
- (3) Drain oil in governor.
- (4) Change amount of oil in injection pump.
- (5) Lubricate injection pump governor, diaphragm.
- (6) Check nozzles.
- (7) Check feed pump.