

PARTS LIST

HEATER

DATSUN SERIES

MODEL 312~411

320, 520

SP310,

SP311

VOL. 1

NISSAN MOTOR CO., LTD.

TOKYO JAPAN

"Da

then

are



FOREWORD

We are pleased to inform you of heater components which cover "Datsun Bluebird," "Datsun Pick-up and "Datsun Sports 1500/1600."

Please order them according to this list hereafter.

Each drawing gives all the components of a basic model at first, and then only the components changed and newly adopted at the later models are in turn shown.

INDEX

Model	410 & 411	1 ~ 7
Model	312 & 320	8 ~ 11
Model	520	12 ~ 14
Model	SP310 & SP311	15 ~ 18

2701

27


27

2701


2701

FIG. 1


27010-11400 (410) '63. 9
 *27010-10800 (L410) '64. 12

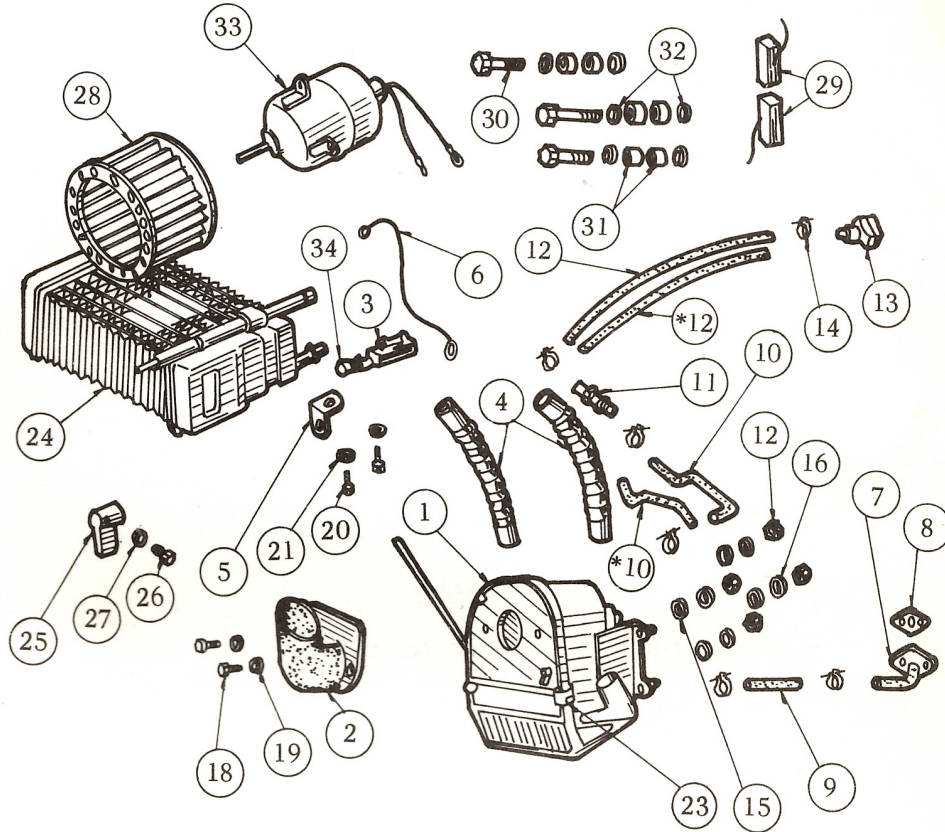

 27010-11401 (410) '64. 1
 27010-10801 (L410) '64. 7



27010-11402 (410) '64. 8
 27010-10802 (L410) '64. 8

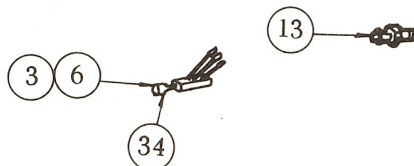

MODEL 410

27010-11400 410
 27010-10800 L410 From September 1963 to
 December 1964

Key No.	Part No.	Description	P/C
1- 1	27011 11400	Unit-room heater	1
1- 2	27060 11400	Hose-air	1
1- 3	27095 11400	Switch with knob & register	1
1- 4	27061 11400	Hose-defroster 38 ϕ	2
1- 5	27186 11400	Bracket-switch	1
1- 6	27176 11400	Cord	1
1- 7	27070 04100	Connector (I)	1
1- 8	27112 30100	Packing	1
1- 9	27065 11400	Hose-inlet 170L	1
1-10	27067-11400	Hose-outlet (I)	1
1-*10	27067 10800	Hose-outlet (I)	1
1-11	27066 32300	Connector (II) 12.7 ϕ x 45L	1
1-12	27066 08600	Hose-outlet (II) 1150L	1
1-*12	27067-33300	Hose-outlet (II) 1000L	1
1-13	27075 01300	Connector (III)	1
1-14	27086 00100	Clamp-hose	6
1-15	9-15414-1	Washer-plain	4
1-16	9-15114-1	Washer-spring	4
1-17	9-11144-1	Nut	4
1-18	3-10810-1	Bolt, air hose	2

Key No.	Part No.	Description	P/C
1-19	9-15408-1	Washer-plain, air hose	2
1-20	3-14030-1	Bolt, bracket	2
1-21	9-15110-1	Washer-spring, bracket	2
1-22	27012 11400	Box-heater	1
1-23	B7010-11400	Clip	3
1-24	27015 11400	Core-heater	1
1-25	B7010-11401	Knob-hot/cold	1
1-26	B7010-11402	Screw, knob	1
1-27	B7010-11403	Washer-spring, knob	1
1-28	B7010-11404	Fan with nut, metal	1
1-29	B7010-11405	Brush	2
1-30	B7010-11406	Bolt, motor	3
1-31	B7010-11407	Rubber-cushion, motor	6
1-32	B7010-11408	Washer, motor	6
1-33	B7010-11409	Motor 12V-30W for metal fan	1
1-34	27185-11400	Knob-switch 5 ϕ	1

Note: * points the part used for the left hand drive only.

27010-11401 410
 27010-10801 L410 From January 1964 to July 1964

Key No.	Part No.	Description	P/C
1-7, 1-8	27070 11400	Connector	1

27010-11402 410
27010-10802 L410 For August 1964

Key No.	Part No.	Description	P/C
1-3, 1-6	25340 13200	Switch with knob but without register	1
1-13	27076 33300	Connector	1

270
*270

27010-1
*27010-1


FIG. 2

P/C

1

1

27010-13600 (410) '64. 9
 *27010-13300 (L410) '65. 3

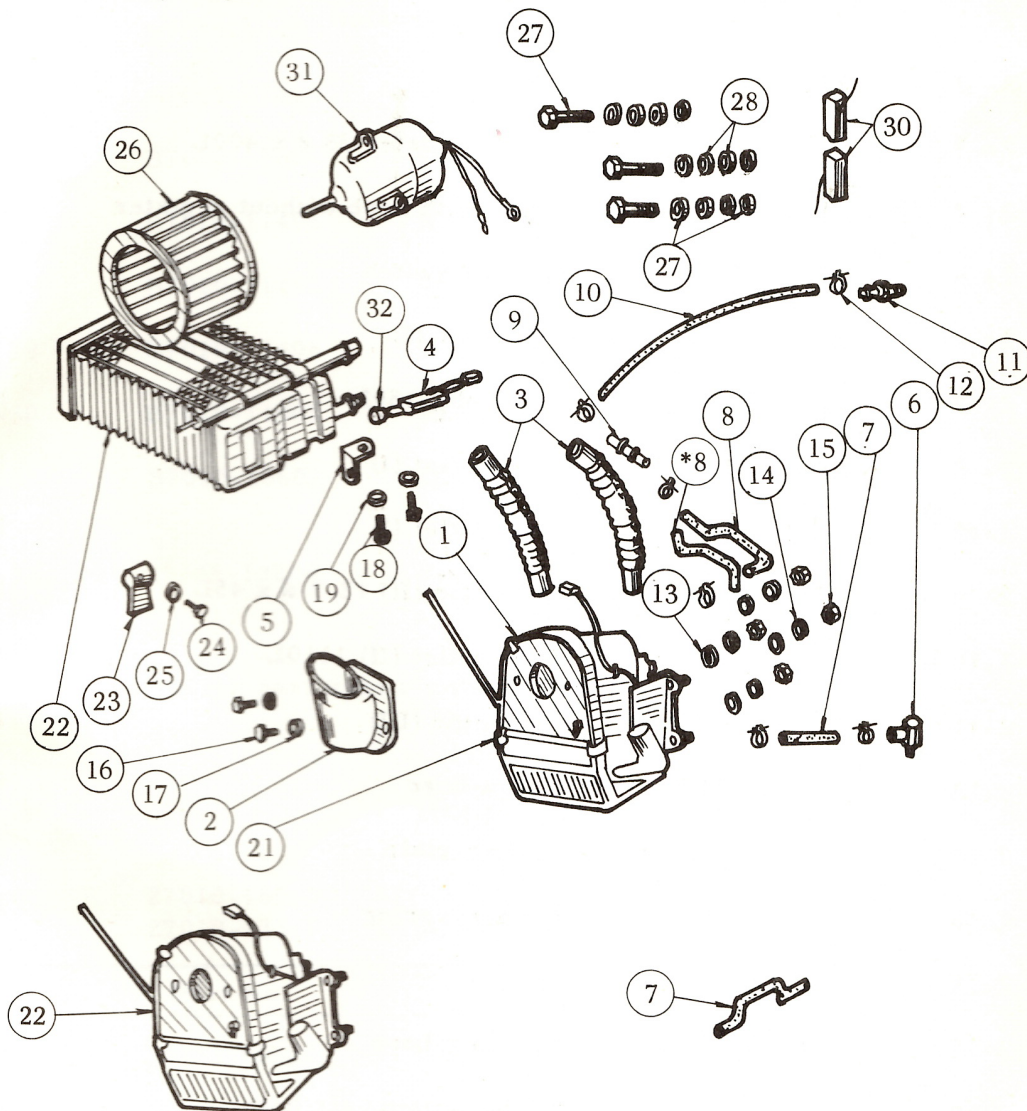

27010-16500 (411) '65. 4
 *27010-17001 (L411)



27010-13600 410
 27010-13300 L410 From September 1964 to
 March 1965

Key No.	Part No.	Description	P/C
2- 1	27011 13600	Unit-room heater	1
2- 2	27060 11400	Hose-air	1
2- 3	27061 11400	Hose-defroster 38 ϕ x 400L	2
2- 4	25340 13200	Swtich with knob without register	1
2- 5	27186 14300	Bracket-switch	1
2- 6	27070 11400	Connector (I)	1
2- 7	27065 11400	Hose-inlet 180L	1
2- 8	27067-11400	Hose-outlet (I)	1
2-*8	27067-10800	Hose-outlet (I)	1
2- 9	27066 32300	Connector (II) 12.7 ϕ x 45L	1
2-10	27066 13699	Hose-outlet (II) 1110L	1
2-11	27076 33300	Connector (III)	1
2-12	2 7086 00100	Clamp-hose	6
2-13	9-15414-1	Washer-plain	4
2-14	9-15114-1	Washer-spring	4
2-15	9-11144-1	Nut	4
2-16	3-10810-1	Bolt, air hose	2
2-17	9-15408-1	Washer-plain, air hose	6
2-18	3-14030-1	Bolt, bracket	2
2-19	9-15110-1	Washer-spring, bracket	2
2-20	27012 13600	Box-heater	1
2-21	B7010-11400	Clip	3

Key No

2-22

2-23

2-24

2-25

2-26

2-27

2-28

2-29

2-30

2-31

2-32

Note:

Key N

2-22

2- 7

2-*10

Note:

Key No.	Part No.	Description	P/C
2-22	27015 11400	Core-heater	1
2-23	B7010-13600	Knob-hot/cold	1
2-24	B7010-11402	Screw, knob	1
2-25	B7010-11403	Washer-spring, knob	1
2-26	B7010-13601	Fan-plastic	1
2-27	B7010-11406	Bolt, motor	3
2-28	B7010-11407	Rubber-cushion, motor	6
2-29	B7010-11408	Washer, motor	6
2-30	B7010-11405	Brush	2
2-31	B7010-13602	Motor with nut 12V-30W for plastic fan	1
2-32	25345-13200	Knob-switch 5 ϕ	1

Note: * points the part used for the left hand drive only.

MODEL 411


27010-16500 411
27010-13300 L411 From April 1965

Key No.	Part No.	Description	P/C
2-22	27011 15800	Unit-room heater	1
2- 7	27061 14800	Hose-water	1
2-*10	27066 17000	Hose-outlet 1030L	

Note: * points the part used for the left hand drive only.


FIG. 3

27010-09405 ((L) 312)

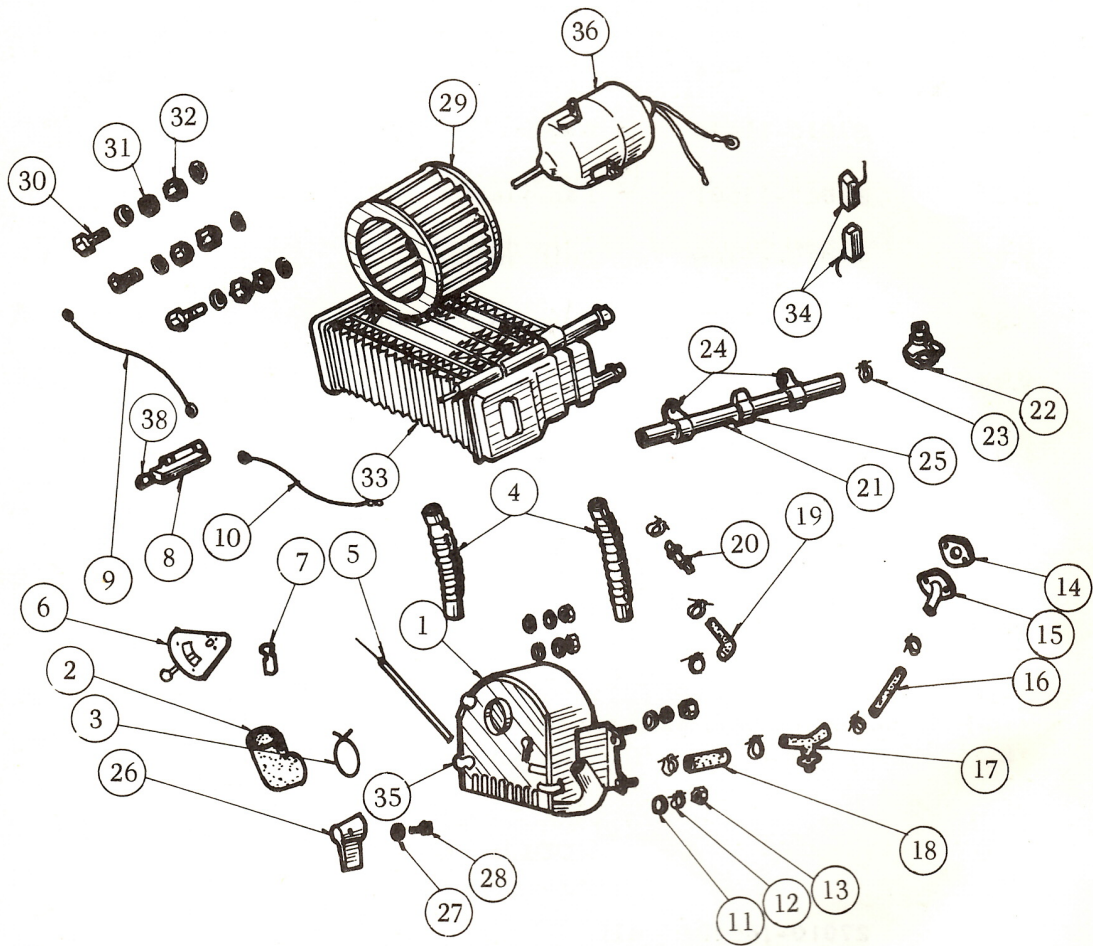

27010-08704 (320)

*27010-08075 (L320)

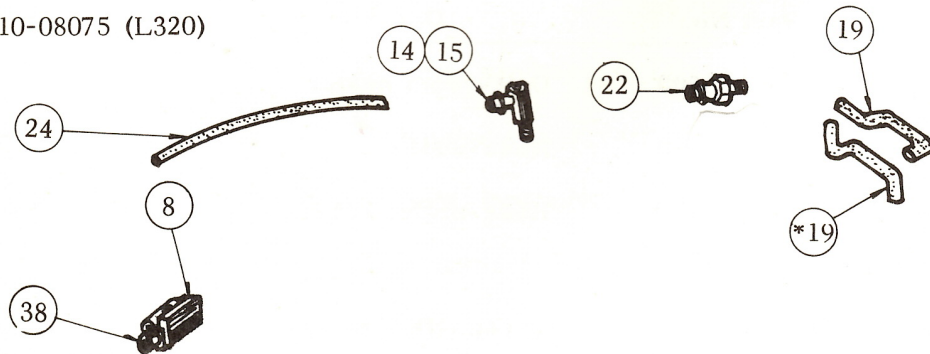

MODEL 312 & 320

27010 09405 (L)312

Key No.	Part No.	Description	P/C
3- 1	27011 09400	Unit-room heater	1
3- 2	27060 09400	Hose-air	1
3- 3	27085 09400	Clip-hose, air	1
3- 4	27061 04101	Hose-defroster 38 ϕ x 340L	2
3- 5	27130 04100	Cable	1
3- 6	27135 09401	Lever-control with knob	1
3- 7	27154 00100	Block-swivel	1
3- 8	27095 00100	Switch with knob & register	1
3- 9	27175 09400	Code (I)	1
3-10	27176 04100	Code (II)	1
3-11	9-15414-1	Washer-plain	4
3-12	9-15114-1	Washer-spring	4
3-13	9-11144-1	Nut	4
3-14	27112 30100	Packing	1
3-15	27070 04100	Connector (I)	1
3-16	27064 09400	Hose-inlet (I), 120L	1
3-17	27090 09400	Cock-drain	1
3-18	27065 30000	Hose-inlet (II), 50L	1
3-19	27067 09400	Hose-outlet (I)	1
3-20	27066 32300	Connector (II)	1
3-21	27066 09400	Hose-outlet (II)	1

Key No.	Part No.	Description	P/C
3-22	27075 01300	Connector (III)	1
3-23	27086 00100	Clamp-hose	8
3-24	27078 04100	Clip-hose (I)	2
3-25	27079 07200	Clip-hose (II)	1
3-26	B7010-11401	Knob-hot/cold	1
3-27	B7010-11403	Washer-spring, knob	1
3-28	B7010-11402	Screw, knob	1
3-29	B7010-11404	Fan with nut, metal	1
3-30	B7010-11406	Bolt, motor	3
3-31	B7010-11407	Rubber-cushion, motor	6
3-32	B7010-11408	Washer, motor	6
3-33	27015 09400	Core-heater	1
3-34	B7010-11405	Brush	2
3-35	B7010-11400	Clip	3
3-36	B7010-11409	Motor 12V-30W for metal fan	1
3-37	27012 09400	Box-heater	1
3-38	27185-04400	Knob-switch 4 ϕ (gray)	1

27010-08704 320
27010-08705 L320

Key No.	Part No.	Description	P/C
3-24	27066 08600	Hose-outlet (II) 1150L	1
3-14, 15	27070 11400	Connector (I)	1
3-22	27076 33300	Connector (III)	1

Key No.

3-19

3-*19

3-**29

3-**36

3- 8

3-38

Note:

P/C	Key No.	Part No.	Description	P/C
1	3-19	27067-11400	Hose-outlet (I)	1
8	3-*19	27607-10800	Hose-outlet (I)	1
2	3-**29	B7010-13604	Fan-plastic	1
1	3-**36	B7010-13609	Motor for plastic fan	1
1	3- 8	27095-08700	Switch with knob & register	1
1	3-38	27185-08700	Knob-switch 5 ϕ (black)	1

Other components are the same as the ones of the model (L)312.

Note: * points the part used for the left hand drive only.

** A plastic fan might be used for a part of the latter model (L)320.
In this case, these two parts must be ordered.

P/C


1

1

1

FIG. 4

27010-14800 ((L)520)

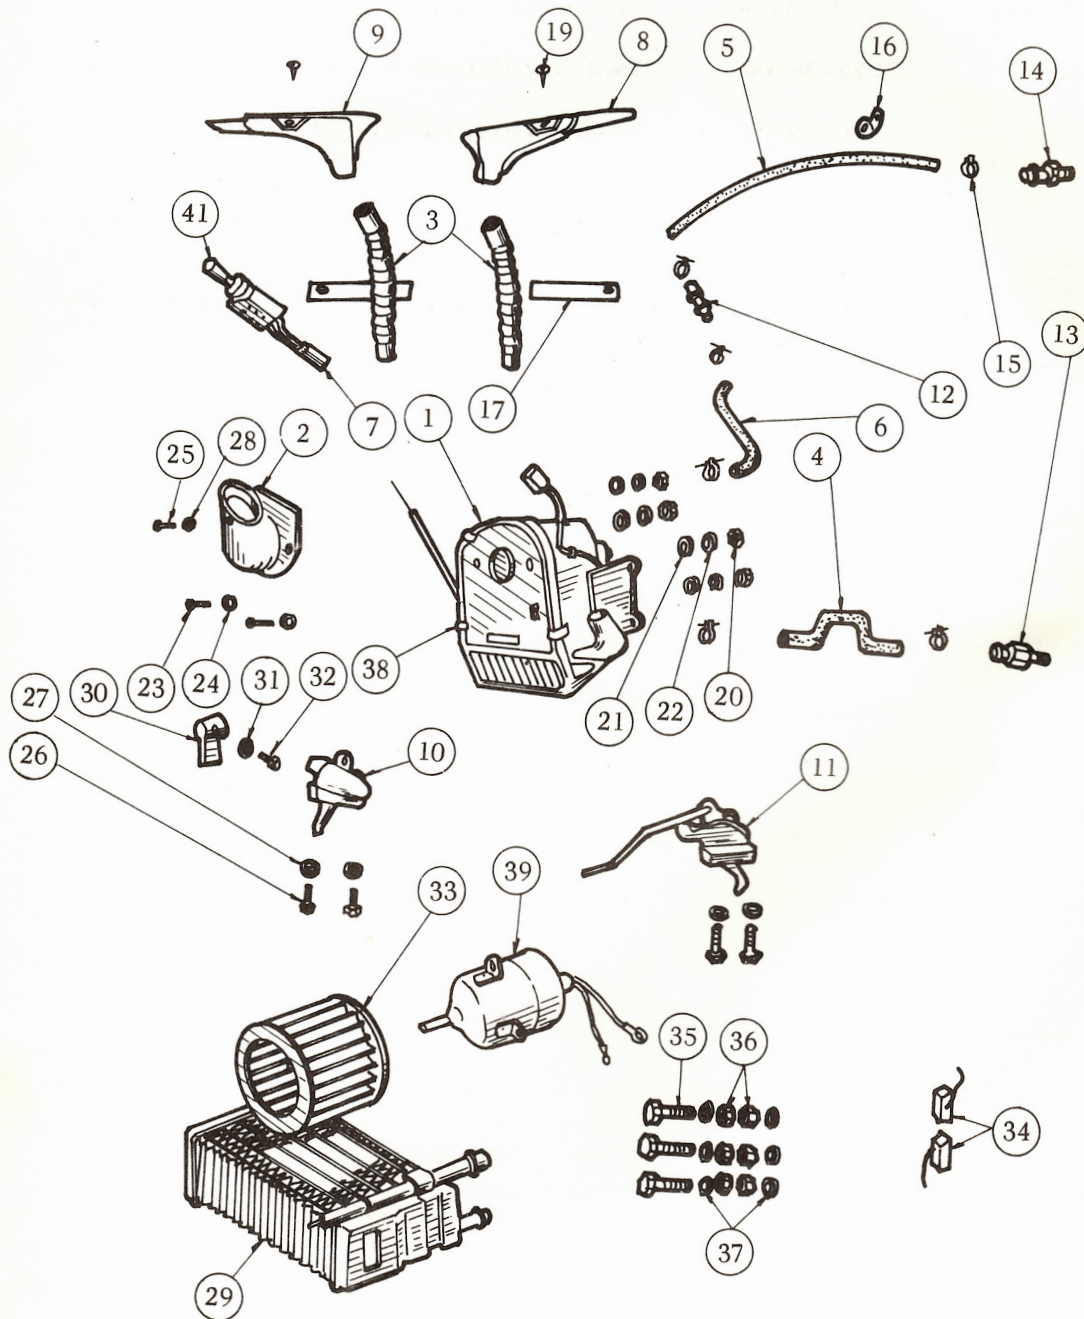

Key No

4- 1

4- 2

4- 3

4- 4

4- 5

4- 6

4- 7

4- 8

4- 9

4-10

4-11

4-12

4-13

4-14

4-15

4-16

4-17

4-18

4-19

4-20

MODEL 520

27010-14800 (L)520 From April 1965

Key No.	Part No.	Description	P/C
4- 1	27011 14800	Unit-room heater	1
4- 2	27035 14800	Duct-air	1
4- 3	27161 11400	Hose-defroster 38 ϕ x 400L	2
4- 4	27061 14800	Hose-inlet	1
4- 5	27062 14800	Hose-outlet 12.7 ϕ x 650L	1
4- 6	27067 10800	Hose-outlet	1
4- 7	27095 14800	Switch	1
4- 8	27171 14800	Nozzle-defroster RH	1
4- 9	27172 14800	Nozzle-defroster LH	1
4-10	27145 14800	Lever-control, heater	1
4-11	27135 14800	Lever-control, air	1
4-12	27066 32300	Connector-hose	1
4-13	27070 11400	Connector-inlet	1
4-14	27076 33300	Connector-outlet	1
4-15	27086 00100	Clamp, hose	6
4-16	27078 09400	Clip-hose	1
4-17	27162 14800	Clip-defroster hose	2
4-18	9-18410-4	Nut-spring	2
4-19	5-11016-4	Screw-tapping	2
4-20	9-11144-1	Nut	4

Key No.	Part No.	Description	P/C
4-21	9-15414-1	Washer-plain	4
4-22	9-15114-1	Washer-spring	4
4-23	3-10810-1	Screw-pan, air hose	2
4-24	9-15108-1	Washer-spring, air hose	2
4-25	5-10610-1	Screw-tapping, air hose	1
4-26	3-24012-1	Screw-pan, lever	4
4-27	9-16410-1	Washer-ratchet	4
4-28	9-15406-1	Washer-plain	1
4-29	27015 11400	Core-heater	1
4-30	B7010-11401	Knob-hot/cold	1
4-31	B7010-11403	Washer-spring, knob	1
4-32	B7010-11402	Screw, knob	1
4-33	B7010-13601	Fan-plastic	1
4-34	B7010-11405	Brush	2
4-35	B7010-11406	Bolt, motor	3
4-36	B7010-11407	Rubber-cushion, motor	6
4-37	B7010-11408	Washer, motor	6
4-38	B7010-11400	Clip	3
4-39	B7010-13602	Motor with nut for plastic fan	1
4-40	B7010-14800	Box-heater	1
4-41	27097-14800	Knob-switch 5 ϕ	1



4

4

2

2

1

4

4

1

1

1

1

1

1

2

3

6

6

3

1

1

1


FIG. 5

27010-12901 (SP310)

27010-14600 (SP311)

*27010-13051 (SPL310)

*27010-14700 (SPL311)

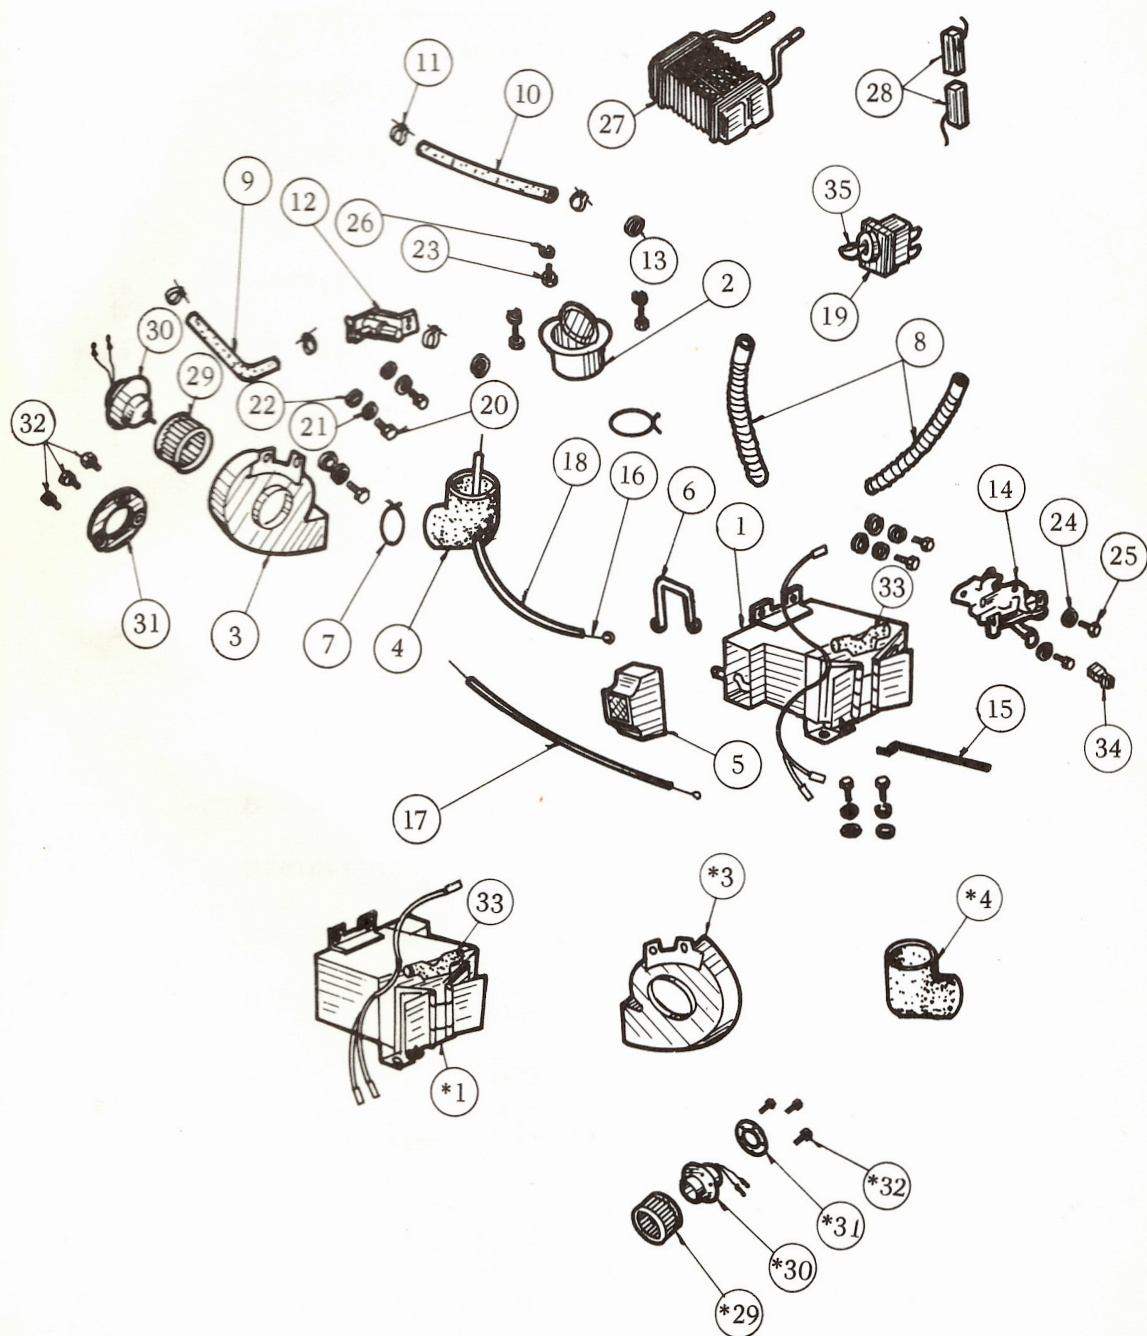

MODEL SP310 & SP311

27010 12901 SP310
 27010-13051 SPL310 From February 1963 to
 February 1965

Key No.	Part No.	Description	P/C
5- 1	21011-12901	Unit-room heater	1
5-*1	21011-13001	Unit-room heater	1
5- 2	27100-12901	Valve-air intake	1
5- 3	B7010-12900	Casing	1
5-*3	B7010-13000	Casing	1
5- 4	27152-12901	Duct-air intake	1
5-*4	27152-13001	Duct-air intake	1
5- 5	27151 12901	Duct-air	1
5- 6	27086 12901	Clip-duct	1
5- 7	27085 09400	Clip-air hose	2
5- 8	27161 12900	Hose-defroster	2
5- 9	27063 12901	Hose-water (I)	1
5-10	27065 12901	Hose-water (II)	1
5-11	27075 32600	Clamp-hose, water	5
5-12	27090 12900	Cock-control	1
5-13	9-51110	Grommet-water pipe	2
5-14	27135 12901	Control-heater	1
5-15	27131 12901	Cable-heater control	1
5-16	27130 12901	Cable-heater control	1
5-17	27134 12901	Cable-cock control	1

Key N

5-18

5-19

5-20

5-21

5-22

5-23

5-24

5-25

5-26

5-27

5-28

5-29

5-*2

5-30

5-*3

5-31

5-*4

5-32

5-33

5-34

5-35

5-36

5-37

Not

Key No.	Part No.	Description	P/C
5-18	24251 36700	Grommet	
5-19	25340 12900	Switch-heater	1
5-20	1-14416-1	Bolt-hexagon	7
5-21	9-15114-1	Washer-spring	7
5-22	9-15414-1	Washer-plain	7
5-23	4-14012-1	Screw-pan, valve	4
5-24	9-11140-1	Nut-hexagon, lever	2
5-25	3-69012-1	Screw-hexagon, lever	2
5-26	9-15110-1	Washer-spring, valve	8
5-27	B7010-12901	Core-heater	1
5-28	B7010-11405	Brush	2
5-29	B7010-12902	Fan with nut	1
5-*29	B7010-13001	Fan with nut	1
5-30	B7010-12903	Motor 12V-30W	1
5-*30	B7010-13002	Motor 12V-30W	1
5-31	B7010-12904	Packing	1
5-*31	B7010-13003	Packing	1
5-32	B7010-12905	Bolt	3
5-33	B7010-12907	Hose-demister, duct	1
5-34	68141-12901	Knob-lever, control	2
5-35	25165-12900	Knob-switch	1

Note: * points the part used for the left hand drive only.

27010-14600 SP311
27010-14700 SPL311 From March 1965

Key No.	Part No.	Description	P/C
	B7010-14600	Motor 12V-50W	1
	B7010-14601	Fan with nut	1
	B7010-14700	Fan with nut	1
	B7010-14701	Motor 12V-50W	1

Other components are the same as the ones of the model SP310 & SPL310.

Note: * points the part used for the left hand drive only.

0 8

1

1

1

1

P/C



Printed in Japan Pub. No. EC-004