

**PARTS  
CATALOG**

**PARTS CATALOG**

**DATSUN  
SPORTS**

**DATSUN SPORTS**

**MODEL SP 311 SR 311 SERIES**

**MODEL  
SP 311  
SR 311  
SERIES**



**1967**

**Pub. No.  
C-034E**

**NISSAN MOTOR CO., LTD.**  
TOKYO, JAPAN

**Pub. No. C-034E**

# **PARTS CATALOG**

# **DATSUN SPORTS**

**MODEL** SP 311 **SERIES**  
SR 311



**NISSAN MOTOR CO. LTD.**

# INTRODUCTION

To bring better customer service and better spare parts supply, please note the following four points when referring to this Parts Catalog.

## I. HOW TO USE THIS PARTS CATALOG

- A. The Publication Number of this Parts Catalog is C-034E. Whenever quoting the Parts Catalog, tell us this Pub. No. .
- B. All spare parts available for MODEL SP, SR311 series are included here.
- C. Alphabetical section index appears on page 27.
- D. Brief specifications of Model SP, SR311 series appear on page 3.
- E. Symbols and Abbreviations appear on page 8.
- F. The Car Numbers, the Engine Numbers or the Dates in the Part Name column indicate the application of the parts which were changed. The location of the car No. and the engine No. appears on page 10.
- G. Part Number Index is attached to the end of this Parts Catalog.
- H. Alphabetical Index is attached to the end of this Catalog.

## II. HOW TO PLACE YOUR ORDERS FROM THE PARTS CATALOG (FOR DISTRIBUTOR USE ONLY)

- A. Typewrite the spare parts which you are going to order on the given Nissan Spare Parts Order Sheet.
- B. At least the Part Numbers and the Quantity must be filled in as accurately as possible. Otherwise our computer may reject your order.
- C. In the case that you can not find the Part No. which you are going to order we shall be very glad to take care of this problem after verifying its availability. Therefore, place your order on another order sheet as a conditional order, which does not include a Ordinary order, telling us precisely the Part Name, the Place where it is attached and the Quantity - if it is a colored thing or material, attach a sample.

### III. HOW TO COMPARE THE CONFIRMATION LIST AND THE PARTS CATALOG (FOR DISTRIBUTOR USE ONLY)

Although all parts contained here are in principle available for supply, if you find some parts shown in the Parts Catalog sorted F/# U on the confirmation list where the availability of your ordered parts are classified by our computer in respect to our stock control system, kindly tell us the Parts Numbers, the Pub. No. of the Parts Catalog (C-034E), and the Page. We shall be glad to inform you of the availability by the revised confirmation list as soon as possible.

### IV. HOW TO ADAPT TO OUR PART NUMBER SYSTEM

In our parts supply system, the Part Number plays a key role. Therefore, you may print only the part numbers and the quantity as long as they do not cause mutual misunderstandings.

For this reason, kindly become familiar with our Part Number System which appears on page 13.

## BRIEF SPECIFICATIONS

MODELS:	SP(L)311-(U)	SR(L)311-(U)
<u>DIMENSIONS AND WEIGHT:</u>		
Overall length	3,955 mm (155.7 in)	3,955 mm (155.7 in)
Overall width	1,495 mm ( 58.9 in)	1,495 mm ( 58.9 in)
Overall height	1,300 mm ( 51.2 in)	1,300 mm ( 51.2 in)
Wheelbase	2,280 mm ( 89.8 in)	2,280 mm ( 89.8 in)
Tread front	1,275 mm ( 50.2 in)	1,275 mm ( 50.2 in)
Tread rear	1,200 mm ( 47.2 in)	1,200 mm ( 47.2 in)
Vehicle weight	900 kg (1,984 lb)	910 kg (2,006 kg)
Seating capacity	2 persons	2 persons
Min. road clearance	145 mm (5.7 in)	145 mm (5.7 in)
<u>PERFORMANCE:</u>		
Acceleration SS400 m (SS1/4 mile)	17.9 sec.	15.4 sec.
Max. speed	170 k. p. h. (106 m. p. h.)	200 k. p. h. (124.3 m. p. h.) with solex carburetors
Max. grade ability (sin $\theta$ )	0.497	0.56
Min. turning circle	9.8 m (32.16 ft)	9.8 m (32.16 ft)

### ENGINE: FOR SP(L)311-(U)

Model R; Gasoline engine, water cooled, four-cycle, O. H. V., four-cylinder in line; Bore 87.2 mm (3.43 in); Stroke 66.8 mm (2.63 in); Displacement 1,595 cc (97.3 cu. in); Max. B. H. P. 96 at 6,000 rpm (SAE); Max. torque 14.3 m-kp (103 ft-lb) at 4,000 rpm (SAE); Compression ratio 9.0 : 1.

### ENGINE: FOR SR(L)311-(U)

Model U20; Gasoline engine, water cooled, four-cycle, O. H. C., four-cylinder in line; Bore 87.2 mm (3.43 in); Stroke 83 mm (3.26 in); Displacement 1,982 cc (120.9 cu. in); Max. B. H. P. 150 at 6,000 rpm (SAE); Max. torque 18.2 m-kp (131.6 ft-lb) at 4,800 rpm (SAE) ( 19.7 m-kp (142.4 ft-lb) with optional solex carburetors ); Compression ratio 9.5 : 1.

#### FUEL SYSTEM:

Variable venturi, side draft carburetors; Mechanical diaphragm pump; Paper element air cleaner; Fuel tank capacity 43 lit (11.3 US gal).

#### LUBRICATION SYSTEM:

Pressure feed with full flow type oil filter; Gear type pump; Oil pan capacity 4.1 li (1.08 US gal).

#### IGNITION SYSTEM:

Coil and distributor with automatic mechanical and vacuum controls.

#### COOLING SYSTEM:

Pressurized radiator; Centrifugal pump; Pellet type thermostat and fan; Radiator capacity 8 lit (2.11 US gal).

#### ELECTRIC SYSTEM:

12 volt, 50 AH battery (40 AH battery for the right hand drive model); 300 watt alternator with regulator; 1.4 HP magnetic shift starter motor (Negative wiring system).

#### CLUTCH:

Single dry disc with diaphragm springs; Diameter 200 mm (7.87 in).

#### TRANSMISSION:

4 forward speeds and 1 reverse; All synchromeshed on forward gears; Gear ratios 1st 3.382, 2nd 2.013, 3rd 1.312, top 1.000 and reverse 3.365; Floor gear shift.

#### REAR AXLE:

Semi floating axle with torque rod; Hypoid bevel gear; Ratio 3.889 (4.111 on order).

#### FRONT SUSPENSION:

Independent coil springs with hydraulic double acting shock absorbers.

#### REAR SUSPENSION:

Semi-elliptic leaf springs; 4 leaves with hydraulic double acting shock absorbers.

#### STEERING:

Left or right hand drive; Cam and lever type gear; Ratio 14.8 : 1; 3-spoke steering wheel; Diameter 400 mm (15.75 in).

#### BRAKES:

Hydraulic tandem master cylinder; Discs at front; Leading and trailing shoes at rear; Front disc diameter 284 mm (11.18 in); Rear drum with aluminum fin, diameter 228.6 mm (9.0 in); Parking brake mechanically operated on rear wheels only.

#### WHEELS AND TIRES:

Steel disc wheels; 5.60S14-4PR tires (Max. allowable speed 175 k. p. h. (109 m. p. h.)).

#### LAMPS:

Two head lamps (sealed beam); Two front parking and turn signal lamps; Two tail and stop lamps; Two rear turn signal lamps; Rear license lamp; Map lamp; Reverse lamp; Reflectors.

#### INSTRUMENTS:

Speedometer with trip recorder; Tachometer with main beam warning light; Fuel gauge; Clock; Ammeter; Oil pressure gauge; Temperature gauge; Turn signal pilot lamps; On instrument panel, windshield washer switch, lighting switch, windshield wiper switch, fog lamp switch and heater switch (optional).

#### FRAME:

Pressed steel box section with  $\times$  member.

#### BODY WORKS:

Two-door, two-seater; Open type with canvas top; All steel body fully upholstered with vinyl leather; Safety glass windshield; Roll up type door glass; Plastic rear window; Adjustable bucket type seats; Seat belt anchorages; Seat belts (3-point type); Glove box on instrument panel; Ash tray, glove box and arm rest in center console; Separate housing beneath instrument panel contains choke knob, cigarette lighter, windshield washer switch, ventilator levers, heater controls (optional) and radio (optional); Windshield washers; Double horns; Inside and outside rear view mirrors; Tonneau cover; Sun visors; Soft top frame cover; Throttle control; Steering lock with ignition key.

#### OPTIONAL EQUIPMENT:

Heater; Radio; Head rest, 4-way flasher; Solex carburetor; Fog lamp.

These specifications are subject to change without notice.

## EXPLANATION OF EACH COLUMN

### I. "S" column (preceding the KEY NO. column.) (DISTRIBUTOR USE ONLY)

\* ..... Signifies that the part No. has been removed. In such a case, use the superseding part Nos. shown below.

# ..... The parts preceded by # mark are conditional order items. Place the order as specified in the Nissan Parts S.O.P..

### II. KEY NO. column

..... A KEY NO. consists of three digits.  
The key numbers will be changed at each revision.

### III. PART NO. column

..... They are as a rule ten digits.  
However, 12-digit Part Nos. may rarely appear.

### IV. PART NAME column

..... PART NAME column contains not only the part name but applied Car No. or Engine No.  
In the case of the annual model change, there are used the abbreviations instead of the actual car nos. For example, "(FROM OCT-67)" stands for 1968 year model and you can see the actual car no. by referring to the "Car No. and Engine No." section in the Introduction. On those pages, together with the pictures of the annual models, the abbreviations and the actual car nos. are described.  
"INC" is the abbreviation of "Including".

### V. Q'TY column

..... The quantity in this column shows the pieces of the part used in the section.  
"AR" is the abbreviation of "As Required".

### VI. SALES UNIT column (DISTRIBUTOR USE ONLY)

..... SALES UNIT column indicates the pieces which are contained in a packing box (i.e. bulk unit).  
Accordingly, if you place the order for a part multiplying its sales unit, you will receive the part in a form easily to be stored into the bin (ex. Sales unit 10 ..... make your order by 10, 20, 30 ..... ).  
The Sales Units which are not filled-in will be advised you through the Revised Sheets.

VII. "ICA" column

"ICA" is the abbreviation of Interchangeability.

..... The only modified parts carry this column.

..... These codes always show the relation between the part itself and the former part shown above.

"Y" is the abbreviation of Yes (i. e. Substitutive)

"N" is the abbreviation of No (i. e. Not substitutive)

"C" is the abbreviation of Conditional (i. e. Substitutive with condition)




In the case of "C", the details of the condition are described in the Fig.

### VIII. SYMBOLS AND ABBREVIATIONS IN THE APPLIED MODEL

The symbols and abbreviations used in the applied model column are as follows. These symbols are taken by each model type, the position of steering wheel, the transmission system, the displacement of the engine, and the destinations.

#### A. Symbols and Abbreviations applied to all models except USA

SYMBOLS	EXPLANATIONS
SP	SP311-U (right hand drive Datsun Sports 1600.)
SPL	SPL311 (left hand drive Datsun Sports 1600.)
SPLU	SPL311-U (left hand drive Datsun Sports 1600 with smog and safety device for ONTARIO in CANADA.)
SR	SR311-U (right hand drive Datsun Sports 2000.)
SRL	SRL311 (left hand drive Datsun Sports 2000.)
SRLU	SRL311-U (left hand drive Datsun Sports 2000 with smog and safety device for ONTARIO in CANADA.)

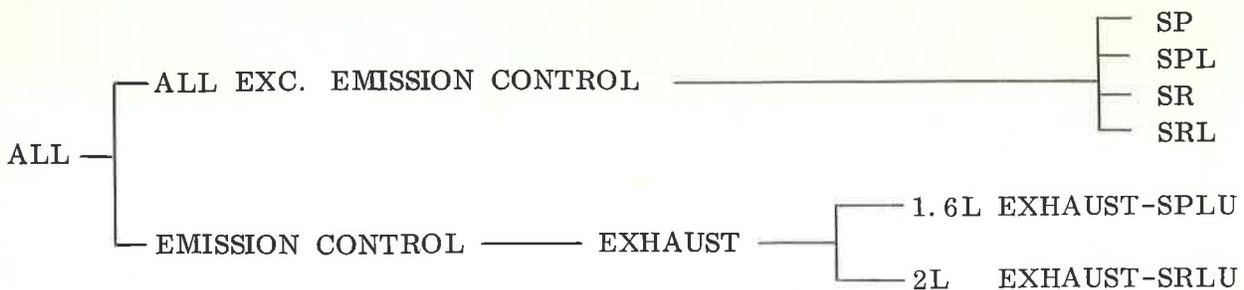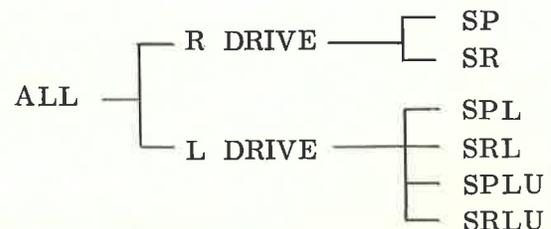
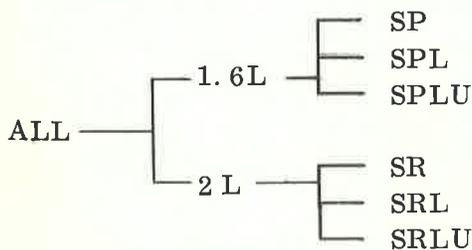


## GROUP SYMBOLS FOR ALL EXC. USA

- ALL ..... The part is used on all DATSUN SPORTS SP-SR311 models.
- R DRIVE ..... The part is used on all right hand drive SP-SR311 models.
- L DRIVE ..... The part is used on all left hand drive SP-SR311 models.
- 1.6L ..... The part is used on SP311 model with 1,595 cc (97.3 cu. in.) engine.
- 2L ..... The part is used on SR311 model with 1,982 cc (120.9 cu. in.) engine.
- EMISSION CONTROL .... The part is used on SP-SR311 model with emission control device for USA and ONTARIO in CANADA.
- EXHAUST ..... The part is used on SP-SR311 model with only exhaust emission control device for ONTARIO in CANADA.
- WARNER ..... The part is used on SP-SR311 model with warner type transmission for CANADA.
- SERVO ..... The part is used on SP-SR311 model with servo synchromesh type transmission.
- OP ..... The part is optionally equipped.
- EXC. .... EXCEPT (ex. 1.6L Exc. SPLU ..... means the parts is used on all Datsun Sports 1600 except SPL311-U)
- ONLY ..... "ONLY" is used together with the destination.  
(ex. AUSTRALIA ONLY means that the part is exclusively used for Australia.)

B. Symbols and Abbreviations for U.S.A. only

SYMBOLS	APPLIED DATE	EXPLANATIONS
SPL SPLU	TO SEP-67 FROM OCT-67	SPL311 (left hand drive Datsun Sports 1600) SPL311-U (Datsun Sports 1600 with smog and safety devices)
SRL SRLU	TO SEP-67 FROM OCT-67	SRL311 (left hand drive Datsun Sports 2000) SRL311-U (Datsun Sports 2000 with smog and safety devices)

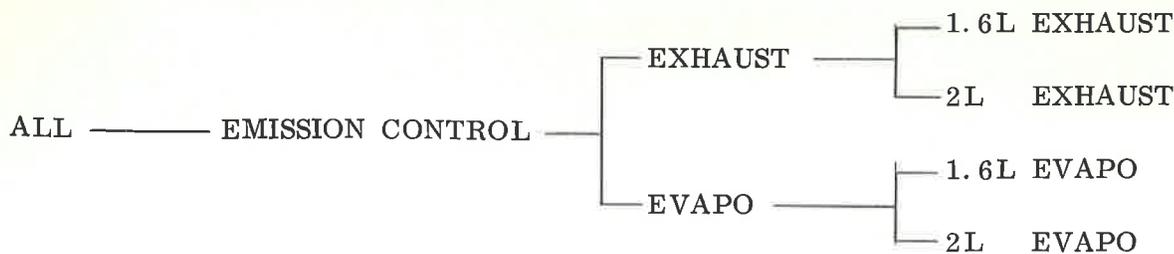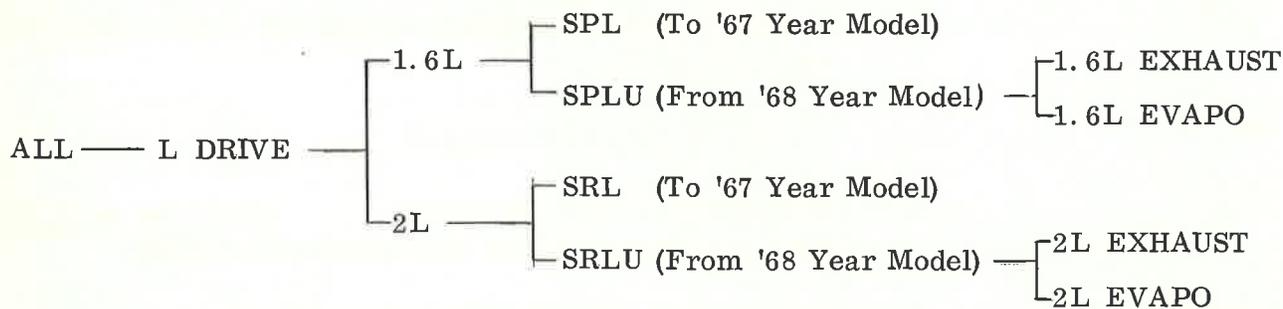

## GROUP SYMBOLS FOR USA ONLY


- ALL ..... The part is used on all DATSUN SPORTS SP-SR311 models.
- L DRIVE ..... The part is used on all left hand drive SP-SR311 models.
- 1.6L ..... The part is used on SP311 model with 1,595 cc (97.3 cu. in.) engine.
- 2L ..... The part is used on SR311 model with 1,982 cc (120.9 cu. in.) engine.
- EMISSION CONTROL ..... The part is used on SP-SR311 model with emission control device for USA.
- EXHAUST ..... The part is used on SP-SR311 model with only exhaust emission control device for USA except CALIFORNIA.
- EVAPO ..... The part is used on SP-SR311 model with both exhaust emission control device and evaporative emission control device for CALIFORNIA in USA.
- WARNER ..... The part is used on SP-SR311 model with warner type transmission for USA.
- SERVO ..... The part is used on SP-SR311 model with servo synchro-mesh type transmission.
- OP ..... The part is optionally equipped.
- EXC. .... EXCEPT (ex. 1.6L Exc. SPLU ..... means the parts is used on all Datsun Sports 1600 except SPL311-U)
- ONLY ..... "ONLY" is used together with the destination.  
(ex. AUSTRALIA ONLY means that the part is exclusively used for Australia.)

## CAR NO. AND ENGINE NO.

To choose the right parts, always refer to the car Nos. or Engine Nos., which are located in the engine room (see below).

TYPE PLATE  
(MODEL NUMBER  
PLATE)

BODY COLOR  
NUMBER

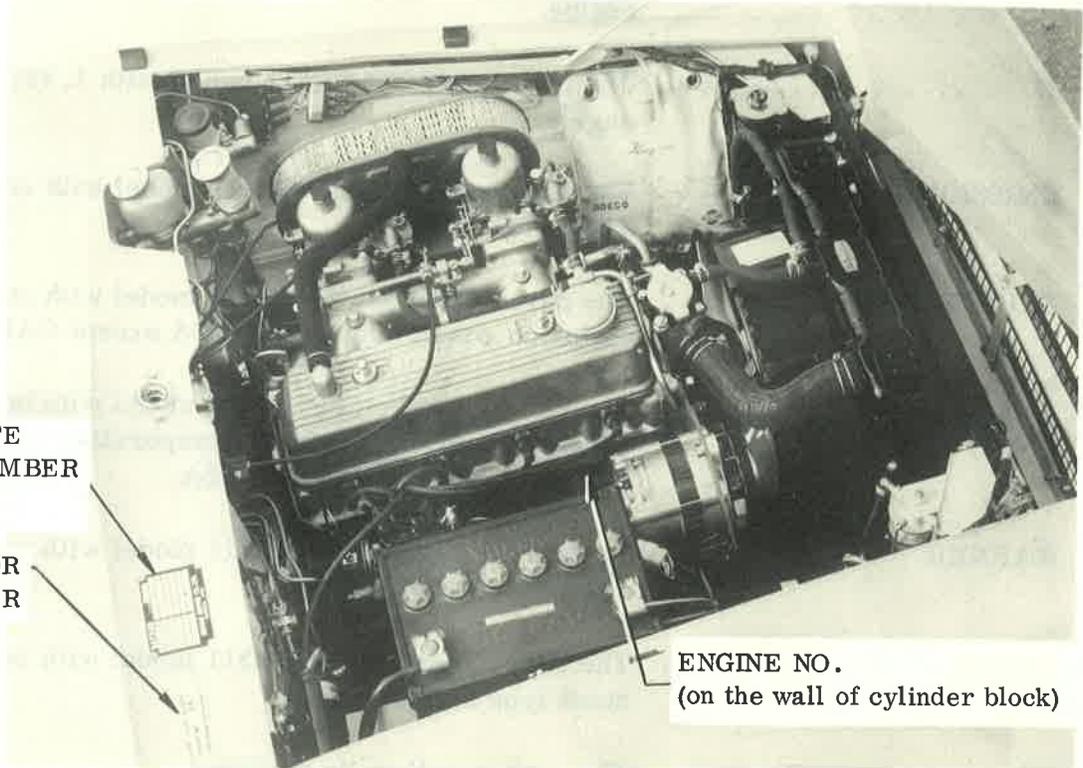

ENGINE NO.  
(on the wall of cylinder block)

<b>DATSUN</b>	
TYPE	SP311
MODEL for YEAR	1967
ENGINE CAPACITY	1595 cc
MAX. HP at RPM	96HP/6000 RPM (SAE)
WHEEL BASE	2280 mm
ENGINE NO.	R-40001
CAR NO.	SP311-02001
<b>NISSAN MOTOR CO., LTD.</b> YOKOHAMA JAPAN	

# DATSUN SPORTS 1600

(1965, 1966, 1967 YEAR MODEL)

FROM C/# SP311-00001 TO C/# SP311-02000 (TO E/# R-40000)  
SPL311-10001 SPL311-11000



## DATSUN SPORTS 1600 (METRIC SYSTEM)

(1967 YEAR LATE MODEL)

FROM C/# SP311-02001 (FROM E/# R-40001) TO C/# SP311-03000 (TO SEP-67)  
SPL311-11001 SPL311-01700



## DATSUN SPORTS 2000

(1967 YEAR LATE MODEL)


FROM C/# SR(L)311-00001 TO C/# SR(L)311-01000 (TO SEP-67)



## DATSUN SPORTS 1600

(1968 YEAR MODEL)

FROM C/# SP311-03001 (FROM OCT-67) TO C/# SP 311-04000 (TO SEP-68)  
SPL311-17001 SPL311-24000

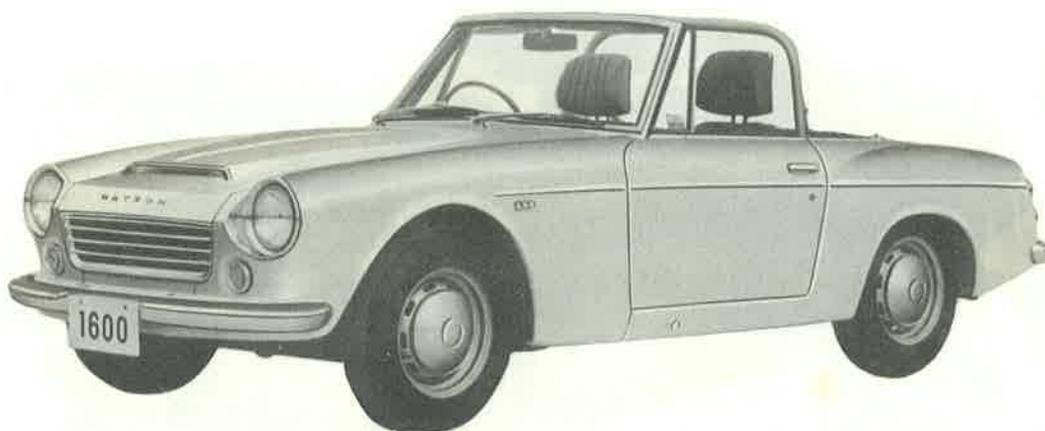

## DATSUN SPORTS 2000

(1968 YEAR MODEL)

FROM C/# SR(L)311-01001 (FROM OCT.-'67) TO C/# SR(L)311-03000 (TO SEP.-'68)



## DATSUN SPORTS 1600

(1969 YEAR MODEL)

FROM C/# SP311-04001 (FROM OCT-68)  
SPL311-24001



## DATSUN SPORTS 2000

(1969 YEAR MODEL)

FROM C/# SR 311-03001 (FROM OCT-68)  
SRL311-07001




# DATSUN SPORTS 1600

(1970 YEAR MODEL)

FROM C/# SP311-06001  
SPL311-27001

(FROM JULY-69)

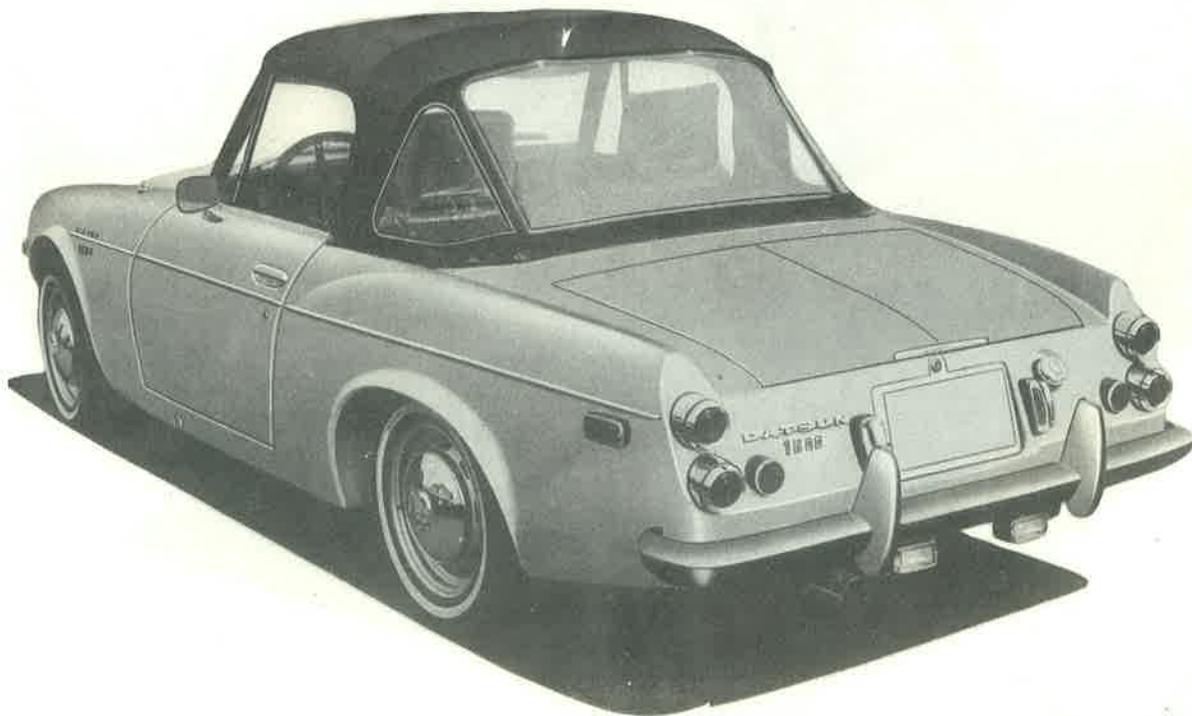

# DATSUN SPORTS 2000

(1970 YEAR MODEL)

FROM C/# SR311-05001  
SRL311-13001

(FROM JULY-69)



## EXPLANATION OF NISSAN PARTS NUMBER SYSTEM

Our part number as a rule consists of ten digits which are made up of four factors as follows. However, in order to standardize small parts such as screws, washers, bolts, nuts and so on, which are often used on our models, we specify them as NES part according to the Nissan Engineering standard (N. E. S.).

These NES parts in principle consist of six digits or eight digits.

Section No.	Character No.	Part Type No.	Distinction No.
O O	O O O	- O O O	O O

1. Section No. (2 digits)

The Section No. consists of 2 digits which indicate the major function of parts.

2. Character No. (3 digits)

The Character No. consists of 3 digits which indicate minor classification in each Section as shown by the Table of Section and Character No. on page 8.

The character No. of 000 or X00 signifies the assembly parts.

3. Part Type No. (3 digits)

The Part Type consists of 3 digits which in principle indicate the applied model as shown by the Table of Part Type on page 12. This means that the part is originally designed for that model. However, it may be used widely over our models. Therefore, it does not always signify the applied model.

4. Distinction No. (2 digits)

The Distinction No. consists of 2 digits which indicate the difference between similar parts as shown below.

Kinds of Distinction	Distinction No.
a. Similarity	00 - 19, 60 - 69
b. Exclusive Service Use	25 - 29, 75 - 79
c. Material	40 - 45, 80 - 85
d. Processing	30 - 39, 90 - 94 50 - 59

Note; The other Distinction Nos. are unset.

a. Similarity

When parts are only slightly changed, the distinction is shown by this No. .  
Similar or colored parts are distinguished by this No. .

For example;

74902-11400	Carpet (red)
74902-11401	Carpet (blue)
74902-11402	Carpet (brown)

b. Exclusive Service Use

Repair kits or sets which are used exclusively for service, are set by this No. .

For example;

46010-10800	Brake Master Cylinder assembly
46010-10825	Repair kit

c. Material

The difference of materials is distinguished by this No. .

d. Processing

For the convenience of our production line process, in the case we can not supply by the original part No. , the sub-assembly is supplied by this No. .

For example;

20132-08750	Clamp sub-assembly
	Components
20132-08700	┌ Clamp-lower
20133-08700	├ Clamp-upper
1-14520-1	└ Bolt
9-15115-1	└ Washer

5. Except those numerical part numbers, there are the part numbers beginning with letters.

They are the part numbers exclusively reserved for service use.

# TABLE OF SECTION AND CHARACTOR NO.

S-Section No.  
C - Character No.

Classifi- cation		Section	Classifi- cation		Section	Classifi- cation		Section
S	C		S	C		S	C	
10		Engine complete section	400	Engine control	26		Electric section No. 5	
	000	Engine complete				000	} Lamps No. 1 (Outside)	
	100	Engine ass'y	19	Decomp & governor section		100		
11		Engine section No. 1	000	Decomp parts		200	Lamps No. 2 (Inside)	
	000	Cylinder parts	100	} Governor parts		300	Horn	
	100	Oil pan parts	200			27		Room heater & radio
	200	Engine support, front	300				000	Room heater
	300	Engine support, rear				100	Control box	
	400	Engine stabilizer	20	Exhaust section		300	Radio & clock	
			000	Exhaust tube				
12		Engine section No. 2	100	Muffler	30		Clutch group	
	000	Piston, pin & ring	200	Tail tube		000	Clutch with housing	
	100	Connecting rod				100	Clutch disc	
	200	Crank shaft	21	Cooling system		200	Clutch cover & pressure plate	
	300	Flywheel	000	Water pump		400	Bell housing	
			200	Thermostat		500	Clutch with drawal	
13		Camshaft & valve section	300	Oil cooler		600	Clutch control	
	000	Camshaft & timing gear	400	Radiator				
	200	Valve parts	500	Hose & mounting parts	32		Transmission group	
						000	Transmission ass'y	
14		Manifold section	22	Electric section No. 1		100	Case, extension covers	
	000	Manifold parts	100	} Distributor		200	3-shaft gear train	
	300	Ejector ass'y	200				600	Synchronizer parts
			300	Vacuum control		700	Speed-drive parts	
15		Lubrication section	400	Plug-spark & cords		800	Shift-control parts	
	000	Oil pump				900	Fork & levers	
	100	Oil tube	23	Electric section No. 2				
	200	Oil filter	100	} Generator	33		Auxiliary gear box section	
			200				100	} Transfer parts
16		Fuel section No. 1	300	} Starter motor		200	Power take off gear	
	000	Carburetor	400					300
	400	Gasoline strainer	500	Regulator				
	500	Air cleaner						
	600	Fuel supply system	24	Electric section No. 3				
	700	} Injection pump	000	Wiring	34		Transmission control	
	800			100	} Cable parts		100	Control device
			200				400	Linkage
17		Fuel section No. 2	400	} Battery		500	Linkage parts	
	000	Fuel pump	500					
	200	Fuel tank						
	400	Fuel tank mounting	25	Electric section No. 4	36		Auxiliary brake section	
	500	Fuel piping	000	Meters		100	Drum & consermings	
			100	Meter parts		300	Hand brake lever	
			200	Switches		400	Hand brake cable	
18		E. gine control section	300	Switch & parts		500	Linkage on axle	
	000	Accelerator pedal	400	Fuse & holder parts		600	Linkage parts	
	100	Accelerator link						

Classifi- cation		Section	Classifi- cation		Section	Classifi- cation		Section		
S	C		S	C		S	C			
37		Propeller shaft group	48		Steering section	63	800	Radiator shell fitting		
	000	Propeller shaft mounting		000	Steering ass'y				Fender section	
	100	Joint & yokes		100	Roller shaft			100	Front fender	
	200	Propeller shaft primary		200	Steering cover			800	Fender fitting	
	300	Secondary propeller shaft		300	Steering mounting parts		64		Hood ledge section	
	500	Center bearing & hanger		400	Steering wheel				100	Hood ledge
38		Final drive unit	50		Frame section	65	800	Hood ledge fitting		
	100	Drive pinion & gear								
	200	Companion flange		100	} Frame parts		65		Hood section	
	300	Gear carrier		200						100
	400	Differential gear		51			Cross member section		200	
	500	Front drive parts					000	Cross member parts		300
40		Front axle section	54		Hook parts	66	400	} Hood hinge		
	000	Front axle							500	
	200	Hub & drum			Front suspension section			600	} Hood lock	
	300	Road wheel		000	Front spring			700		
	500	Front axle parts		200	Spring mounting parts			800	Hood fitting	
41		Front brake section	55		Cross member-suspension	66		Cowl section		
	000	Front brake		400	Ass'y suspension			100	Front pillar	
	100	Wheel cylinder						300	Cowl top	
43		Rear axle section	56		Rear suspension section	67	400	Cowl side		
	000	Rear axle		000	Rear spring			500	Ventilator	
	100	Rear axle parts		200	Spring mounting parts			800	Cowl fitting	
	200	Hub & drum						900	Cowl trimming	
	300	Road wheel			Shock absorber section		67		Dash section	
44		Rear brake section	100	Front shock absorber		100		} Sash		
	000	Rear brake	200	Rear shock absorber & stabilizer		200				
	100	Wheel cylinder	57		Spare tire section		300	Dash lower		
46		Master cylinder, pedal & piping			Spare tire carrier		800	Dash fitting		
	000	Piping & cylinder ass'y	60			900	Dash trimming			
	100	Master cylinder parts		Body complete white body	68		Instrument section			
	200	Brake piping	000	Body front & body main			100	} Instrument		
	300	Brake tube parts	100	Cab complete		200				
	400	Pedal parts	61		Body front group		300	Cluster lid		
	500	Dust seal & mounting parts			000	Front body ass'y		400	Cluster lid	
	47		Power brake section	62		Radiator shell & bumper section	72	500	Glove pocket & lid	
100		Vacuum tank						600	Instrument fitting	
200		} Hydraulic power cylinder	100		} Radiator shell			900	Instrument trimming	
300						200				
400		Vacuum tube	300		} Radiator grille				Windshield section	
500		Reservoirs mount parts	400						100	W/S outer & inner
			500		Radiator core support			600	Glass & weatherstrip	
			600		Bumper apron			800	W/S fitting	
		650	Front bumper							

Classification		Section	Classification		Section	Classification		Section
S	C		S	C		S	C	
73		Roof section		900	Front door trimming		300	Side board & side gate
	100	Roof panel					400	Rear gate
	200	Roof rail	82		Rear door section No. 1		500	} Rear body floor
	800	Roof fitting		100	Rear door inner, outer		600	
	900	Roof trimming		200	Ventilator, sash		650	Wheel housing
74		Floor section No. 1		300	Door window		700	Rear body sill
	100	Toe riser		400	Hinge & check link		800	Rear body fitting
	200	Toe board		500	} Lock, remote control & handle		900	Rear body trimming
	300	} Front floor		600				
	400				700	Window regulator & handle	95	
	500	Rear floor		800	Rear door fitting		100	Body mounting
	600	Under sill		900	Rear door trimming	96		E. T. C. section No. 1
	700	Seal riser					100	Step & concernings
	750	Tunnel	84		Trunk section		200	Licence plate bracket
	800	Floor member		100	Trunk floor		300	Back mirror
	900	Floor trimming		200	Trunk side		400	Sun visor
76		Body side section No. 1		300	Trunk lid		500	Ash tray
	100	} Body side frame		400	} Trunk lid lock, handle & support		600	Fire extinguish
	200					500		700
	300	Body side panel		600			800	Package tray
	400	Body side sill		800	Trunk fitting		900	Body name & caution plate
	500	Center pillar		900	Trunk trimming			
	600	Rear pillar	85		Rear bumper section	97		E. T. C. section No. 2
	700	Rear wheel house		100	Rear bumper apron		100	Reflector
	800	Body side fitting		200	Rear bumper bracket		200	Plate meter
	900	Body side trimming		800	Rear bumper fitting			
78		Rear fender section				99		Car complete & tool section
	100	Rear fender	86		Front seat section No. 1		000	Car complete
				100	Seat cushion frame		100	Chassis complete
				200	Seat back frame		500	Tool & setting parts
79		Back panel section		300	} Seat cushion & trim			
	100	} Back panel		400				
	200				500	Seat adjusting		
	300	Rear corner		600	Seat back & trim			
	400	Rear seat back panel		700	Center arm rest & trim			
	700	Rear window		800	Seat fitting			
	800	Back panel fitting						
	900	Back panel trimming	88		Rear seat section No. 1			
80		Front door section No. 1		100	Seat cushion frame			
	100	Front door inner, outer		200	Seat back frame			
	200	Ventilator, sash		300	Seat cushion & trim			
	300	Door window		500	Seat adjusting			
	400	Hinge and check link		600	Seat back & trim			
	500	} Lock, remote control & handle		700	Center arm rest & trim			
	600				800	Seat fitting		
	700	Window regulator & handle	93		Rear body section No. 1			
	800	Front door fitting		100	Guard frame			
				200	Header board			

## TABLE OF PART TYPE

Small Type Part							
Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
113	001	UD223	077	PL410-UT(K)('64,5)	124	P411-UTK('65,5)	172
L113	002	UL223	078	PL410-UT(K)('64,5)	125	PL411-UTK('65,5)	173
123	003	311	080	A220	126	WP411('65,5)	174
L123	005	P311	081	VA220	127	WPL411-U('65,5)	175
114	008	WP311-U	082	KA220	128	P411-N('65,5)	176
124	009	PL311-U	083	SP310('65)	129	DP411-L('65,5)	178
210	013	WPL311-U	084	SPL310('65)	130	P411-R('65,5)	179
L210	014	A120	085	A220-H	131	B10('66)	180
220	015	SPL213	086	P410('65)	132	VB10('66)	181
L220	016	320	087	PL410('65)	133	B10-D('66)	182
G220	026	L320	088	WP410('65)	134	VB10-D('66)	183
211	027	VA120	089	WPL410('65)	135	P411(N)('66,5)	184
221	028	U320	090	DP410('65)	136	DP411('66,5)	185
G221	029	V320	091	DP410-L(N)('65)	137	DP411-L('66,5)	186
L211	030	UL320-U	092	P410-U('65)	138	PL411-U(T)('66,5)	187
L221	031	VL320-U	093	PL410-U('65)	139	R411(UTK)('66,5)	188
A20	032	320	094	DP410-M('65)	140	RL411-UTK('66,5)	189
115	033	P312	095	DP410-(L)N('65)	141	P411-P('66,5)	190
125	034	PL312	096	DP410-LM(N)('65)	142	P411-U('66,5)	191
LG220	035	WP312	097	P410-UT(K)('65)	143	P411-R('66,5)	192
U221	036	WPL312	098	PL410-UT(K)('65)	144	DP411-R('66,5)	193
V221	037	A121	099	P410-P('65)	145	DP411-MTK('66,5)	194
LG221	039	AL121	100	SP311U('68)	146	PL411-UTK('66,5)	195
P211	040	N320	101	SPL311('65)	147	WP411('66,5)	196
310	041	NL320-U	103	520(U)('65)	148	VP411('66,5)	197
L310	042	SP310	104	L520U(T)('65)	149	WPL411U('66,5)	198
U222	043	SPL310	105	U520(U)('65)	150	A221('66,5)	199
P310	044	P410('64,5)	106	UL520U('65)	151	GA221('66,5)	200
WPL310	045	410('64,5)	107	V520(U)('65)	152	DP411-A('66,5)	202
VG222	046	PL410('64,5)	108	VL520U('65)	153	VB10-SA('67,5)	203
SPL212	047	WP410	109	B20('68)	154	G520S('67)	204
VG221	049	WPL410	110	LB20ST('68)	155	520S('67)	205
222	050	P410R	111	DP410-R(TK)('65)	156	L520('67)	206
G222	051	A122	112	R411MTK('66,5)	158	U520S('67)	207
LG222	052	VA122	113	R411UTK('66,5)	159	V520S('67)	208
L222	053	DP410	114	R411UTK('66,5)	160	B10(S)(T)U('66)	209
126	054	DP410-L(M)('64,5)	115	R411('65)	161	510-S('68)	210
PG222	065	P410-U(N)('64,5)	116	CSP311('65)	163	510-(S)UT('68)	211
PLG222	066	P410-N('64,5)	117	P411('65,5)	165	510SA('68)	212
WP310	071	DP410-M(N)('64,5)	118	DP411('65,5)	166	510-(S)U('68)	213
223	072	DP410-N('64,5)	119	DP411-MTK('65,5)	167	L510S('68)	214
G223	073	DP410-LN('64,5)	120	P411-P('65,5)	168	L510-T('68)	215
LG223	074	PL410-N('64,5)	121	P411-UT('65,5)	169	510('68)	216
VG223	075	SP310	122	PL411-U('65,5)	170	510-(S)T('68)	217
VLG223	076	SPL310-U	123	PL411-UT('65,5)	171	510-A('68)	218

Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
P510('68)	219	B10(S)(A)(T)F('67,5)	264	R510(S)T('69)	A15	HGC10T('70)	A71
P510-TK('68)	220	K510(T)('68)	265	WP510U('69)	A16	PGC10T('70)	A72
510-P('68)	221	KP510T('69)	266	WP510(U)A('69)	A17	(L)C10SU(M)(T)('70)	A73
R510-S('68)	222	KP510TK('69)	267	V510S('69)	A18	SP,SR311(H)('70)	A74
R510('68)	223	P510UTK('68)	268	V(P)510('69)	A19	SP,SR311U('70)	A75
R510STK('68)	224	PL510TK('68)	269	(P)510U(A)('69)	A20	SPL311(U)('70)	A77
W510('68)	225	L510UTK('68)	271	P510(S)UT('69)	A21	SRL311(U)('70)	A78
W(P)510U('68)	226	L510UX('68,'70)	272	(P)L510S('69)	A22	KP510AT('70)	A79
WP510-UT('68)	227	VPL510UTX('68,'70)	273	(P)L510('69)	A23	KPC10T('70)	A80
WL510('68)	228	(W)P411U(T)('67)	274	(P)L510T(K)('69)	A24	KPC10AT('70)	A81
V510('68)	229	(W)PL411U(T)('67)	275	PL510A('69)	A25	KGC10T('70)	A82
PL510('68)	230	B10('68)	277	PL510UT('69)	A26	KGC10AT('70)	A83
PL510UT('68)	231	VB10('68)	278	PL510UA('69)	A27	HGC10AT('70)	A84
PL510UA('68)	232	520(A)(S)(U)('68)	280	WP510UT('69)	A28	521U('69,'70)	B01
WPL(L)510-U('68)	233	G520S(A)('68)	281	WPL510T('69)	A29	G521S(A)('69,'70)	B02
WPL510-UT('68)	234	L520(A)(E)(T)('68)	282	WPL510U(T)(N)(A)('69)	A30	L521('69,'70)	B03
WPL510UA('68)	235	U(L)520(U)('68)	283	RPL510SUT('69)	A31	L521TU(H)('69,'70)	B04
L510A('68)	236	V(L)520(U)('68)	284	SP,SR311('69)	A32	U(L)521U('69,'70)	B05
P510U('68)	237	C10M('68)	285	SPL311(U)SRL311(U)('69)	A33	V(L)521U('69,'70)	B06
P510UA('68)	238	C10U('68)	286	P510P('69)	A34	PL521TU(H)('69,'70)	B20
R510T('68)	239	C10MA('68)	287	P510('69)	A35	NL521T('69,'70)	B29
P411('67)	240	C10Y('68)	288	P510A('69)	A36	TB20S('69)	G01
DP411('67)	241	C10P('68)	289	NL510(T)X('69,'70)	A38	LTB20ST(U)	G02
DP411L('67)	242	LC10('68)	290	R510A('69)	A40	B10('69)	H01
P411R('67)	243	VC10M('68)	291	P510A('69)	A41	B10F('69)	H02
DP411R('67)	244	VC10S('68)	292	(V)(W)P510A('69)	A42	KB10('69)	H03
RL411-UAK('67)	245	WC10MU('68)	293	WNL510TX('69,'70)	A43	VB10('69)	H04
WRL411UTK('67)	246	WLC10M('68)	294	510('69,5)	A44	(L)B10-(U)('69)	H05
WRL411UAK('67)	247	QC10U('68)	295	SP(L)311(U)('69,5)	A45	(L)B10-F(U)('69)	H06
B10(S)(A)F	248	C10MUT('68)	296	(P)510(T)U('70)	A46	V(L)B10-(U)('69)	H07
(V)LB10(T)U('67)	249	LC10MT('68)	297	R510(S)(T)('70)	A47		
PL411UX	250	W(L)C10MU(T)('68)	298	(P)510(P)(Y)('70)	A48		
(L)B10-S(U)('68)	251	LB10('67)	657	(P)510S(T)U('70)	A49		
L520UX	252	ALB10('67)	658	(W)P(L)510(S)AU('70)	A50		
PL411UTK	253	QB10('67)	659	P510T(K)(U)('70)	A51		
WPL411UTK	254	GC10T('69)	A01	KP510T(K)('70)	A52		
SR311U('67,5)	255	PGC10T('69)	A02	(V)(W)P510(S)(T)U('70)	A53		
SRL311(U)('67,5)	256	(P)510SU('69)	A06	(P)L510(S)(T)('70)	A54		
KB10S('68)	257	510P,510Y('69)	A07	(R)PL510(S)TU('70)	A55		
KB10(A)('68)	258	510('69)	A08	PL510AU('70)	A56		
SR311U('68)	259	510(S)T('69)	A09	(V)(W)P510A('70)	A57		
SRL311(U)('68)	260	R510A('69)	A10	WPL510(T)('70)	A58		
D510-T('68)	261	P510UTK('69)	A11	WPL510(A)(T)U('70)	A59		
V510-S('68)	262	R510S('69)	A13	PL510T(K)('70)	A60		
B10ST('67,5)	263	R510('69)	A14	VC10(S)(M)('70)	A70		

Medium Type Part

Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
B130	300	TG30	345	WP31(N)('64)	392	G31('65)	713
B40	301	LG140	346	VC141	393	G31S('65)	714
LB40	302	L30	347	VC141N	394	31('65)	715
UB40	303	KCL140	348	KC141	395	VP31K('65)	716
VB40	304	WP30	349	GC141	396	WP31('65)	717
C40	305	40	350	KLC141	397	TH31('64)	718
DC40	306	L40	351	GLC141	398	TH31('65)	719
VC40	307	C141(H)	352	DQC141	399	LH31-U('65)	720
B131	308	GC140	355	GC141	621	LG31-U('65)	721
B41	309	30U	356	GQC141	629	LG31S-U('65)	722
VB41	310	DP30	357	HC141	636	VP31-UK('65)	723
NB131	311	LC141(E)	358	QHC141	637	WPL31-U('65)	724
DB131	312	GLC140	359	Y130('67)	667	TLH31-U('65)	725
B42	313	F40	360	PHC240	669	H31T('65)	726
C42	314	FR40	361	A30S('70)	680	G31SY-P('65)	727
MD42	315	VC141	362	A30Y('70)	681	31Y-P('65)	729
VC42	316	V(N)C141(N)	363	PA30(M)('70)	682	P130('66)	730
B132	317	KC141	364	PA30(M)A('70)	683	P130S('66)	731
DB132	318	GC141	365	VA30S('70)	684	VP130('66)	732
KC42	319	VP30(U)	366	VPA30('70)	685	WP130('66)	733
VB132	320	H31	367	PLA30U('70)	686	H130('66)	734
FPB42	321	G31	368	WP(L)A30U('70)	687	Q130('66)	735
30	322	P31(T)('63)	369	(W)HA30U('70)	688	130S('66)	736
C43	323	31(T)('63)	370	(W)HA30UA('70)	689	H P130-A('66)	737
VC43	324	VP31	371	H130('68)	690	130P('66)	738
FRB42	325	WP31	372	P130('68)	691	130SP('66)	739
D30	326	GLC141	373	130('68)	692	41('66)	740
V30	327	KLC141	374	HL130(A)('68)	693	C142('66)	741
B133	328	QC141	375	PL130(A)('68)	694	F41('66)	742
DB133	329	GLC140	376	(W)(V)L130('68)	695	L41('66)	743
KC43	330	Q40	377	V(P)(L)130('68)	696	LC142('66)	744
B140	331	PL31	378	WP(L)130(A)('68)	697	N41('66)	745
NB140	332	H31-U	379	LH31U(N)('64)	700	LN41('66)	746
C140	333	G31-U	380	LG31U(N)('64)	701	41('67)	747
VNC43	334	H31-J	381	LG31SU(N)('64)	702	L41('67)	748
L30	335	H31-M	382	L31UK('64)	703	Q41('67)	749
VC140	336	G31S	383	VPL31UK('64)	704	PL130('66)	750
VHC140	337	V40	384	WPL31UK('64)	705	PL130S('66)	751
FRB140	338	QLC141	385	H31-M('64)	706	VPL130('66)	752
FB140	339	QL40	386	H31-JD('64)	707	WPL130('66)	753
FB140	340	H31('64)	387	H31-U('64)	708	HL130('66)	754
CB140	341	G31(N)('64)	388	LG31-UK('64)	709	H130	755
G30	342	G31(N)('64)	389	40T	710	QL130('67,5)	756
LB140	343	31('64)	390	Q40T	711	PL130SA('66)	757
KC140	344	VP31-K('64)	391	H31('65)	712	FP41('67)	759

Large Type Part

Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
C240(A),(E),(H)('67)	760	LGT65(A),(E)('68)	855	GL130(Q),(A)(QA)('70)	E33	580	500
LC240(A),(E),(H)('67)	761	LGT65(A)(E)('68)	856	(Q)130(SU)(S)	E34	N580	501
QC240	762	KLT65UD('68)	858	(SA)(U)(P)('70)		S580	502
QLC240(A)('67)	763	QT65A('68)	860	(V),(UH),(WH)130(A)	E35	L580	503
HC240('68)	764	QGT65(A)(E)('68)	861	(U),(UA)('70)		F580	504
PHC240('67)	765	T44(N)(T)U(A)('68)	864	HL130(V),(VA),(Q)('70)	E36	U580	505
PHQ(V)C240('67)	766	LT44(N)(T)(A)('68)	865	(Q)L130(W)(S)('70)	E37	UL580	506
K(L)VC240('67)	767	QT44NU(A)(E)('68)	866	(V)(W)HL130(A)('70)	E38	M580	507
D(Q)C240('67)	768	NT44(A)('68)	867	G296UX	E39	ML580	508
K(Q)C240('67)	769	LNT44(E)('68)	868	C30(S)A('69,5)	E40	590	509
G(Q)C240	770	(Q)(L)T65HU('68)	869	S030('70)	E41	G590	510
G(H)(Q)LC240('67)	771	KQT65('68)	870	PS030('70)	E42	DG590	511
GH(Q)C240('67)	772	DT65('68)	871	HS030U('70)	E43	L590	512
V130('67,5)	774	ET65	872	HLS030('70)	E44	LG590	513
H130A('67,5)	775	T44M('68)	873	HS030UA('70)	E45	U590	514
HL130A('67,5)	776	QL130('69)	D19	HLS030U('70)	E46	DUG590	515
Y130('67,5)	777	H130(A)('69)	E01	HLS030(U)A('70)	E47	UG590	516
Y130('67,5)	778	P130(A)('69)	E02	C30('69,5)	E48	M590	517
HL130('67)	779	P130S(A)('69)	E03	130('69,5)	E49	MG590	518
P130('67)	780	V(P)130(A)('69)	E04	A30S('70)	E50	DMG590	519
H130	781	WP130(A)('69)	E05	VA30('70)	E51	ML590	520
PL130	783	H130V(A)('69)	E06	HA30(N),(M)('70)	E52	MLG590	521
C30-SU('68)	785	130S(A)('69)	E07	HA30A(N)(M)('70)	E53	UL590	522
C30-(S)UT('68)	786	130P('69)	E08	HA30Q(M)('70)	E54	LS580	523
C30-(S)UA('68)	787	Q130('69)	E09	HA30Q(M)A('70)	E55	E590	524
C30-U('68)	788	Y130(E)('69)	E10	VHA30('70)	E56	UR590	525
LC30-(S)('68)	789	PL130(A)('69)	E12	H(L)A30(M),(Q)('70)	E57	581	526
LC30-(S)T('68)	790	(P)L130S(A)('69)	E13	WH(L)A30('70)	E58	L581	527
LC30(U)A('68)	791	V(P)L130('69)	E14	C30S(A),(T)U('70)	E60	S581	528
DC30T('68)	792	WPL130(A)('69)	E15	C30(A),(T)U('70)	E61	M581	529
C240W('68)	821	G130(SA)(VA)('69)	E17	C30AT('70)	E62	U581	530
HC(L)240W(E),(X),(A)	822	GL130(S)(A)(SA)(VA)('69)	E18	LC30S(A),(T)('70)	E63	UL581	531
A(Q)(L)C240W('68)	823	QL130('69)	E19	LC30(A),(T)('70)	E64	M581	532
G(H)(L)C240W('68)	824	C30S(U)('69)	E20	LC30(A),(T)U('70)	E65	ML581	533
(Q)LC240W(E)(X)(A)('68)	825	C30(S)(U)T('69)	E21			LS581	534
T65(A)(E)('69)	826	C30(S),(A),(U),(T)('69)	E22			591	535
GT65A('69)	827	C30U('69)	E23			L591	536
KT65D('69)	828	LC30(S)('69)	E25			G591	537
QT65(A),(E)('69)	831	LC30S(T)('69)	E26			GL591	538
QGT65A('69)	832	LC30(S)A('69)	E27			U591	539
KQT65D('69)	833	LC30U(A),(T)('69)	E28			UG591	540
DT65('69)	838	H130(SA)(VA)	E30			UL591	541
T65U(A)('68)	850	(QA)(VU)(VUA)				UGL591	542
GT65UA('68)	851	(S),(V),(O),(QU)('70)				M591	543
KT65UD('68)	853	G130(U)(QU)(QUA)('70)	E31			ML591	544
		H130(A),(B)('70)	E32				

Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
MG591	545	MLE592	592	D681('66,5)	801	L780N(A),(E)('69,5)	C18
MGL591	546	ULG582	594	N681('66,5)	802	UL780N(A),(E)('69,5)	C19
E591	548	(N)UR690	595	UN681('66,5)	803	LS780(A),(E)('69,5)	C20
UR591	549	E690	596	G681('66,5)	804	FL780E('69,5)	C21
NUR591	550	M(L)E690	597	UG681('66,5)	805	FLS780E('69,5)	C22
582	551	MG690	598	S681('66,5)	806	DL780('69,5)	C23
L582	552	LG680	599	D681('66,5)	807	DUL780A('69,5)	C24
U582	553	FL(S)680	600	DU681('66,5)	808	DU780A('69,5)	C25
M582	554	YLG680	601	F681('66,5)	809	UL780YA('69,5)	C26
592	555	LE690	602	FS681('66,5)	810	ULG780YE('69,5)	C27
G592	556	MLG690	603	UG681TE('66,5)	811	UEG780A('69,5)	C28
U592	557	ULR680	604	LN681A('66,5)	812	E780D('69,5)	C29
S592	558	MLEG690	605	ULN681('66,5)	813	LE780D('69,5)	C30
M592	559	UL690	606	LG681('66,5)	814	ULEG780D('69,5)	C35
UG592	560	ULG690	607	ULG681('66,5)	815	TU780HA('69,5)	C37
MG592	561	UE680	608	LS681('66,5)	816	DU780HA('69,5)	C38
FS580	562	UG680	609	DL681('66,5)	817	UE780A('69,5)	C39
FL580,UG680	563	50	610	DUL681('66,5)	818	ULEG780A('69,5)	C41
FLS581,FS680	564	50M	611	FL681('66,5)	819	150('69)	F01
DG580	565	50('64)	612	FLS681('66,5)	820	H150(D)U('69)	F02
ULG680	567	50M('64)	613	150(A)('68)	830	HL150(D)('69)	F03
ML582	568	50J('64)	614	H150(S)U('68)	840	L150A('69)	F04
UL582	569	QC80(A)('66)	615	LH150(S)('68)	841	150('69,5)	F05
UL592	570	Q(S)C80-N(A)('66)	616	T641('69)	B11	150(A)('70)	F06
F582	571	C80(A)('66)	617	LT641('69)	B12	L150(A)('70)	F07
LF582	572	(S)C80-N(A)('66)	618	T641G('69)	B13	H150(D)U('70)	F08
F581	573	QL(S)C80('66)	619	VT641U('69)	B14	H150(D)('70)	F09
E592	574	L(S)C80('66)	620	YT641('69)	B15		
ME592	575	50('65)	622	VT641B('69)	B26		
L592	576	T50JD('65)	624	BT641('69)	B27		
LG592	577	L50	627	T641M('69)	B28		
LS582	578	T50('64)	628	780(A),(E)('69,5)	C04		
GU582	579	T50(U)('65)	630	U780(A),(E)('69,5)	C05		
680	580	TL50U('65)	631	G780(A),(E)('69,5)	C06		
S680	581	L50U('65)	632	UG780(A),(E)('69,5)	C07		
M680	582	ULE690	635	780N(A),(E)('69,5)	C08		
U(G)680	583	ULEG690	638	U780N(A),(E)('69,5)	C09		
F680	584	QSC80(A)('66)	645	S780(A),(E)('69,5)	C10		
L680	585	SC80(A)('66)	646	F780E('69,5)	C11		
ML680	586	DQSC80-A('66)	647	FS780E('69,5)	C12		
UL680	587	DSC80-A('66)	648	D780A('69,5)	C13		
U590	588	H150U('66)	650	L780A('69,5)	C14		
UG690	589	LH150('66)	651	UL780A('69,5)	C15		
W582	590	150-A('66)	660	LG780(A),(E)('69,5)	C16		
(T)G680	591	681('66,5)	800	ULG780(A),(E)('69,5)	C17		

Special Type Part							
Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type	Vehicle Type	Part Type
4W61	400	G60	445	PPU	494		
B4W61	401	LG60	446	HPU	495		
F4W61	402	D4W73(P)(N)('70)	447	GPU	496		
L4W61	403	FG60H	448	GPU	497		
R4W61	404	F4W73('70)	449	GPU	498		
2W71	405	FL4W73('70)	450	PPU	499		
4W71	406	K60	451	(D)60N('67)	641		
C4W71	407	KL60	452	K60('67)	642		
F4W71	408	WG60	453	60W('67)	643		
R4W71	409	WLG60	454	G60H(A)W('67)	644		
4W62	410	VG60	455	L60(B)('67)	652		
B4W61	411	VLG60	456	LG60(B)('67)	653		
F4W62	412	D60	457	LG60H(B)('67)	654		
R4W62	413	N60	458	VLG60('67)	655		
4W72	414	DN60	459	KL60('67)	656		
C4W72	415	FLG60H	460	FD006,7	900		
R4W72	416	DL60	461	60U('67,5)	C42		
4W63	417	N60('68)	462	G60U('67,5)	C43		
4W73	418	WG60('68)	463	G60HU('67,5)	C44		
2W65	419	WLG60('68)	464	VG60U('67,5)	C45		
R2W65	420	60(B)('68)	465	FG60HU('67,5)	C46		
4W65	421	G60(B)('68)	466	4W73U('70)	C47		
F4W65	422	G60H(A),(B)('68)	467	F4W73U('70)	C48		
G4W65	423	FG60H('68)	468	FH60('67,5)	C49		
L4W65	424	VG60('68)	469	FH60U('67,5)	C50		
R4W65	425	FG1	470	VH60('67,5)	C51		
D4W61	426	FG135B,FG1B	472	VH60U('67,5)	C52		
2W61	427	FC135B,FG1C	474				
R4W61	428	FG003,1	475				
R4W71	429	CFG003U('68)	476				
4W74	430	BPU	478				
4W75	431	FG2	480				
K4W72	432	FG2A	481				
4W66	433	FG005,4	482				
F4W72	434	D11PU	483				
MR4W72	435	D11PU	484				
L4W72	436	DPU	485				
L4W73(B)('70)	437	DPUM	486				
L4W66	438	EPU	487				
4W73(B)('70)	439	CPU	488				
60	440	CPU	489				
F(L)(G)4W66	441	FG007,6	490				
L60	442	H30PU	491				
G60H	443	H20PU	492				
LG60H	444	RPU	493				

# CONVERSION LIST

## Length

	m. metre	c. metre	metre	k. metre	inch	foot	yard	mile	s. mile
m. metre	1	0.10000	0.00100		0.03937	0.00328	0.00109		
c. metre	10.0000	1	0.01000	0.00001	0.39371	0.03281	0.01094		
metre	1000.00	100.000	1	0.00100	39.3707	3.28089	1.09363	0.00062	0.00054
k. metre		100000	1000.00	1	39370.7	3280.89	1093.63	0.62138	0.53962
inch	25.3995	2.53995	0.02540	0.00003	1	0.08333	0.02778	0.00002	0.00001
foot	304.794	30.4794	0.30479	0.00030	12.0000	1	0.33333	0.00019	0.00016
yard	914.383	91.4383	0.91438	0.00091	36.0000	3.00000	1	0.00057	0.00049
mile		160931	1609.31	1.60931	63360.0	5280.00	1760.00	1	0.86842
s. mile		185315	1853.15	1.85315	72960.0	6080.00	2026.66	1.15151	1

## Weight

	gram	k. gram	ton	s. ton	l. ton	ounce	pound
gram	1	0.00100				0.03527	0.00220
k. gram	1000.00	1	0.00100	0.00110	0.00098	35.2739	2.20462
ton		1000.00	1	1.10230	0.98421	35273.9	2204.62
s. ton	907185	907.185	0.90719	1	0.89286	32000.0	2000.00
l. ton		1016.04	1.01604	1.12000	1	35840.0	2240.00
ounce	28.3495	0.02835	0.00003	0.00003	0.00003	1	0.06250
pound	453.592	0.45359	0.00045	0.00050	0.00045	16.0000	16.0000

## Capacity

	cub. metre	litre	cub. inch	cub. foot	cub. yard	U.S. gallon	U.K. gallon
Cub. metre	1	1000.00	61027.1	35.3165	1.30802	264.186	220.216
litre	0.00100	1	61.0271	0.03532	0.00131	0.26419	0.22022
cub. inch	0.00002	0.01639	1	0.00058	0.00002	0.00433	0.00361
cub. foot	0.02832	28.3167	1728.00	1	0.03704	7.48051	6.23549
cub. yard	0.76455	764.554	46656.0	27.0000	1	201.974	168.358
U. S. gallon	0.00379	3.78543	231.000	0.13368	0.00495	1	0.83270
U. K. gallon	0.00455	4.54596	277.413	0.16037	0.00594	1.20091	1



PART NAME	FIG. NO.	PART NAME	FIG. NO.
<b>ELECTRICAL</b>			
ALTERNATOR (Mitsubishi) (1.6L EXC. Emission control) .....	19	WASHER, windshield .....	24
ALTERNATOR (Mitsubishi) (1.6L Emission control & 2L) .....	19A	Windshield WASHER .....	24A
BATTERY .....	22B	Windshield WASHER (from E/# R-40001) .....	24A
CLOCK .....	28B	Windshield WASHER (to E/# R-40000) .....	24A
DISTRIBUTOR (hitachi) .....	18	Windshield WIPER .....	24
Electrical parts MOUNTING .....	21	WIPER, windshield .....	24
Electric UNIT .....	22A	WIRING .....	22
Engine MOUNTING .....	17		
FOG & REVERSE LAMP .....	28	<b>ENGINE</b>	
Front LAMPS .....	26	Accelerator LINKAGE (L drive) .....	13
Head LAMP .....	25	Accelerator LINKAGE (R drive) .....	12
HEATER (Option) .....	28A	Air CLEANER (1.6L) .....	9
LAMPS (1) .....	26	Air CLEANER (2L "solex" Exc. FRANCE) .....	9A
LAMPS (1) (USA & canada) .....	26A	Air CLEANER (2L "SU") .....	9B
LAMPS (2) .....	27	Air CLEANER (FOR FRANCE) .....	9A
LAMPS (3) .....	28	BLOCK, cylinder (1.6L) .....	1
LAMPS Front .....	26	BLOCK, cylinder (2L) .....	1A
LAMPS rear (from july-69) .....	27A	CAM SHAFT .....	4A
LAMPS rear (to june-69) .....	27	CARBURETOR (1.6L "SU") .....	8
MAP LAMPS .....	26B	CARBURETOR (2L "solex") .....	8A
METER, instrument .....	23	CARBURETOR (2L "SU") .....	8B
MOUNTING, electrical parts .....	21	CLEANER Air (2L "SU") .....	9B
MOUNTING, engine .....	17	CONTROL, throttle .....	13A
MOTOR, starter (1.6L) .....	20	Crank SHAFT (1.6L) .....	3
MOTOR, starter (2L) .....	20A	Crank SHAFT (2L) .....	3A
Rear LAMPS (to june-69) .....	27	Cylinder BLOCK (1.6L) .....	1
Parts SWITCH (from july-69) .....	22A	Cylinder BLOCK (2L) .....	1A
Parts SWITCH (to june-69) .....	22A	Cylinder HEAD (1.6L) .....	2
RADIATOR .....	16	Cylinder HEAD (2L) .....	2A
RADIATOR .....	16A	EMISSION CONTROL DEVICE .....	2B
RADIO .....	28B	ENGINE (1.6L) .....	0
Rear LAMPS (from july-69) .....	27A	ENGINE (2L) .....	0A
Side marker LAMPS (U.S.A. & CANADA) .....	26A	EVAPOR CONTROL .....	2B
Starter MOTOR (1.6L) .....	20	Exhaust EMISSION CONTROL .....	2B
Starter MOTOR (2L) .....	20A	Exhaust TUBE (to C/# SP311-03000, SPL311-17000, SR311-00007, SRL311-00069) .....	14
SWITCH parts (from july-69) .....	22A		
SWITCH parts (to june-69) .....	22A		

PART NAME	FIG. NO.	PART NAME	FIG. NO.
Exhaust TUBE (from C/# SP311-03001, SPL311-17001, SR311-00008, SRL311-00070) .....	14A	<b>MISCELLANEOUS</b>	
FAN (1.6L) .....	15	ACCESSORIES .....	62
FAN (2L) .....	15A	BLANK KEY .....	62
Fuel PIPING .....	11A	MODEL NO PLATE .....	62
Fuel PIPING (from oct-67) .....	11A	PAINT .....	62
Fuel PUMP .....	10	<b>POWER TRAIN</b>	
Fuel STRAINER .....	10	CASE, transmission (1.6L) .....	31
Fuel TANK (EXC. CALIFORNIA) .....	11	CASE, transmission (2L) .....	31A
Fuel TANK (CALIFORNIA ONLY) .....	10A	CLOCK .....	28B
HEAD, cylinder .....	2	CLUTCH .....	29
HEAD, cylinder .....	2A	Clutch master CYLINDER .....	45
LINKAGE, Accelerator (L drive) .....	13	Clutch operating CYLINDER .....	46
LINKAGE, Accelerator (R drive) .....	12	Clutch PEDAL .....	48
MANIFOLD (1.6L) .....	5	CONTROL, transmission .....	33
MANIFOLD (2L "SU") .....	5A	CYLINDER, clutch master .....	45
MECHANISM (1.6L) .....	4	CYLINDER, clutch operating .....	46
Oil FILTER (1.6L) .....	7	Gear CARRIER .....	37
Oil FILTER (2L) .....	7A	GEAR HYPOID .....	37
Oil PUMP (1.6L) .....	6	GEAR, transmission (2L) .....	32A
Oil PUMP (2L) .....	6A	GEAR, transmission (1.6L) .....	32
PIPING, fuel .....	11A	PEDAL, clutch .....	48
PIPING fuel (from oct-67) .....	11A	Propeller SHAFT .....	36
PISTON, engine (1.6L) .....	3	SHAFT, propeller .....	36
PISTON, engine (2L) .....	3A	SHAFT, transmission (2L) .....	32A
SHAFT, crank (1.6L) .....	3	SHAFT, transmission (1.6L) .....	32
SHAFT, crank (2L) .....	3A	TRANSMISSION, ass'y .....	30
STRAINER, fuel (1.6L) .....	6	Transmission CASE (1.6L) .....	31
TANK, fuel (EXC. CALIFORNIA) .....	11	Transmission CASE (2L) .....	31A
Throttle CONTROL .....	13A	Transmission CONTROL .....	33
TUBE, exhaust (to C/# SP311-03000, SPL311-17000, SR311-00007, SRL311-00069) .....	14	Transmission SHAFT (1.6L) .....	32
TUBE, exhaust (from C/# SP311-03001, SPL311-17001, SR311-00008, SRL311-00070) .....		Transmission SHAFT & GEAR (2L) .....	32A
		Transmission SHAFT & GEAR (2L) (SERVO SYNCHRO MESH TYPE) ...	32B
		WARNER TYPE TRANSMISSION	


PART NAME	FIG. NO.	PART NAME	FIG. NO.
GEAR, steering (to sep-67) .....	49		
GEAR, steering (from oct-67) .....	49A		
LINKAGE, steering .....	50		
Steering GEAR (to sep-67) .....	49		
Steering GEAR (FOR R-B TYPE) .....	49B		
Steering GEAR (from oct-67) .....	49A		
Steering WHEEL .....	51		
WHEEL, steering .....	51		

**ENGINE**


**NOTE**



MANIFOLD (2 L "SOLEX")

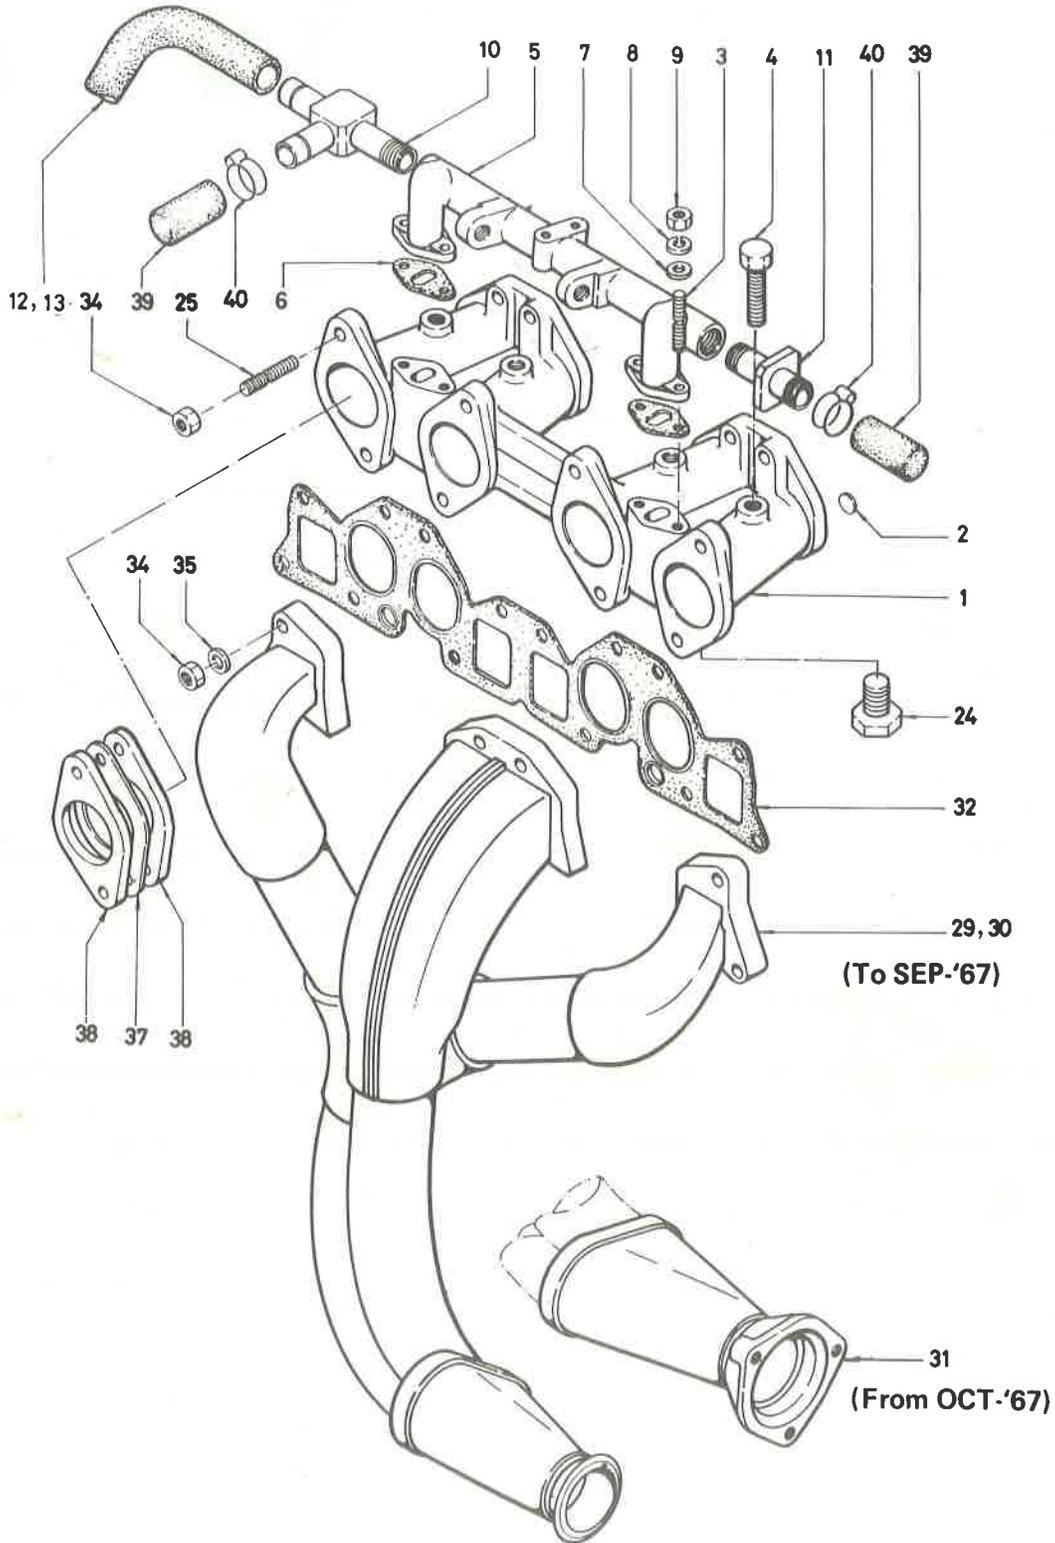

MANIFOLD (2 L "SU")

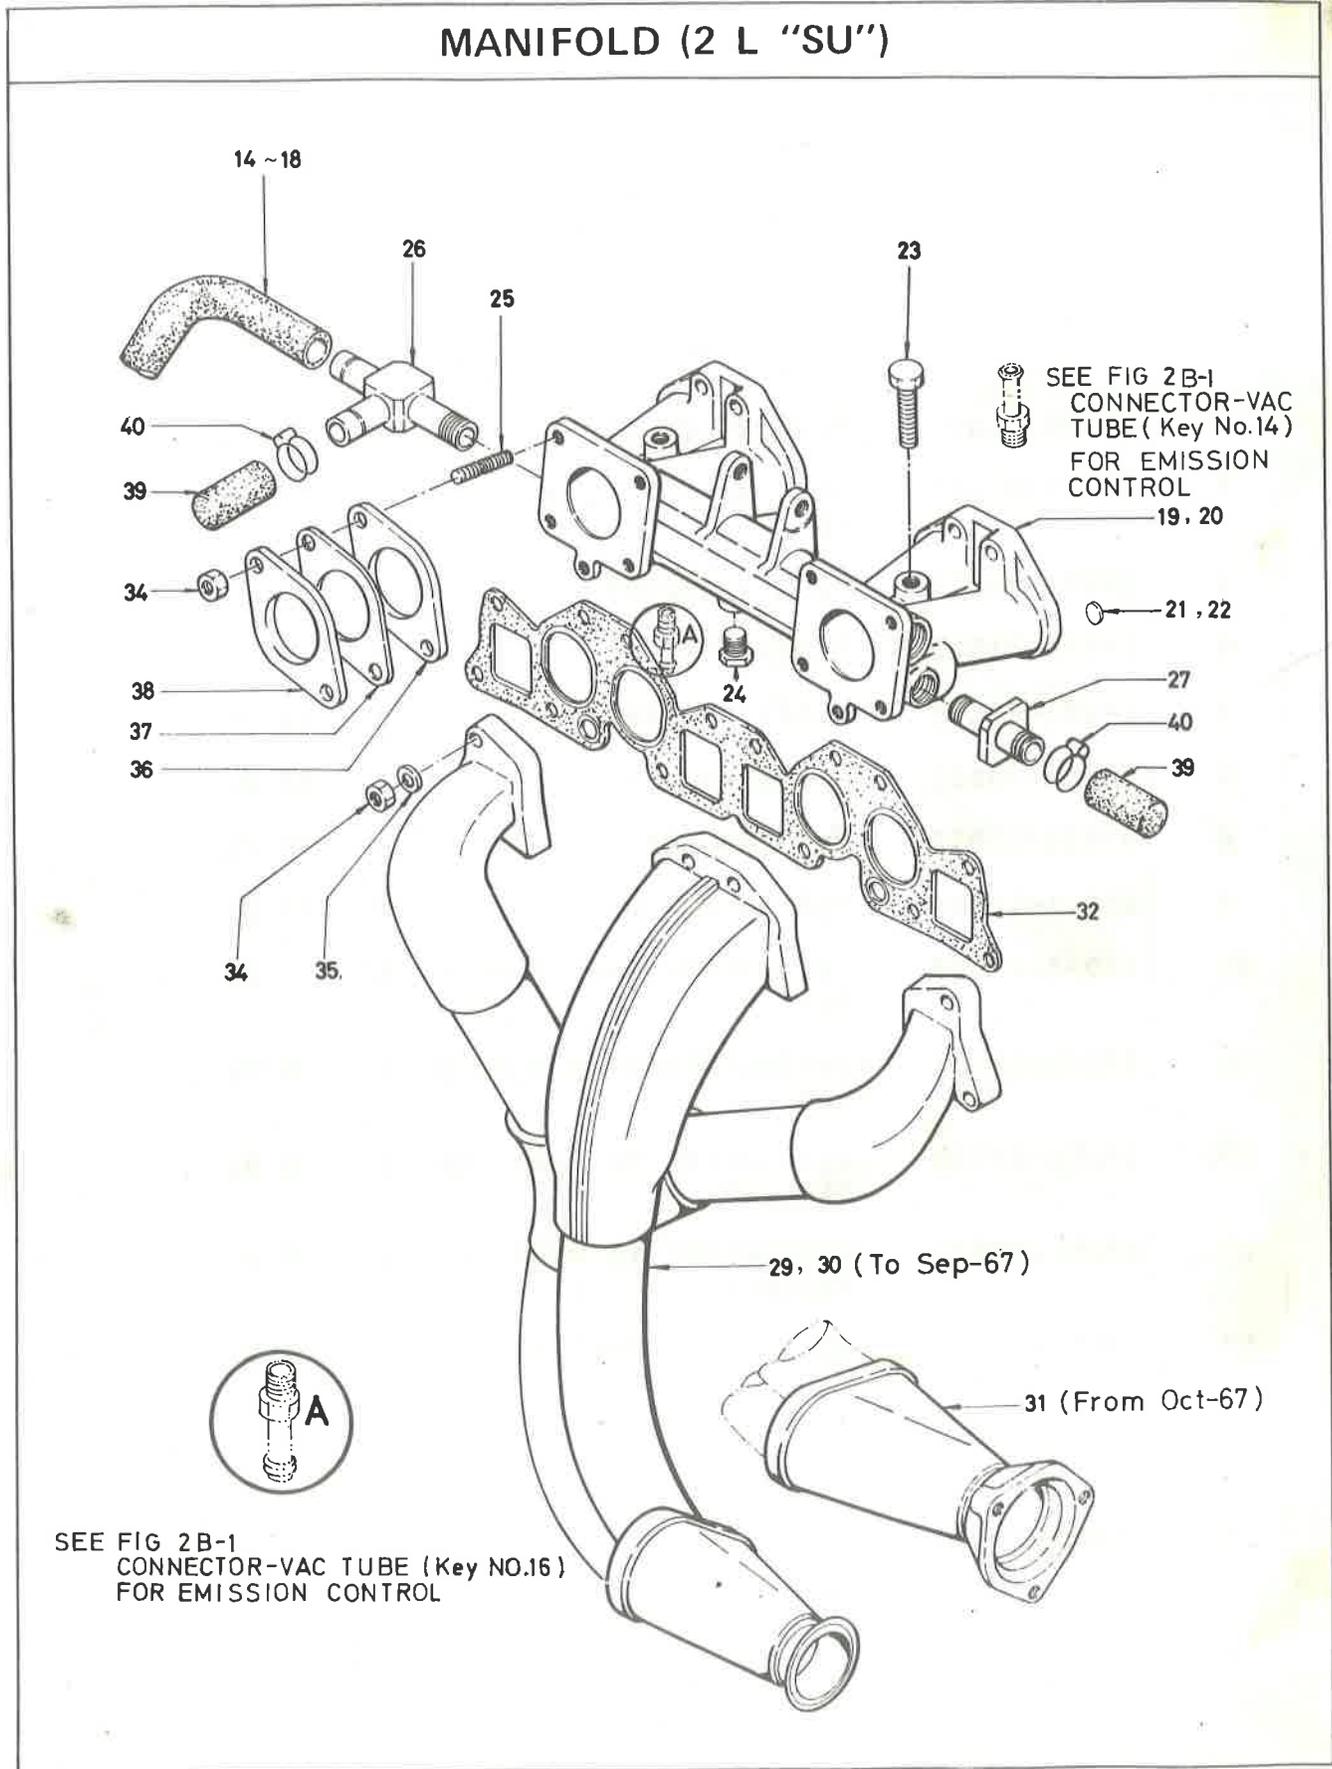

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>MANIFOLD (2L)</b>				
	1	14002-25525	MANIFOLD-INTAKE FOR SOLEX	1	1 2L		
	2	00933-11600	PLUG=WELCH 16	1	50 2L		
	3	08228-62010	STUD M6 X 1,0,WATER TUBE	4	50 2L		
	4	08931-30210	PLUG 1/8-28PT	4	50 2L		
	5	14020-25500	TUBE-WATER	1	1 2L		
	6	14021-20100	GASKET-WATER TUBE	2	10 2L		
	7	08915-43610	WASHER-PLAIN	4	50 2L		
	8	08915-13610	WASHER-LOCK	4	50 2L		
	9	08911-10610	NUT M6 X 1,0	4	50 2L		
	10	14048-25500	CONNECTOR-3 WAY,TUBE,FRONT	1	2L		
	11	14049-18811	CONNECTOR-WATER TUBE,REAR	1	5 2L		
*	12	14056-25500	HOSE-WATER TO PUMP FOR "SOLEX"	1	5 2L		
	13	14056-25501	HOSE-WATER TO PUMP FOR "SOLEX"	1	5 2L		Y
	14	14056-25600	HOSE-WATER FOR "SU"	1	5 2L EXC SRLU		
	15	14056-25605	HOSE-WATER FOR "SU"	1	5 2L EXC SRLU		Y
	16	14056-25605	HOSE-WATER "A" FOR "SU"	1	5 SRLU		
	17	14056-25602	HOSE-WATER "B" FOR "SU"	1	5 SRLU		

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	18	14056-25605	HOSE-WATER TO PUMP FOR "SU" "B"	1	5	SRLU	Y
	19	14002-25625	MANIFOLD-INTAKE FOR SU	1	1	2L EXC EMISSION CONTROL	
	20	14002-25626	MANIFOLD-INTAKE FOR SU	1		2L EMISSION CONTROL	
	21	00933-11600	PLUG-WELCH 16	1	50	2L	
	22	00933-12500	PLUG-WELCH 25	2	10	2L	
	23	08931-30210	PLUG 1/8-28FT	2	50	2L	
	24	00931-20800	PLUG 1/2-14PT	1	10	2L	
	25	08223-84210	STUD M8 X 1,25	8	25	2L	
	26	14048-25600	CONNECTOR-3 WAY, WATER TUBE, FRONT	1	1	2L	
	27	14049-18811	CONNECTOR-WATER TUBE, REAR	1	5	2L	
	28	08721-12200	CLAMP-HOSE	4	10	2L	
*	29	14060-25500	ASSY-MANIFOLD, EXHAUST (TO SEP-67)	1		2L	
	30	14060-25501	ASSY-MANIFOLD, EXHAUST (TO SEP-67)	1	1	2L	Y
	31	14060-25502	ASSY-MANIFOLD, EXHAUST (FROM OCT-67)	1	1	2L	N
	32	14035-25500	GASKET-MANIFOLD	1	10	2L	
	33	14037-32200	YOKE	4	50	2L	
	34	08911-20810	NUT M8 X 1,25	14	50	2L	
	35	08915-43810	WASHER-PLAIN	5	50	2L	
	36	08915-13810	WASHER-LOCK	10	50	2L	
	37	14041-12201	INSULATOR-EXHAUST MANIFOLD T1,0	1	1	2L	

FIG. 5A

NISSAN MOTOR CO., LTD.


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	38	14041-25601	INSULATOR-EXHAUST MANI FOLD (FROM OCT-67)	1	1	SRLU	
	39	14058-25500	CAP-WATER TUBE	2	10	2L	
	40	08721-12200	CLAMP	3	10	2L	
	41	08723-12400	CLAMP	3		2L	Y
	42	14066-12200	BAR-EXHAUST MANIFOLD	1	1	2L	
	43	14066-25601	BAR-EXHAUST MANIFOLD ( FROM OCT-67)	1	5	SRLU	

*Next to new cars*


*Genuine Datsun Spare Parts are most profitable.*



CARBURETOR (1.6 L "SU")

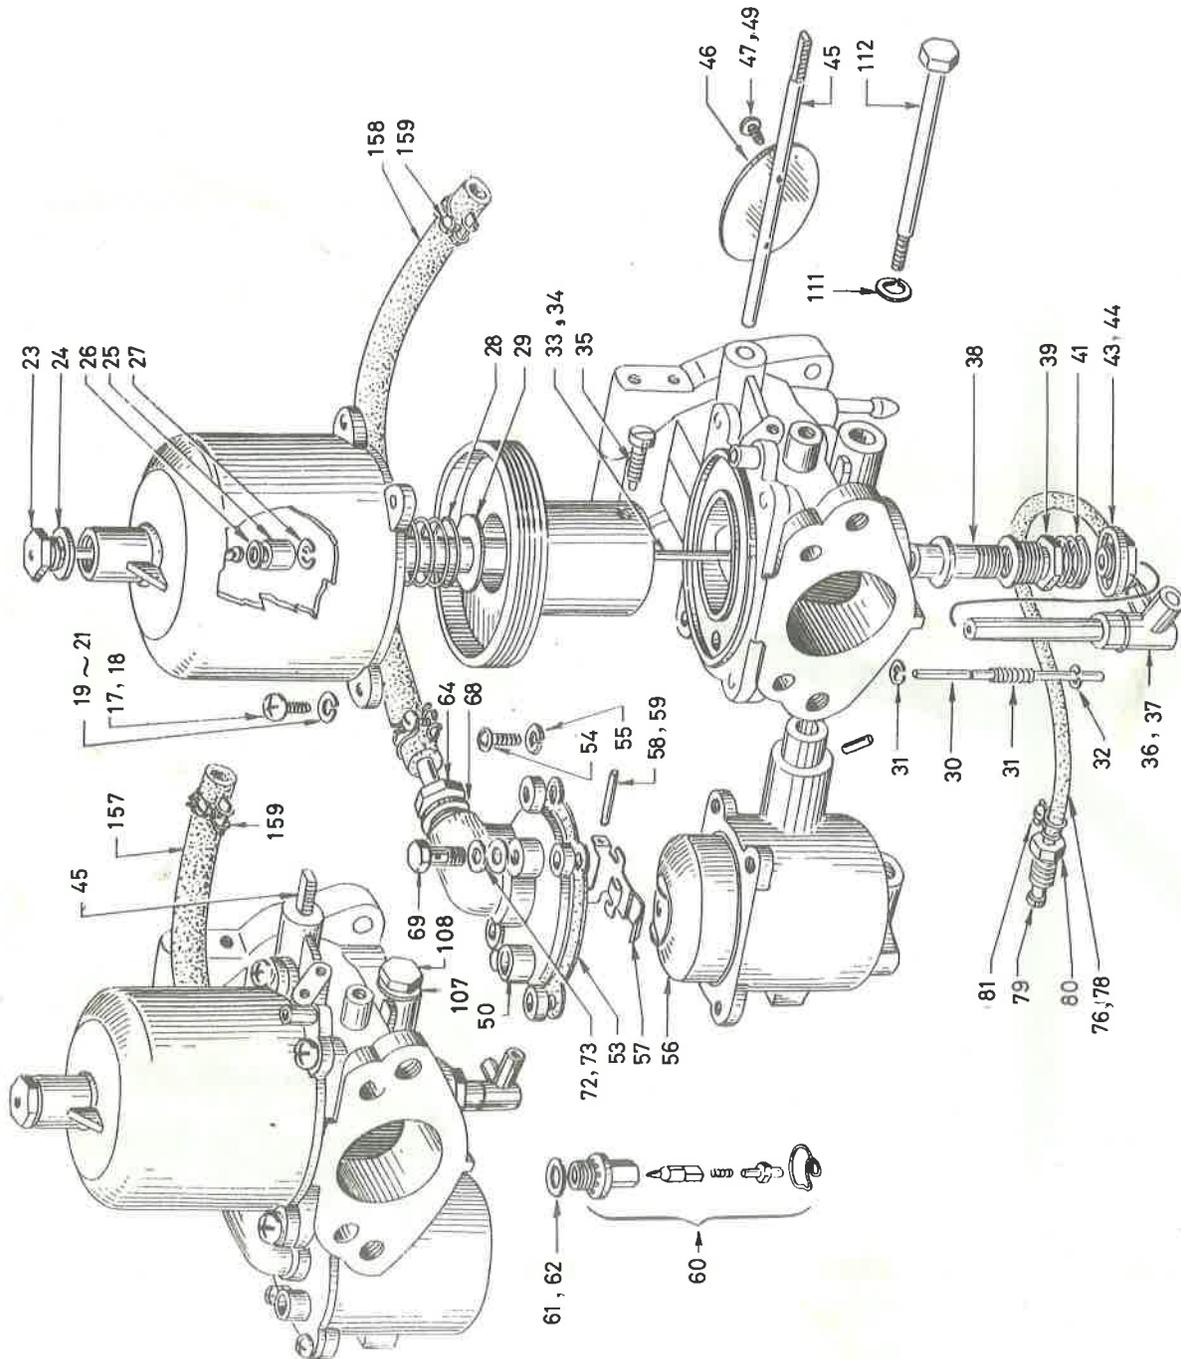


CARBURETOR (1.6 L "SU")

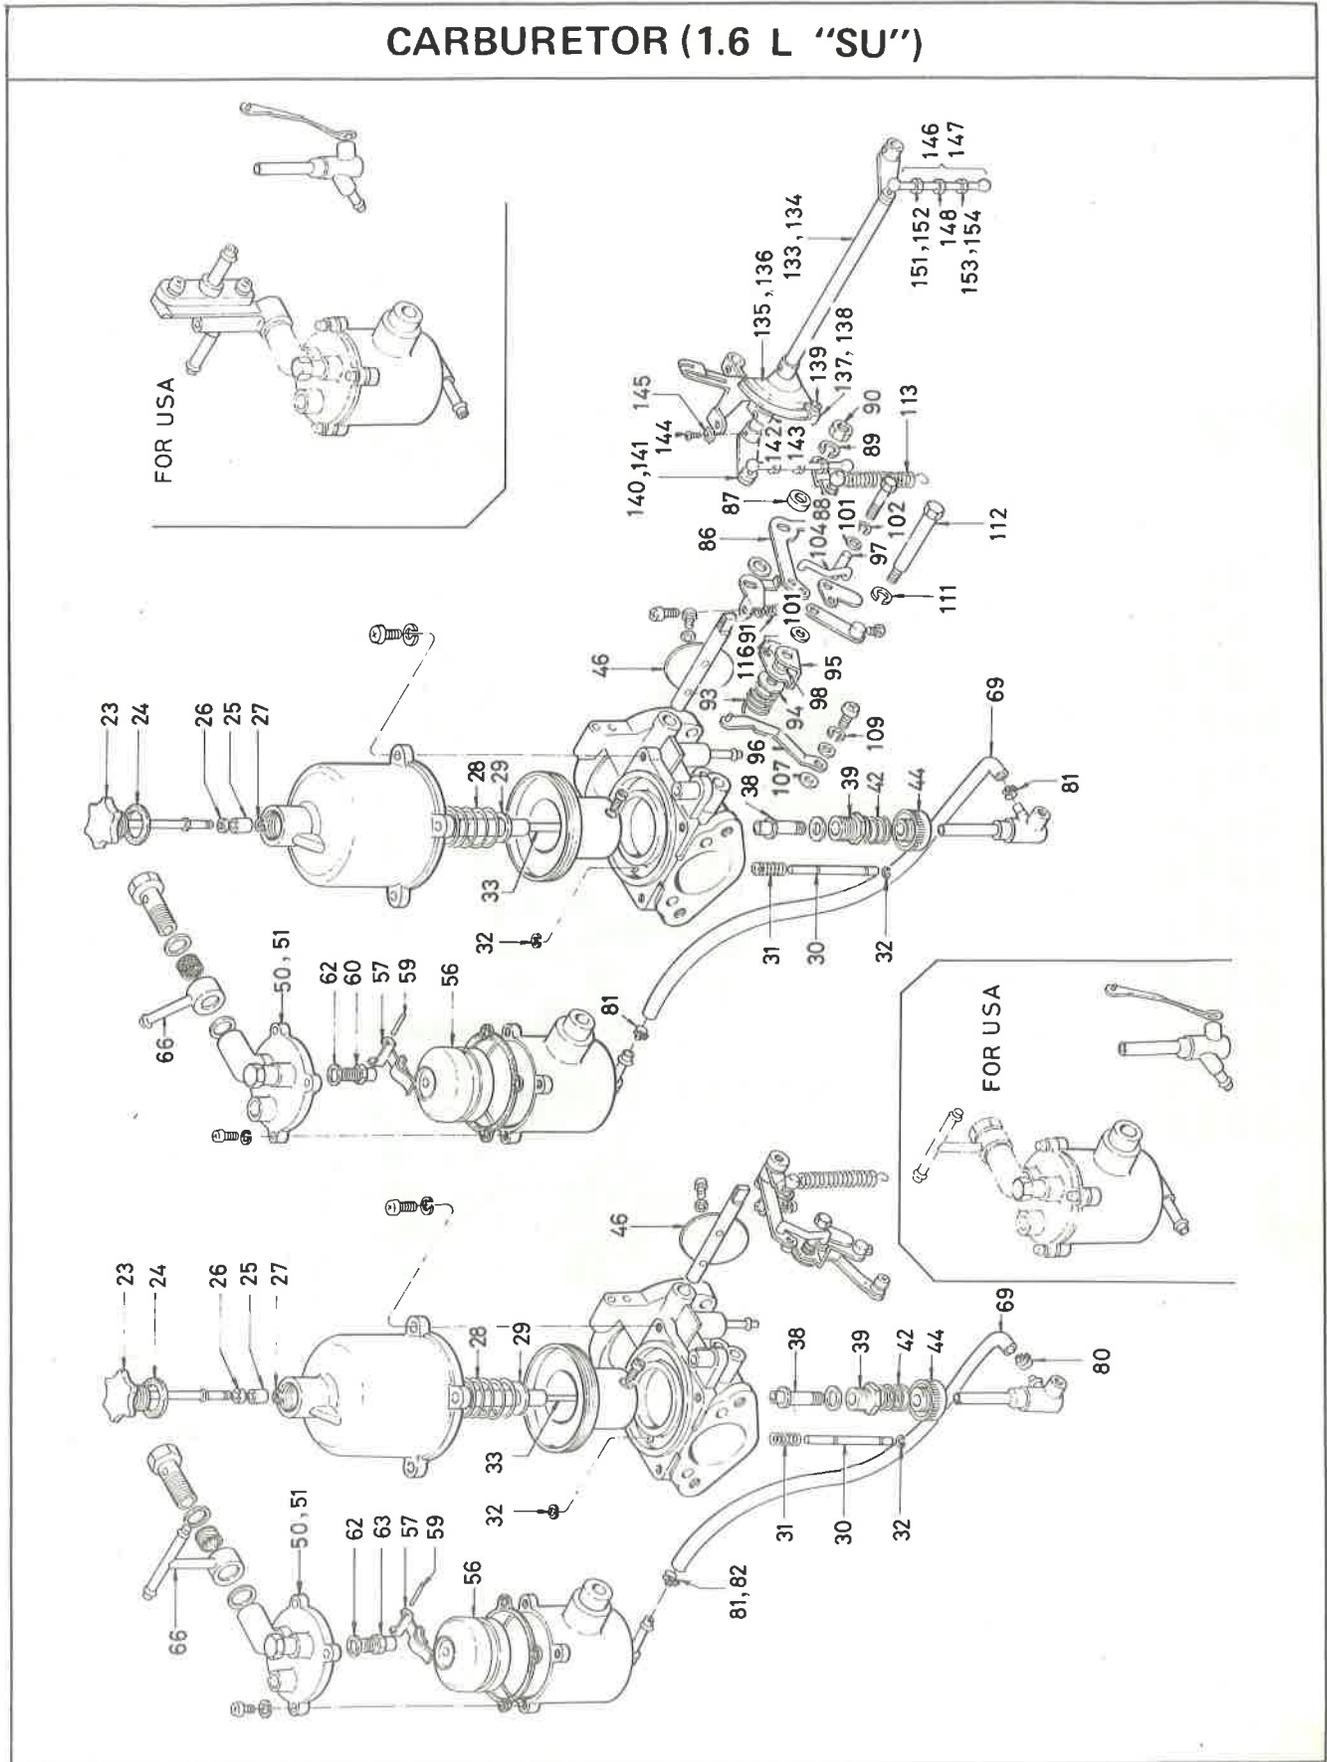

CARBURETOR (1.6 L "SU")

Note: Kit A inc. Key No. 40, 61, 68, 70  
 Kit B inc. Key No. 18, 27, 32, 81, 93, 97, 98  
 101, 102, 103, 105, 107, 108, 109, 110, 116  
 Kit C inc. Key No. 23, 33, 34, 60, 91, 92

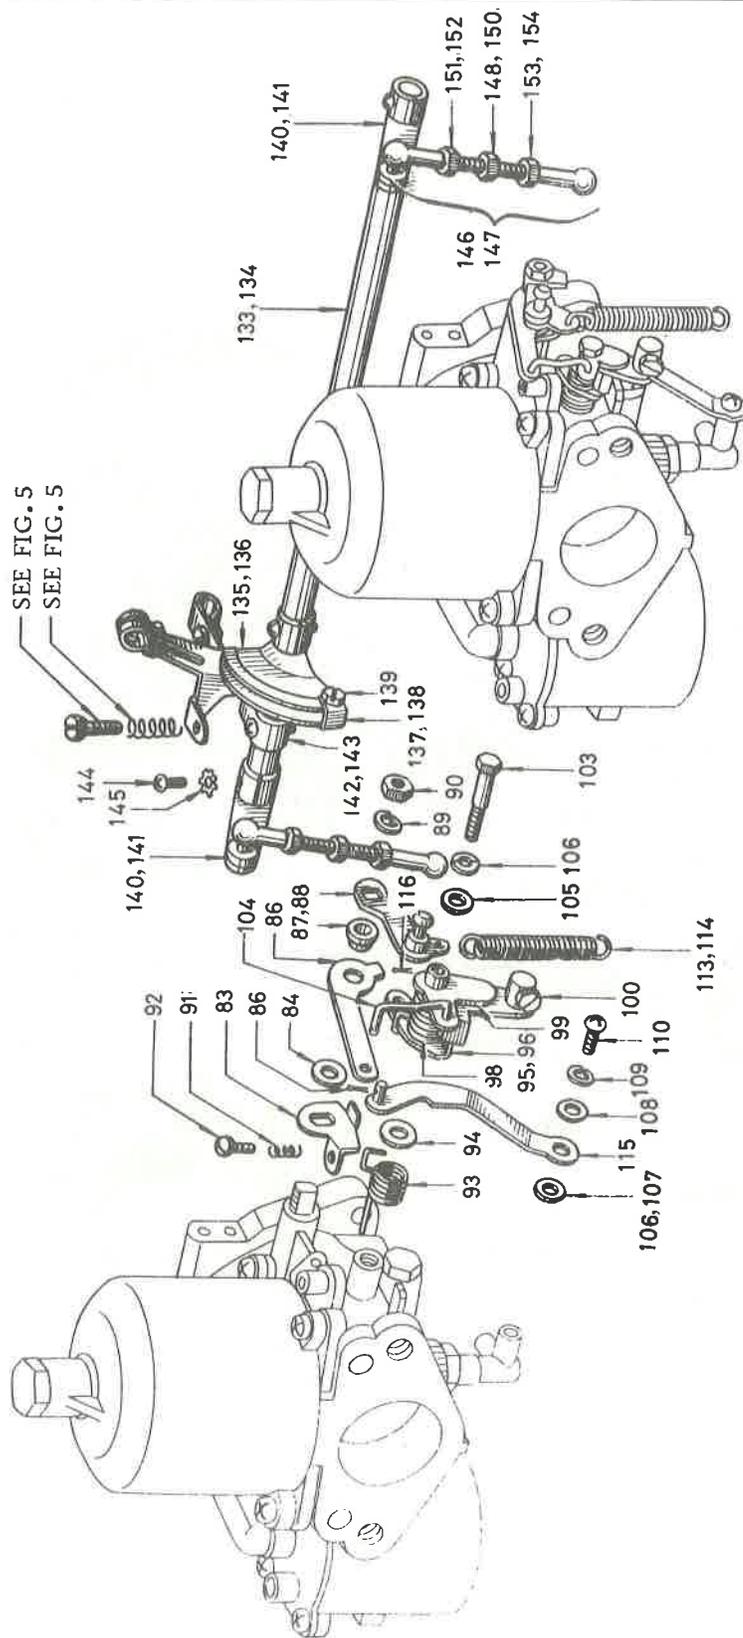

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>CARBURETOR (1.6L "SU")</b> EXHAUST signifies ONTARIO and USA except CAL. EVAPO signifies CALIFORNIA in USA.							
*	1	16010-14600	ASSY-CARBURETOR(HJB38W-3)	1	1	1.6L	
*	2	16010-16302	ASSY-CARBURETOR(HJB38W-3)(FROM E/# R-40001)	1	1	1.6L	N
*	3	16010-14603	ASSY-CARBURETOR(HJB38W-3)(FROM E/# R-40001)	1	1	1.6L	Y
	4	16010-14604	ASSY-CARBURETOR (ISO)	1		1.6L EXC SPLU	Y
	5	16010-14605	ASSY-CARBURETOR	1		1.6L EXC EXHAUST & EVAPO	Y
	6	16010-14635	CARBURETOR FRONT	1		1.6L EXC EXHAUST & EVAPO	
	7	16010-14655	CARBURETOR REAR	1		1.6L EXC EXHAUST & EVAPO	
	8	16010-14700	ASSY-CARBURETOR (FROM OCT-67) SU	1	1	SPLU	
*	9	16010-14701	ASSY-CARBURETOR (ISO)	1		SPLU	Y
	10	16010-14702	ASSY-CARBURETOR (ISO)	1	1	SPLU	Y
*	11	16010-A7700	ASSY-CARBURETOR(HJR-38W6) (FROM JULY-69)	1	1	1.6L EXHAUST & EVAPO	N
	12	16010-A7701	ASSY-CARBURETOR (HJB 38W-6)	1	1	1.6L EXHAUST & EVAPO	Y
*	13	16010-A7731	CARBURETOR FRONT	1	1	1.6L EXHAUST & EVAPO	
*	14	16010-A7732	CARBURETOR FRONT	1	1	1.6L EXHAUST & EVAPO	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	15	16010-A7751	CARBURETOR REAR	1		1,6L EXHAUST & EVAPO	
	16	16010-A7752	CARBURETOR REAR	1		1,6L EXHAUST & EVAPO	Y
	17	16129-73012	SCREW 5D	8	10	1,6L	
	18	16129-73013	SCREW 5D	8	10	1,6L	Y
	19	16086-00100	WASHER-SPRING	8	10	1,6L EXC SPLU	
	20	23109-30000	WASHER SPRING 5D	8	10	SPLU	
	21	23502-30000	WASHER SPRING 5D	8	10	SPLU	
	22	16341-10400	NUT-OIL CAP	2		1,6L	
	23	16341-10410	NUT-OIL CAP	2	10	1,6L	Y
	24	16342-10400	PACKING	2	5	1,6L	
	25	16343-12210	PLUNGER-OIL DAMPER	2	5	1,6L	
	26	16344-10400	WASHER-OIL DAMPER	2	5	1,6L	
	27	16345-10400	RING-"C"	2	10	1,6L	
	28	16346-12210	SPRING-SUCTION	2	5	1,6L	
	29	16347-10400	PACKING-NYLON,12,5	2	5	1,6L	
	30	16324-10400	LIFTER-PISTON	2	10	1,6L	
	31	16325-10400	SPRING-PISTON LIFTER	2	5	1,6L	
	32	16326-10400	RING-"E"	4	10	1,6L	
	33	16354-14610	JET-NEEDLE M-39	2	10	1,6L	
	34	16354-15810	JET-NEEDLE M-43	2	10	1,6L	
	35	16219-10400	SCREW-SET, JET NEEDLE	2	10	1,6L	
	36	16355-14610	NOZZLE	2	10	1,6L EXC SPLU	
	37	16355-14710	NOZZLE	2	5	SPLU	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	38	16351-10400	SLEEVE-NOZZLE	2	5	1,6L	
	39	16027-10400	SCREW-SET, NOZZLE SLEEVE	2	5	1,6L	
	40	16130-10400	WASHER-100	2	10	1,6L EXC SPLU	
	41	16130-25610	WASHER-100	2	10	SPLU	
	42	16145-10400	SPRING-IDLE ADJUST SCREW	2	10	1,6L	
	43	16144-12210	NUT-IDLE ADJUST	2	10	1,6L	
	44	16144-25610	NUT-IDLE ADJUST	2	5	SPLU	
	45	16122-12210	SHAFT-THROTTLE	2	5	1,6L	
	46	16120-10400	VALVE-THROTTLE	2	10	1,6L	
	47	16121-85160	SCREW-VALVE	4	50	1,6L EXC SPLU	
	48	16121-85060	SCREW-VALVE	4	10	SPLU	
*	49	16125-10411	COVER-FLOAT	2		1,6L	
	50	16125-10400	COVER-FLOAT	2	1	1,6L	Y
	51	16125-E3210	COVER-FLOAT	2	1	1,6L	N
*	52	16064-10400	GASKET-FLOAT CHAMBER	2	10	1,6L	
	53	16064-22010	GASKET-FLOAT CHAMBER	2	10	1,6L	Y
	54	16065-08010	SCREW-SET, 5	8	10	1,6L	
	55	16086-00100	WASHER-SPRING	8	10	1,6L	
	56	16061-10400	ASSY-FLOAT	2	1	1,6L	
	57	16062-10400	LEVER-FLOAT	2	10	1,6L	
	58	16066-10400	SHAFT-FLOAT LEVER	2	10	1,6L EXC SPLU	
	59	16066-25610	SHAFT-FLOAT LEVER	2	10	SPLU	
	60	16101-10400	ASSY-VALVE, NEEDLE	2	5	1,6L	

FIG. 8

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	61	16094-10400	WASHER-10D	2	10	1.6L EXC SPLU	
	62	16130-22010	WASHER-10D	2	10	SPLU	
	63	16111-12210	NIPPLE-FUEL	2	5	1.6L	
*	64	16111-25611	NIPPLE-FUEL(F)	2	5	1.6L	Y
	65	16108-18010	BOLT-FILLER	2	5	1.6L	
	66	16098-73401	FILTER	2	10	1.6L	
*	67	16094-85060	PACKING-12	2	50	1.6L	
	68	16094-76500	PACKING-12	2	10	1.6L	Y
	69	16331-10400	SCREW-SET,NIPPLE	2	10	1.6L	
*	70	16335-10400	PACKING-10	4	10	1.6L	
*	71	16111-25613	VALVE FUEL RETURN W/BRACKET FOR 16010-14 702	1		SPLU	
*	72	16111-A7710	VALVE FUEL RETURN W/BRACKET FOR 16010- A7700	1	1	SPLU	Y
	73	16111-A7711	VALVE FUEL RETURN W/BRACKET FOR 16010- A7700	1		SPLU	Y
	74	16111-25614	KIT BRACKET FUEL CONNE CTOR FOR 16010-14700	1	5	SPLU	
	75	16111-25615	KIT BRACKET FUEL CONNE CTOR FOR 16010-14701	1	5	SPLU	N
	76	16356-12210	PIPE-FUEL	2	10	1.6L EXC SPLU	
*	77	16356-14710	PIPE-FUEL	2	5	SPLU	
	78	16356-25610	PIPE-FUEL	2	5	SPLU	Y
	79	16357-12210	SLEEVE	2	10	1.6L	
	80	16359-12210	NUT-SLEEVE	2	10	1.6L	
	81	16358-12211	CLIP	4	10	1.6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	82	16358-E4310	CLIP	4		1,6L	Y
	83	16127-14610	PLATE-THROTTLE ADJUST	2	1	1,6L	
	84	16084-14610	WASHER-8	2	10	1,6L	
	85	16277-14610	LEVER-IDLE FIRST	2	1	1,6L	
	86	16277-14611	LEVER-IDLE FIRST	2	5	1,6L	Y
	87	16239-14610	SLEEVE-"A"	2	1	1,6L	
	88	16134-14610	LEVER-THROTTLE	2	1	1,6L	
	89	23109-30000	WASHER	2	10	1,6L	
	90	16214-85060	NUT-8	2	10	1,6L	
	91	16193-10400	SPRING-THROTTLE ADJUST SCREW	2	5	1,6L	
	92	16114-10400	SCREW-THROTTLE ADJUST	2	10	1,6L	
	93	16190-10401	SPRING-STARTER RETURN	2	10	1,6L	
	94	16072-14610	WASHER-5	2	10	1,6L	
	95	16147-14611	PLATE-CONNECTING,"B"	2	5	1,6L EXC SPLU	
	96	16147-14710	PLATE-CONNECTING,"B"	2	5	SPLU	
	97	16116-14610	SLEEVE-"B"	2	10	1,6L	
	98	16157-14610	SPRING-CONNECTING	2	10	1,6L	
	99	16238-14610	LEVER-CHOKE	2	1	1,6L	
	100	16185-14610	BOLT	2	10	1,6L	
	101	16217-10401	WASHER-7	2	10	1,6L	
	102	16076-14610	WASHER-SPRING	2	10	1,6L	
	103	16185-10400	BOLT-5	2	10	1,6L	
	104	16248-14610	ROD-CONNECTING	2	5	1,6L	
	105	16091-10560	PIN-COTTER	2	10	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	106	16220-14610	WASHER-4D	2	1	1,6L EXC SPLU	
	107	22185-50000	WASHER-4D	2	10	SPLU	
	108	16123-14610	SLEEVE-NCW	2	1	1,6L	
	109	22156-85060	WASHER-SPRING	2	100	1,6L	
	110	23552-09400	SCREW-4	2	10	1,6L	
	111	23109-30000	WASHER-SPRING	2	10	1,6L	
	112	16322-12210	BOLT	2	10	1,6L	
	113	16194-12210	SPRING-THROTTLE	2	5	1,6L EXC SPLU	
	114	16194-14710	SPRING-THROTTLE	2	10	SPLU	
	115	16147-14610	PLATE-CONNECTING, "A"	2	1	1,6L	
	116	16091-10560	PIN-COTTER	2	10	1,6L	
	117	00911-14510	NUT-CARBURETOR TO MANI FOLD	8	50	1,6L	
	118	08911-20810	NUT-CARBURETOR TO MANI FOLD(FROM E/# R-40001)	4	50	1,6L	N
	119	00915-11510	WASHER-SPRING, CARB, TO MANIFOLD	4	50	1,6L	
	120	08915-13810	WASHER-SPRING, CARB, TO MANIFOLD(FROM E/# R-40 001)	4	50	1,6L	N
	121	00915-41510	WASHER-PLAIN, CARB, TO M ANIFOLD	4	50	1,6L	
	122	08915-43610	WASHER-PLAIN, CARB, TO M ANIFOLD(FROM E/# R-400 01)	4	50	1,6L	N
	123	00111-51410	BOLT-HEAT SHIELD PLATE TO CARBURETOR	4	50	1,6L	
	124	08110-81410	BOLT-HEAT SHIELD PLATE TO CARB, (FROM E/# R-4 0001)	4	50	1,6L	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	125	00915-11510	WASHER-SPRING TO ATTACH CARB, (NOT USED FROM E/# R-40001)	4	50	1,6L	
	126	00915-11510	WASHER-H/S PLATE TO CARB, (NOT USED FROM E/# R-40001)	4	50	1,6L	
#	127	X6010-14625	REPAIR KIT-A, CARBURETOR (INC, 25, 32, 34, 36, WASHER)	1		1,6L	
	128	16010-14625	REPAIR KIT-A, CARBURETOR	1	5	1,6L	Y
#	129	X6010-14626	REPAIR KIT-B, CARBURETOR	1		1,6L	
	130	16010-14626	REPAIR KIT-B, CARBURETOR	1	1	1,6L	Y
#	131	X6010-14628	REPAIR KIT-D, CARBURETOR	1		1,6L	
	132	16010-14628	REPAIR KIT-D, CARBURETOR	1	5	1,6L	Y
	133	16361-14600	SHAFT-THROTTLE (TO E/# R-40000)	1	1	1,6L	
	134	16361-14601	SHAFT-THROTTLE (FROM E/# R-40001)	1		1,6L	N
	135	16362-14600	ASSY-DRUM, THROTTLE (TO E/# R-40000)	1	10	1,6L	
	136	16362-14601	ASSY-DRUM, THROTTLE (FROM E/# R-40001)	1	5	1,6L	N
	137	16364-14600	CLIP-THROTTLE WIRE (TO E/# R-40000)	1	10	1,6L	
	138	16364-14601	CLIP-THROTTLE WIRE (FROM E/# R-40001)	1	10	1,6L	N
	139	00369-01210	SCREW	1	50	1,6L	
	140	16365-14600	ARM-SHAFT (TO E/# R-40000)	2	10	1,6L	
	141	16365-14601	ARM-SHAFT (FROM E/# R-40001)	2		1,6L	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	142	16367-14600	ARM-THROTTLE ADJUST SCREW (TO E/# R-40000)	1	5	1.6L	
	143	16367-14601	ARM-THROTTLE ADJUST SCREW (FROM E/# R-40001)	1		1.6L	N
	144	00334-02010	SCREW	4	50	1.6L	
	145	00916-41010	WASHER-TOOTH	4	50	1.6L	
	146	16370-14600	ASSY-ROD, CONNECTING (TO E/# R-40000)	2	5	1.6L	
	147	16370-14601	ASSY-ROD, CONNECTING (FROM E/# R-40001)	2	5	1.6L	N
	148	16373-14600	TURN-BACKLE, CONNECTING ROD (TO E/# R-40000)	2	10	1.6L	
*	149	16373-14601	TURN-BACKLE, CONNECTING ROD (FROM E/# R-40001)	2		1.6L	N
	150	16373-14605	TURN-BACKLE, CONNECTING ROD (FROM E/# R-40001)	2		1.6L	Y
	151	16374-14600	NUT (TO E/# R-40000)	2	10	1.6L	
	152	16374-18810	NUT (FROM E/# R-40001)	2		1.6L	N
	153	16375-14600	NUT (TO E/# R-40000)	2	10	1.6L	
	154	16375-18810	NUT (FROM E/# R-40001)	2		1.6L	N
	155	00369-01210	SCREW TO FIX BRACKET	2	50	1.6L	
	156	00915-11010	WASHER-LOCK TO FIX BRACKET	2	50	1.6L	
	157	17524-12200	TUBE-FLEXIBLE, FUEL PUMP TO CARBURETOR (FRONT)	1	5	1.6L	
	158	17525-12200	TUBE-FLEXIBLE, FUEL PUMP TO CARBURETOR (REAR)	1	1	1.6L	
	159	00721-11310	CLAMP-TUBE	4	10	1.6L	

**NOTE**

---

---

---



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---

---

CARBURETOR (2 L "SOLEX")

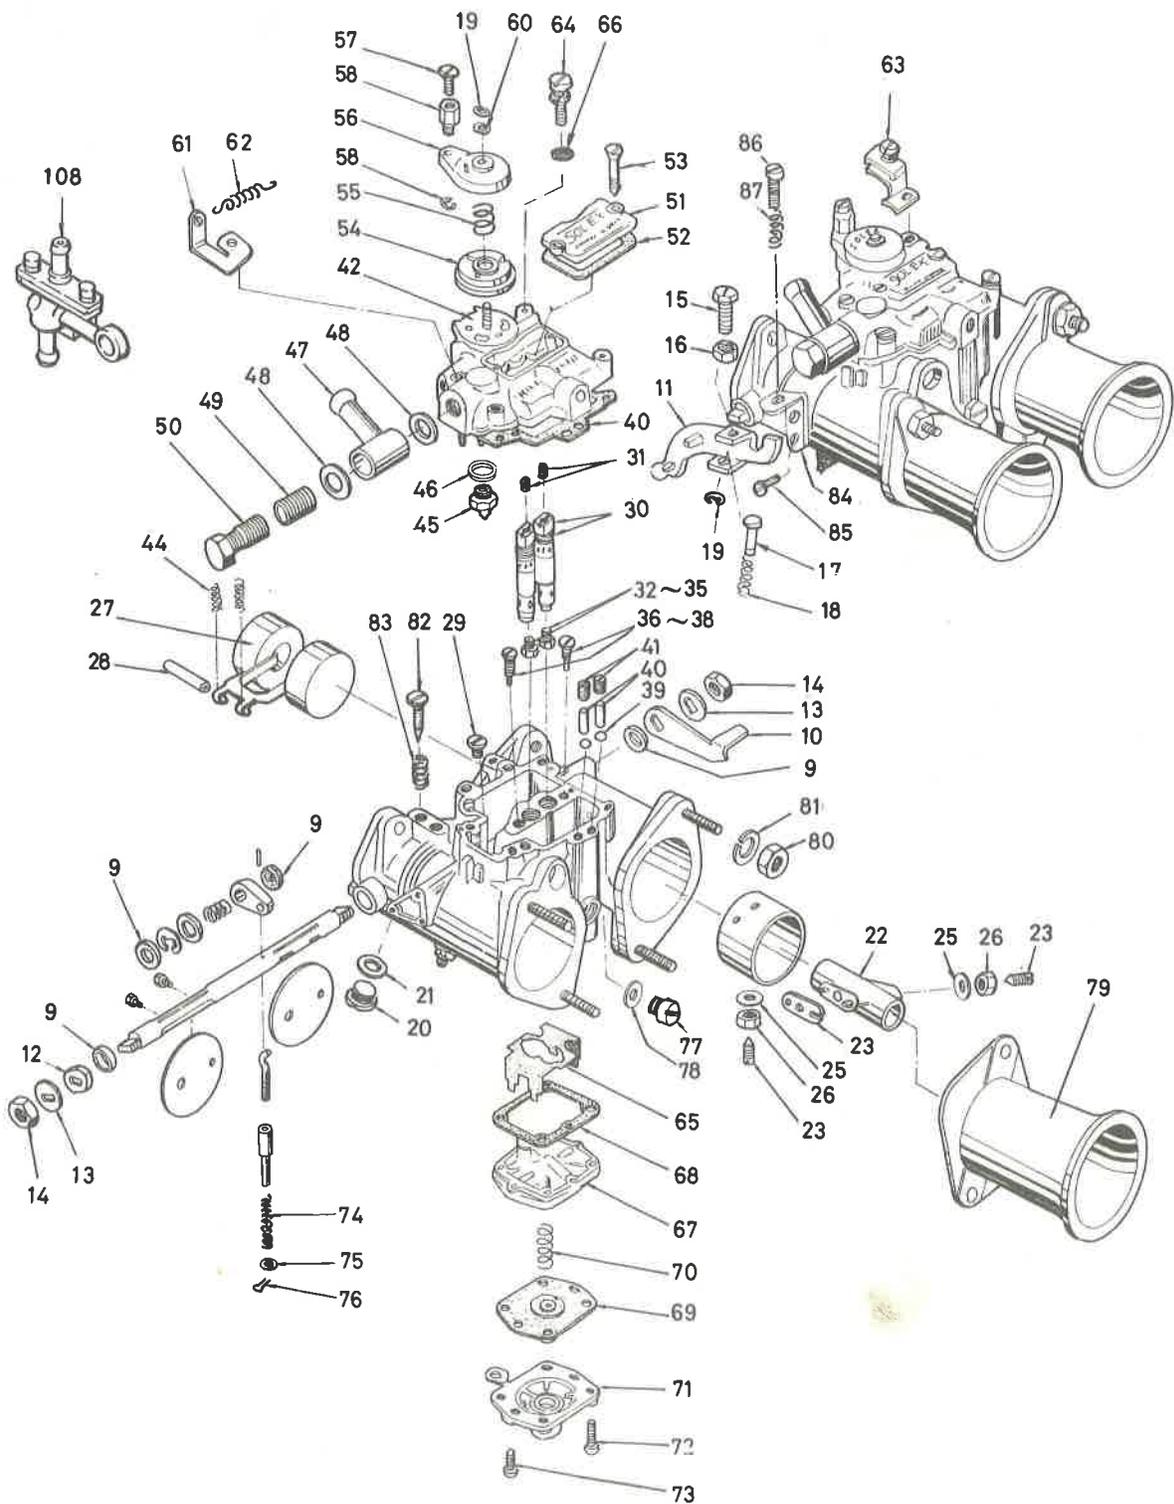

### CARBURETOR (2 L "SOLEX")

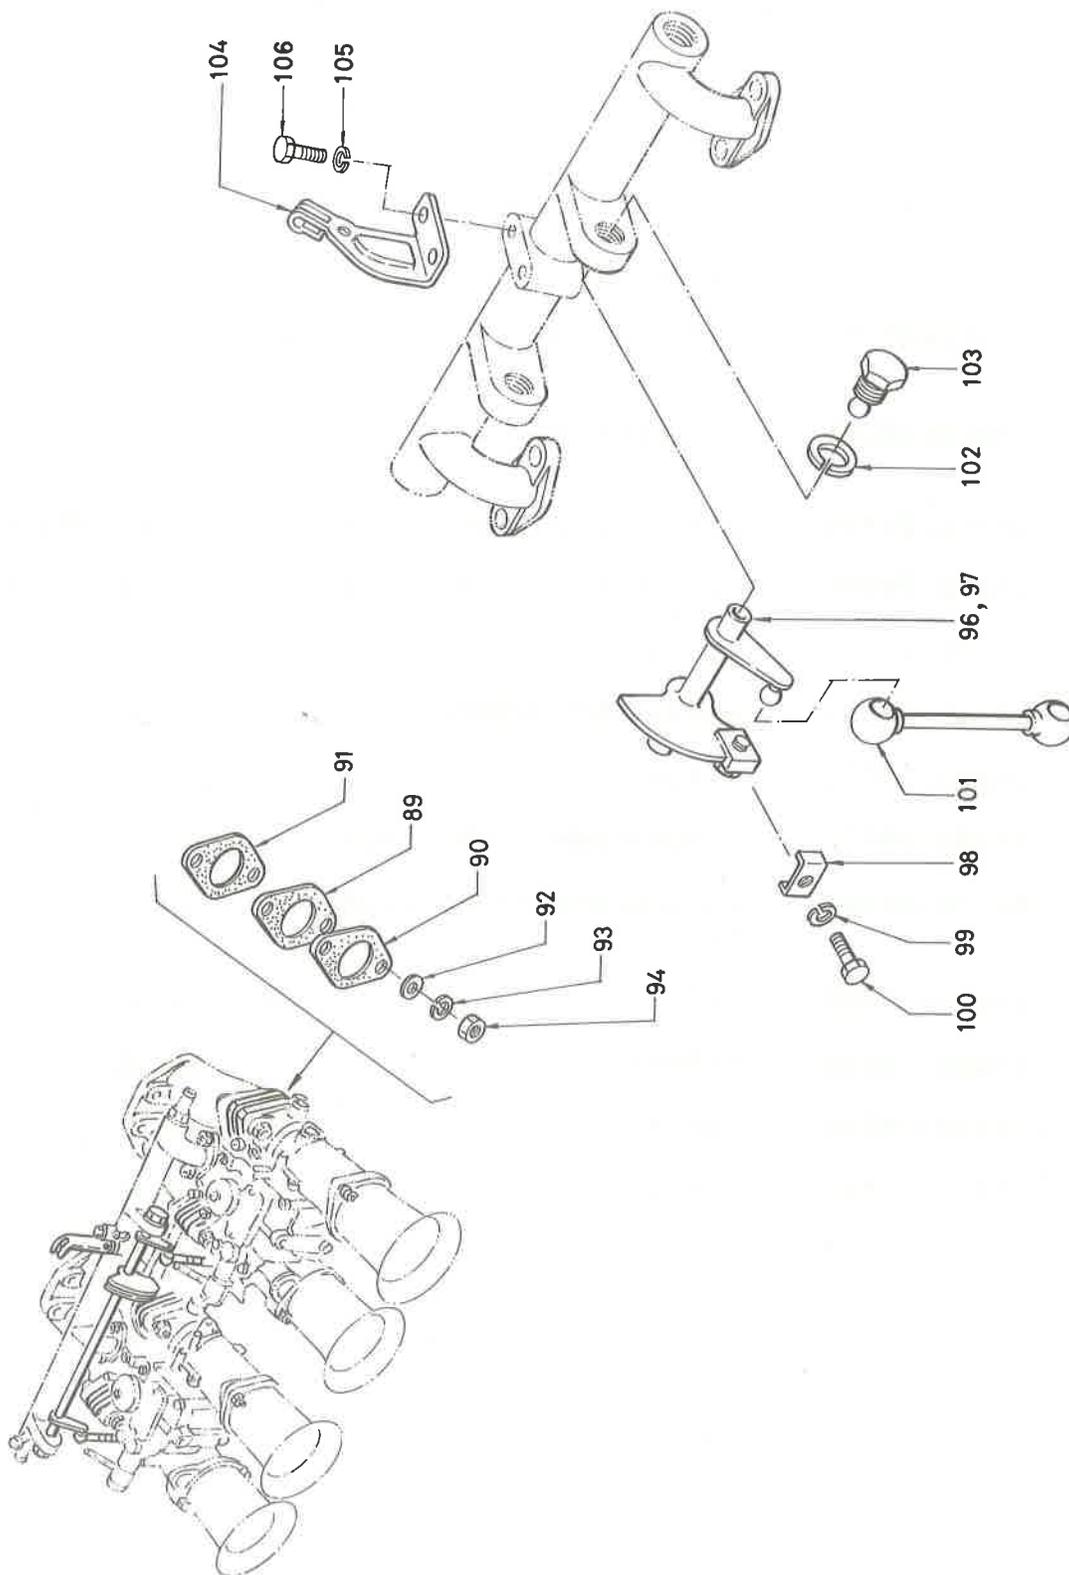


FIG. 8A

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>CARBURETOR (2L "SOLEX")</b>							
*	1	16010-25501	ASSY-CARBURETOR SOLEX	1	1	2L	
*	2	16010-25502	ASSY-CARBURETOR SOLEX	1		2L	Y
*	3	16010-25503	ASSY-CARBURETOR SOLEX	1	1	2L EXC, FRANCE	Y
	4	16010-25505	ASSY-CARBURETOR SOLEX	1		2L EXC FRANCE	Y
	5	16010-25504	ASSY-CARBURETOR SOLEX	1	1	2L FRANCE	N
	6	16010-25506	ASSY-CARBURETOR SOLEX	1		2L FRANCE	Y
	7	16100-25520	ASSY-CARBURETOR, FRONT	1	1	2L	
	8	16100-25521	ASSY-CARBURETOR, REAR	1	1	2L	
	9	16263-25520	SEAL-8	8	10	2L	
	10	16133-25520	LEVER-CONNECTING, FRONT	1	10	2L	
	11	16134-25520	ASSY-LEVER THROTTLE, REAR	1	10	2L	
	12	16169-25520	NUT	2	10	2L	
	13	16126-25520	WASHER	4	10	2L	
	14	16124-25520	NUT-8	4	10	2L	
	15	16114-25520	SCREW	1	10	2L	
	16	16132-25520	NUT	1	10	2L	
	17	16184-25520	ROD-PUSH	1	10	2L	
	18	16145-25520	SPRING-ADJUST SCREW	1	10	2L	
	19	16292-25520	RING-SNAP	1	10	2L	
	20	16031-25520	PLUG	4	10	2L	
	21	16094-25520	WASHER-12	4	10	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	22	16013-25520	VENTURI-SMALL	4	1	2L	
	23	16130-25520	GASKET-VENTURI, SMALL	4	10	2L	
	24	16016-25520	SCREW-SET, VENTURI	8	10	2L	
	25	16015-25520	WASHER	8	10	2L	
	26	16018-25520	NUT	8	10	2L	
	27	16061-25520	ASSY-FLOAT	2	1	2L	
	28	16066-25520	PIN-FLOAT	2	10	2L	
	29	16059-25520	JET-STARTER	2	10	2L	
	30	16163-25520	BLOCK-JET	4	10	2L	
	31	16036-25520	JET-MAIN AIR BLEED	4	10	2L	
	32	16033-25520	JET-MAIN #160	4	10	2L	
	33	16034-25520	JET-MAIN #155 (1000M)	4	10	OP 2L	
	34	16034-25521	JET-MAIN #150 (2000M TO 3000M)	4	10	OP 2L	
	35	16034-25522	JET-MAIN #145 (4000M)	4	10	OP 2L	
	36	16189-25520	JET-SLOW	4	10	2L	
	37	16189-25521	JET-SLOW #60	4	10	OP 2L	
	38	16189-25522	JET-SLOW #55	4	10	OP 2L	
	39	16219-25520	BALL-PUMP, VALVE	4	10	2L	
	40	16285-25520	WEIGHT-PUMP, VALVE	4	10	2L	
	41	16286-25520	PLUG-PUMPPASSAGE	4	10	2L	
	42	16125-25520	COVER-FLOAT, CHAMBER	2	5	2L	
	43	16064-25520	GASKET-COVER, FLOAT	2	10	2L	
	44	16139-25520	SPRING-STOP	4	10	2L	
	45	16101-25520	ASSY-VALVE NEEDLE	2	5	2L	
	46	16094-25520	WASHER-12	2	10	2L	

FIG. 8A

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	47	16111-25520	NIPPLE-FUEL	2	5	2L	
	48	16076-25520	WASHER-12	4	10	2L	
	49	16098-25520	ASSY-FILTER	2	10	2L	
	50	16108-25520	BOLT-FILTER, SET	2	10	2L	
	51	16113-25520	COVER-JET, CHAMBER	2	10	2L	
	52	16299-25520	GASKET-COVER JET, CHAMBER	2	10	2L	
	53	16164-25520	SCREW-COVER, SET	4	10	2L	
	54	17638-25520	DISK-STARTER	2	5	2L	
	55	17639-25520	SPRING-STARTER	2	5	2L	
	56	17640-25520	COVER-STARTER	2	1	2L	
	57	16241-25520	BOLT	2	10	2L	
	58	16221-25520	COLLAR-CABLE, SET	2	10	2L	
	59	16292-25520	RING-SNAP	4	10	2L	
	60	16217-25520	WASHER-6	2	10	2L	
	61	16162-25520	BRACKET-SPRING, THROTTLE	1	5	2L	
	62	16160-25520	SPRING-THROTTLE	1	5	2L	
	63	16165-25520	ASSY-BRACKET, STARTER	1	5	2L	
	64	16185-25520	SCREW	8	10	2L	
	65	16220-25520	WASHER-5, 3	8	10	2L	
	66	16069-25520	PLATE-SEPARATE	2	5	2L	
	67	17620-25520	BODY-PUMP	2	10	2L	
	68	17618-25520	GASKET-PUMP, BODY	2	5	2L	
	69	17617-25520	ASSY-DIAPHRAGM, PUMP	2	1	2L	
	70	16140-25520	SPRING-DIAPHRAGM	2	10	2L	
	71	17619-25520	ASSY-COVER, PUMP	2	5	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	72	16223-25520	SCREW	8	10	2L	
	73	16223-25521	SCREW-4	4	10	2L	
	74	16157-25520	SPRING-PUMP	2	10	2L	
	75	16215-25520	WASHER	2	10	2L	
	76	16091-25520	PIN-COTTER	2	10	2L	
	77	16030-25520	PLUG-PUMP, PASSAGE	2	10	2L	
	78	16029-25520	WASHER-8	2	10	2L	
	79	16244-25520	FUNNEL-AIR	4	5	2L	
	80	16131-25520	NUT	8	10	2L	
	81	16273-25520	WASHER-SPRING	8	10	2L	
	82	16214-25520	SCREW-ADJUST, IDLE	4	10	2L	
	83	16145-25520	SPRING-ADJUST, SCREW	4	10	2L	
	84	16287-25520	BRACKET-STOP, SCREW	1	10	2L	
	85	16077-25520	SCREW-5	2	10	2L	
	86	16129-25520	SCREW-STOP, THROTTLE	1	10	2L	
	87	16145-25520	SPRING-ADJUST, THROTTLE	1	10	2L	
*	88	16174-25500	INSULATOR	4	1	2L	
	89	16174-25501	INSULATOR	4	1	2L	Y
	90	16176-20100	GASKET-INSULATOR, CARBU RETOR SIDE	4	10	2L	
	91	16175-25500	GASKET-INSULATOR, MANIF OLD SIDE	4	10	2L	
	92	08915-43610	WASHER-PLAIN	16	50	2L	
	93	08915-13510	WASHER-SPRING	16	50	2L	
	94	08911-20810	NUT-M8 X 1,0	16	50	2L	
	95	14330-25500	PLATE-HEAT SHIELD, CARB URETOR.	1	1	2L	

FIG. 8A

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	96	16361-25500	ASSY-SHAFT, THROTTLE	1	1	2L	
*	97	16362-25500	ASSY-DRUM, THROTTLE	1		2L	
	98	16364-14601	CLIP-THROTTLE WIRE	1	10	2L	
	99	08915-13510	WASHER-SPRING	1	50	2L	
	100	08360-51210	SCREW-M5 X 0,8 FOR SOLEX	1	25	2L	
	101	16370-25500	ROD-CONNECTING L61 FOR SOLEX	1	5	2L	
	102	08915-14210	WASHER-SPRING FOR SOLEX	2	50	2L	
	103	16380-18810	BOLT-BALL JOINT M12 X 1,25 FOR SOLEX	2	10	2L	
	104	16376-25500	BRACKET-THROTTLE WIRE FOR SOLEX	1	5	2L	
	105	08915-13510	WASHER-SPRING FOR SOLEX	2	50	2L	
	106	08360-51410	SCREW-M5 X 0,8 FOR SOLEX	2	50	2L	
	107	14062-25600	PLATE-HEAT SHIELD (FROM OCT-67)	1	1	SRLU	
	108	16111-25610	VALVE-FUEL RETURN	1	1	2L	

# NOTE

---

---

---



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---

---

### CARBURETOR (2 L "SU")

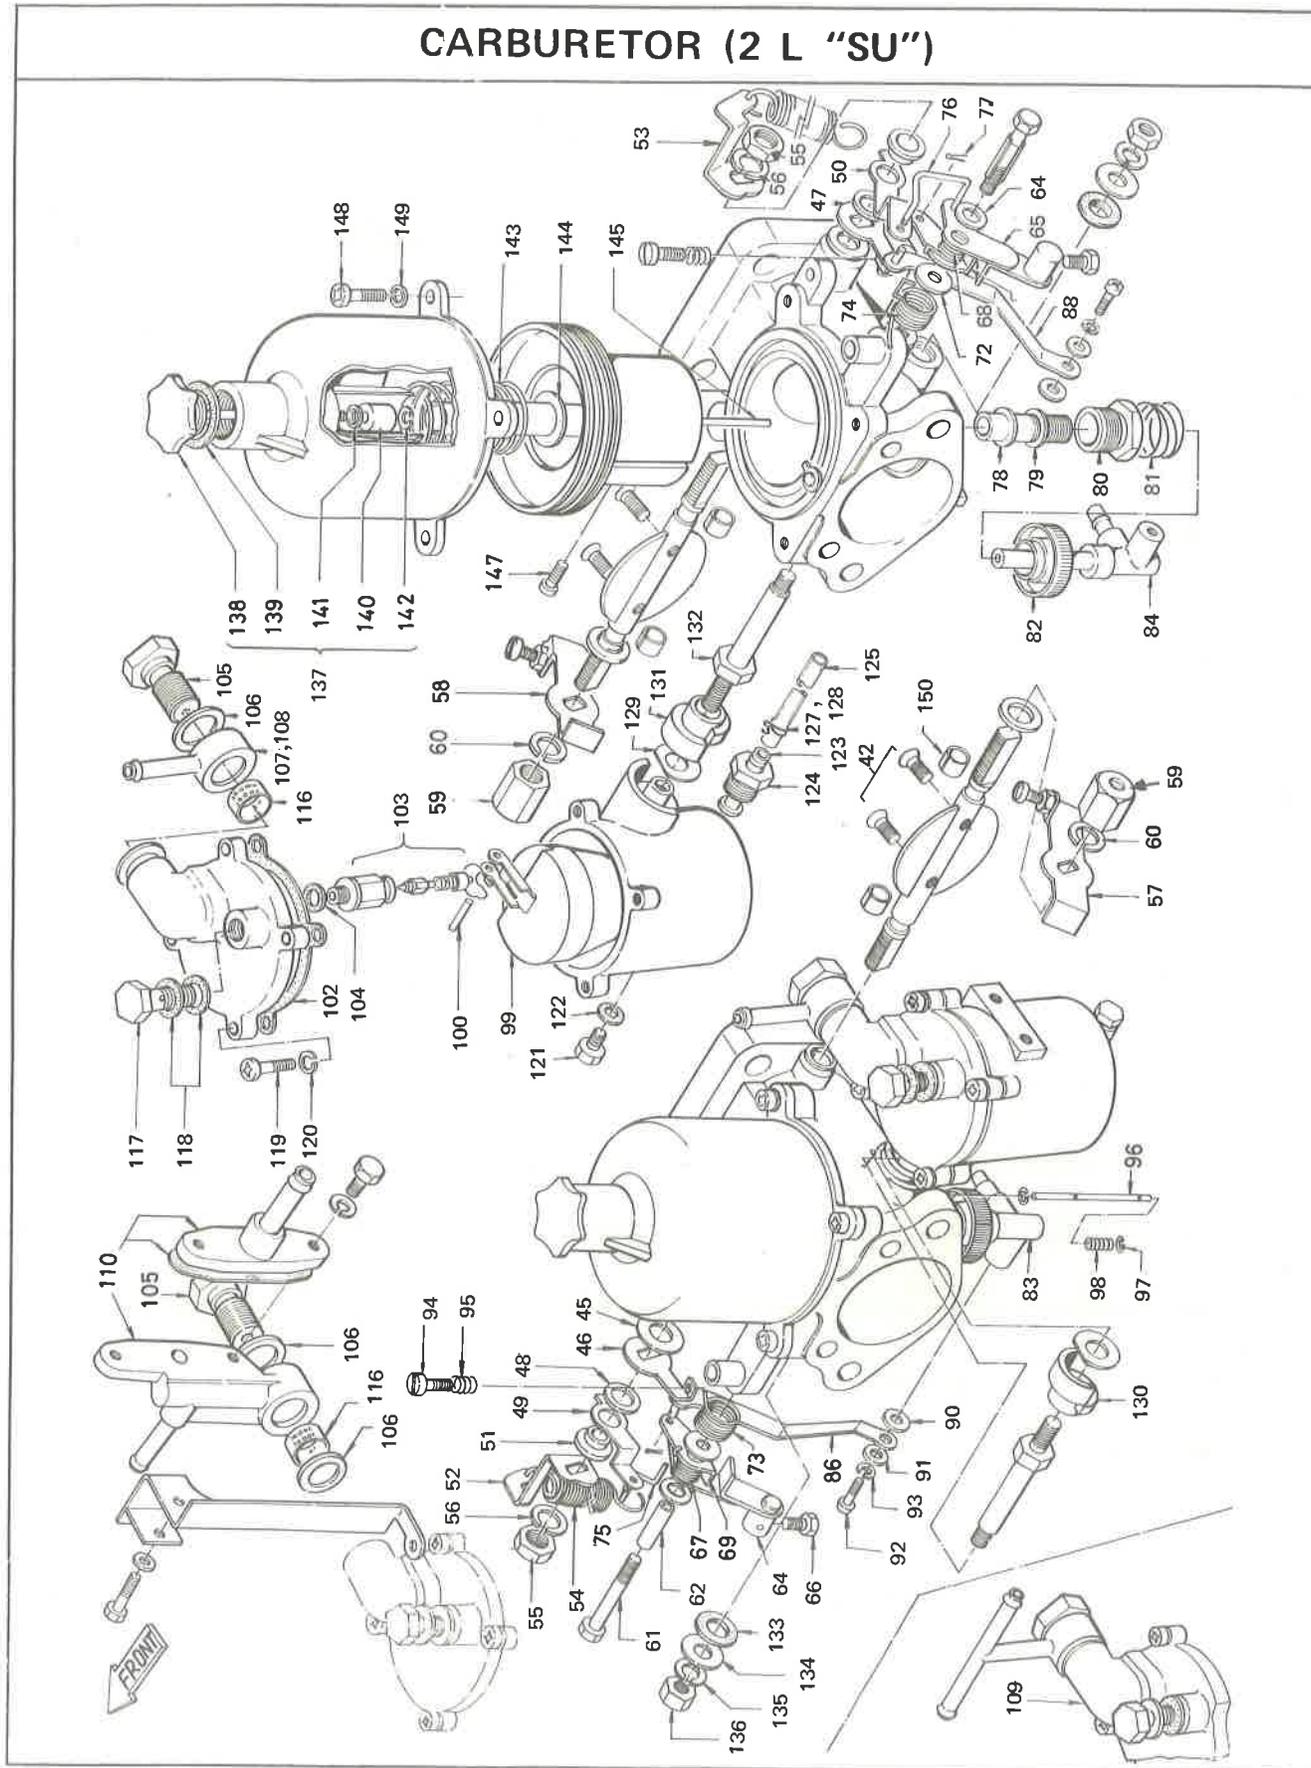

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>CARBURETOR (2L "SU")</b> EXHAUST signifies ONTARIO and USA except CAL. EVAPO signifies CALIFORNIA in USA.							
	1	16010-25602	ASSY-CARBURETOR SU	1	1	2L	
	2	16010-25603	ASSY-CARBURETOR (ISO)	1	1	2L	Y
	3	16010-A7810	ASSY-CARBURETOR (ISO)	1		2L	N
	4	16010-A7811	ASSY-CARBURETOR	1	1	2L EXC EXHAUST & EVAPO	Y
	5	16010-A7831	CARBURETOR FRONT	1	1	2L EXHAUST & EVAPO	
	6	16010-A7851	CARBURETOR REAR	1	1	2L EXC EXHAUST & EVAPO	
*	7	16010-25611	ASSY-CARBURETOR (FROM OCT-67) SU	1	1	SRLU	
*	8	16010-25612	ASSY-CARBURETOR SU (ISO)	1	1	SRLU	Y
	9	16010-25613	ASSY-CARBURETOR SU (ISO)	1	1	SRLU	Y
*	10	16010-A7800	ASSY-CARBURETOR SU (HJB-46W) (FROM JULY- 69)	1		2L EXHAUST & EVAPO	N
	11	16010-A7801	ASSY-CARBURETOR SU (HJG46W-7)	1	1	2L EXHAUST & EVAPO	Y
*	12	16010-A7841	CARBURETOR FRONT	1	1	2L EXHAUST & EVAPO	
*	13	16010-A7842	CARBURETOR FRONT	1	1	2L EXHAUST & EVAPO	Y
	14	16010-A7891	CARBURETOR REAR	1		2L EXHAUST & EVAPO	
	15	16010-A7892	CARBURETOR REAR	1		2L EXHAUST & EVAPO	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	16	16174-25600	INSULATOR	2	1	2L	
	17	16031-25600	TUBE-OVER FLOW 230 MM	2	5	2L	
	18	08915-43610	WASHER-PLAIN	8	50	2L	
	19	08915-13510	WASHER-SPRING	8	50	2L	
	20	08911-20810	NUT-M8X1	8	50	2L	
	21	14330-25600	PLATE-HEATSHIELD	1	1	2L	
	22	08915-43610	WASHER-PLAIN	2	50	2L	
	23	08915-13510	WASHER-SPRING	2	50	2L	
	24	08120-81210	BOLT M8X1	2	50	2L	
	25	16361-25600	SHAFT-THROTTLE	1	1	2L	
*	26	16362-25500	DRUM-THROTTLE	1		2L	
	27	16361-25500	DRUM-THROTTLE	1	1	2L	Y
	28	16364-14601	CLIP-THROTTLE WIRE	1	10	2L	
	29	08915-13510	WASHER-SPRING	1	50	2L	
	30	08360-51210	SCREW M5X0,8	1	25	2L	
	31	16370-25600	ROD-CONNECTING 56 MM	1		2L	
*	32	16381-25600	SHAFT-THROTTLE	1	1	2L	
	33	16381-25601	SHAFT-THROTTLE	1	1	2L	Y
	34	16378-14600	SPRING-ADJ SCREW	2	10	2L	
	35	16379-14601	SCREW-THROTTLE ADJUST	1	10	2L EXC, SRLU	
	36	16379-25699	SCREW-THROTTLE ADJUST	1		SRLU	
	37	08915-14210	WASHER-SPRING	2	50	2L	
	38	16380-18810	BOLT-BALL JOINT M12X12 .5	2	10	2L	
	39	16376-25600	BRACKET-THROTTLE WIRE	1	5	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	40	16376-25601	BRACKET-ACCELE WIRE (FROM OCT-67)	1	5	SRLU	
	41	08915-13510	WASHER-SPRING	2	50	2L	
	42	08360-51410	SCREW M8X0.8	2	50	2L	
	43	16263-25610	SEAL	1	10	2L	
	44	16121-25610	SCREW 4 MM	4	10	2L	
	45	16142-25610	FILTER-THROTTLE SHAFT	4	10	2L	
	46	16127-25610	LEVER-ADJUST A	1	5	2L	
	47	16127-25611	LEVER-ADJUST B	1	5	2L	
	48	16084-14610	WASHER 8 MM	2	10	2L	
	49	16277-25610	LEVER-FAST IDLE A	1	5	2L	
	50	16277-25611	LEVER-FAST IDLE B	1	5	2L	
	51	16239-14610	SLEEVE	2	1	2L	
	52	16247-25610	HANGER-SPRING A	1	10	2L	
	53	16247-25611	HANGER-SPRING B	1	5	2L	
	54	16194-25610	SPRING-THROTTLE	2	5	2L	
	55	16214-85060	NUT 8 MM	2	10	2L	
	56	23109-30000	WASHER-SPRING	2	10	2L	
	57	16134-25610	LEVER-THROTTLE A	1	5	2L	
	58	16134-25611	LEVER-THROTTLE	1	5	2L	
	59	16214-25610	NUT 8 MM	2	10	2L	
	60	23109-30000	WASHER-SPRING	2	10	2L	
	61	16185-10400	BOLT	2	10	2L	
	62	16076-14610	WASHER-SPRING	2	10	2L	
	63	16217-10401	WASHER 7 MM	4	10	2L	
	64	16238-25610	LEVER-CHOKE A	1	5	2L	

NISSAN MOTOR CO., LTD.

FIG. 8B

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
		16238-25611	LEVER-CHOKE B	1	5	2L	
65		16185-14610	BOLT 5 MM	2	10	2L	
66		16157-73410	SPRING-CONNECTING A	1	10	2L	
67		16157-14610	SPRING-CONNECTING B	1	10	2L	
68		16147-73411	PLATE-CONNECTING A	1	5	2L	
69		16147-14611	PLATE-CONNECTING B	1	5	2L	
70		16116-14610	SLEEVE	2	10	2L	
71		16072-14610	WASHER 5 MM	2	10	2L	
72		16190-73410	SPRING-RETURN A	1	10	2L	
73		16190-10401	SPRING-RETURN B	1	10	2L	
74		16248-25610	ROD-CONNECTING A	1	10	2L	
75		16248-25611	ROD-CONNECTING B	1	10	2L	
76		16091-10560	PIN-COTTER	4	10	2L	
77		16351-10400	SLEEVE-NOZZLE	2	5	2L	
78		16130-25610	WASHER-10	2	10	2L	
79		16027-10400	SCREW-SET SLEEVE	2	5	2L	
80		16145-10400	SPRING-IDLE ADJUST	2	10	2L	
81		16145-25610	NUT-IDLE ADJUST	2	10	2L	
82		16355-25610	ASSY-NOZZLE,FRONT	1	2	2L	
83		16355-25611	ASSY-NOZZLE,REAR	1	2	2L	
84		16355-25612	ASSY-NOZZLE	2	2	2L	
85		16147-25610	PLATE-CONNECTING,FRONT	1	5	2L	
86		16147-25612	PLATE-CONNECTING,FRONT	1	5	2L	
87		16147-25611	PLATE-CONNECTING,REAR	1	5	2L	
88		16147-25613	PLATE-CONNECTING,REAR	1	5	2L	
89		22185-50000	WASHER-40	2	10	2L	
90							

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	91	16123-14610	SLEEVE	2	1	2L	
	92	23552-09400	SCREW-4D	2	10	2L	
	93	22156-85060	WASHER-SPRING 4D	2	100	2L	
	94	16114-25610	SCREW-ADJUST THROTTLE	2	10	2L	
	95	16193-10400	SPRING-ADJUST SCREW	2	5	2L	
	96	16324-10400	LIFTER-PISTON	2	10	2L	
	97	16326-10400	RING E	4	10	2L	
	98	16325-10400	SPRING-LIFTER	2	5	2L	
	99	16061-25610	ASSY-FLOAT	2	1	2L	
	100	16066-25610	SHAFT-FLOAT	2	10	2L	
*	101	16064-10400	GASKET-FLOAT CHAMBER	2	10	2L	
	102	16064-22010	GASKET-FLOAT CHAMBER	2	10	2L	Y
	103	16101-25610	ASSY-VALVE, NEEDLE	2	10	2L	
	104	16094-25610	WASHER-6D	2	10	2L	
	105	16108-18010	BOLT-FILTER	2	5	2L	
	106	16094-76500	WASHER-12D	4	10	2L	
*	107	16111-35210	NIPPLE-FUEL	2	5	2L EXC SRLU	
	108	16111-66810	NIPPLE-FUEL	2		2L EXC SRLU	Y
*	109	16111-25611	CONNECTOR FUFL FRONT	1	5	SRLU	
	110	16111-25610	VALVE FUEL RETURN ASSY REAR	1	1	SRLU	
*	111	16111-25613	VALVE FUEL RETURN ASSY REAR W/BRACKET FOR 16010-25613	1		SRLU	
*	112	16111-A7710	VALVE FUEL RETURN ASSY REAR W/BRACKET FOR 16010-A7800	1	1	SRLU	Y

FIG. 8B

## NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	113	16111-A7711	VALVE FUEL RETURN ASSY REAR W/BRACKET FOR1601 0-A7800	1		SRLU	Y
	114	16111-25614	KIT BRACKET FUEL CONNE CTOR FOR 16010-25611	1	5	SRLU	
	115	16111-25615	KIT BRACKET FUEL CONNE CTOR FOR 16010-25612	1	5	SRLU	N
	116	16098-73401	FILTER	2	10	2L	
	117	16331-10400	SCREW-SET NIPPLE	2	10	2L	
	118	16335-10400	PACKING-10	4	10	2L	
	119	16129-73013	SCREW-5D	8	10	2L	
	120	23502-30000	WASHER-SPRING	8	10	2L	
	121	16031-10560	PLUG-DRAIN	2	10	2L	
	122	16060-10400	WASHER-8D	2	10	2L	
	123	16357-12210	SLEEVE	2	10	2L	
	124	16359-12210	NUT-SLEEVE	2	10	2L	
	125	16356-12210	PIPE-FUEL	2	10	2L	
	126	16356-25610	PIPE-FUEL	2	5	2L	
	127	16358-12211	CLIP	4	10	2L	
	128	16358-E4310	CLIP	4		2L	Y
	129	16217-25610	WASHER	2	10	2L	
	130	16227-25610	ADAPTER-GUM,FRONT	1	10	2L	
	131	16227-25611	ADAPTER-GUM,REAR	1	10	2L	
	132	16322-25610	BOLT-8D	2	10	2L	
	133	16228-25610	WASHER-GUM	2	10	2L	
	134	16218-25610	WASHER-6D	2	10	2L	
	135	22203-50000	WASHER-SPRING	2	50	2L	
	136	16088-25610	NUT-6D	2	10	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	137	16341-25610	ASSY-NUT,CAP	2	2	2L	
	138	16341-10410	NUT-OIL CAP	2	10	2L	
	139	16342-10400	PACKING-180	2	5	2L	
	140	16343-12210	PLUNGER-OIL DAMPER	2	5	2L	
	141	16344-10400	WASHER	2	5	2L	
	142	16345-10400	RING-C	2	10	2L	
	143	16346-25610	SPRING-SUCTION	2	5	2L	
	144	16347-10400	PACKING	2	5	2L	
	145	16354-25610	JET-NEEDLE	2	10	2L	
	146	16354-25611	JET-NEEDLE	2	10	2L	
	147	16219-10400	SCREW-SET NEEDLE JET	2	10	2L	
	148	16129-73013	SCREW-5D	8	10	2L	
	149	23502-30000	WASHER-SPRING	8	10	2L	
	150	16263-25610	SEAL	4	10	2L	

**NOTE**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---


---



AIR CLEANER (2 L "SOLEX" EXC FRANCE)

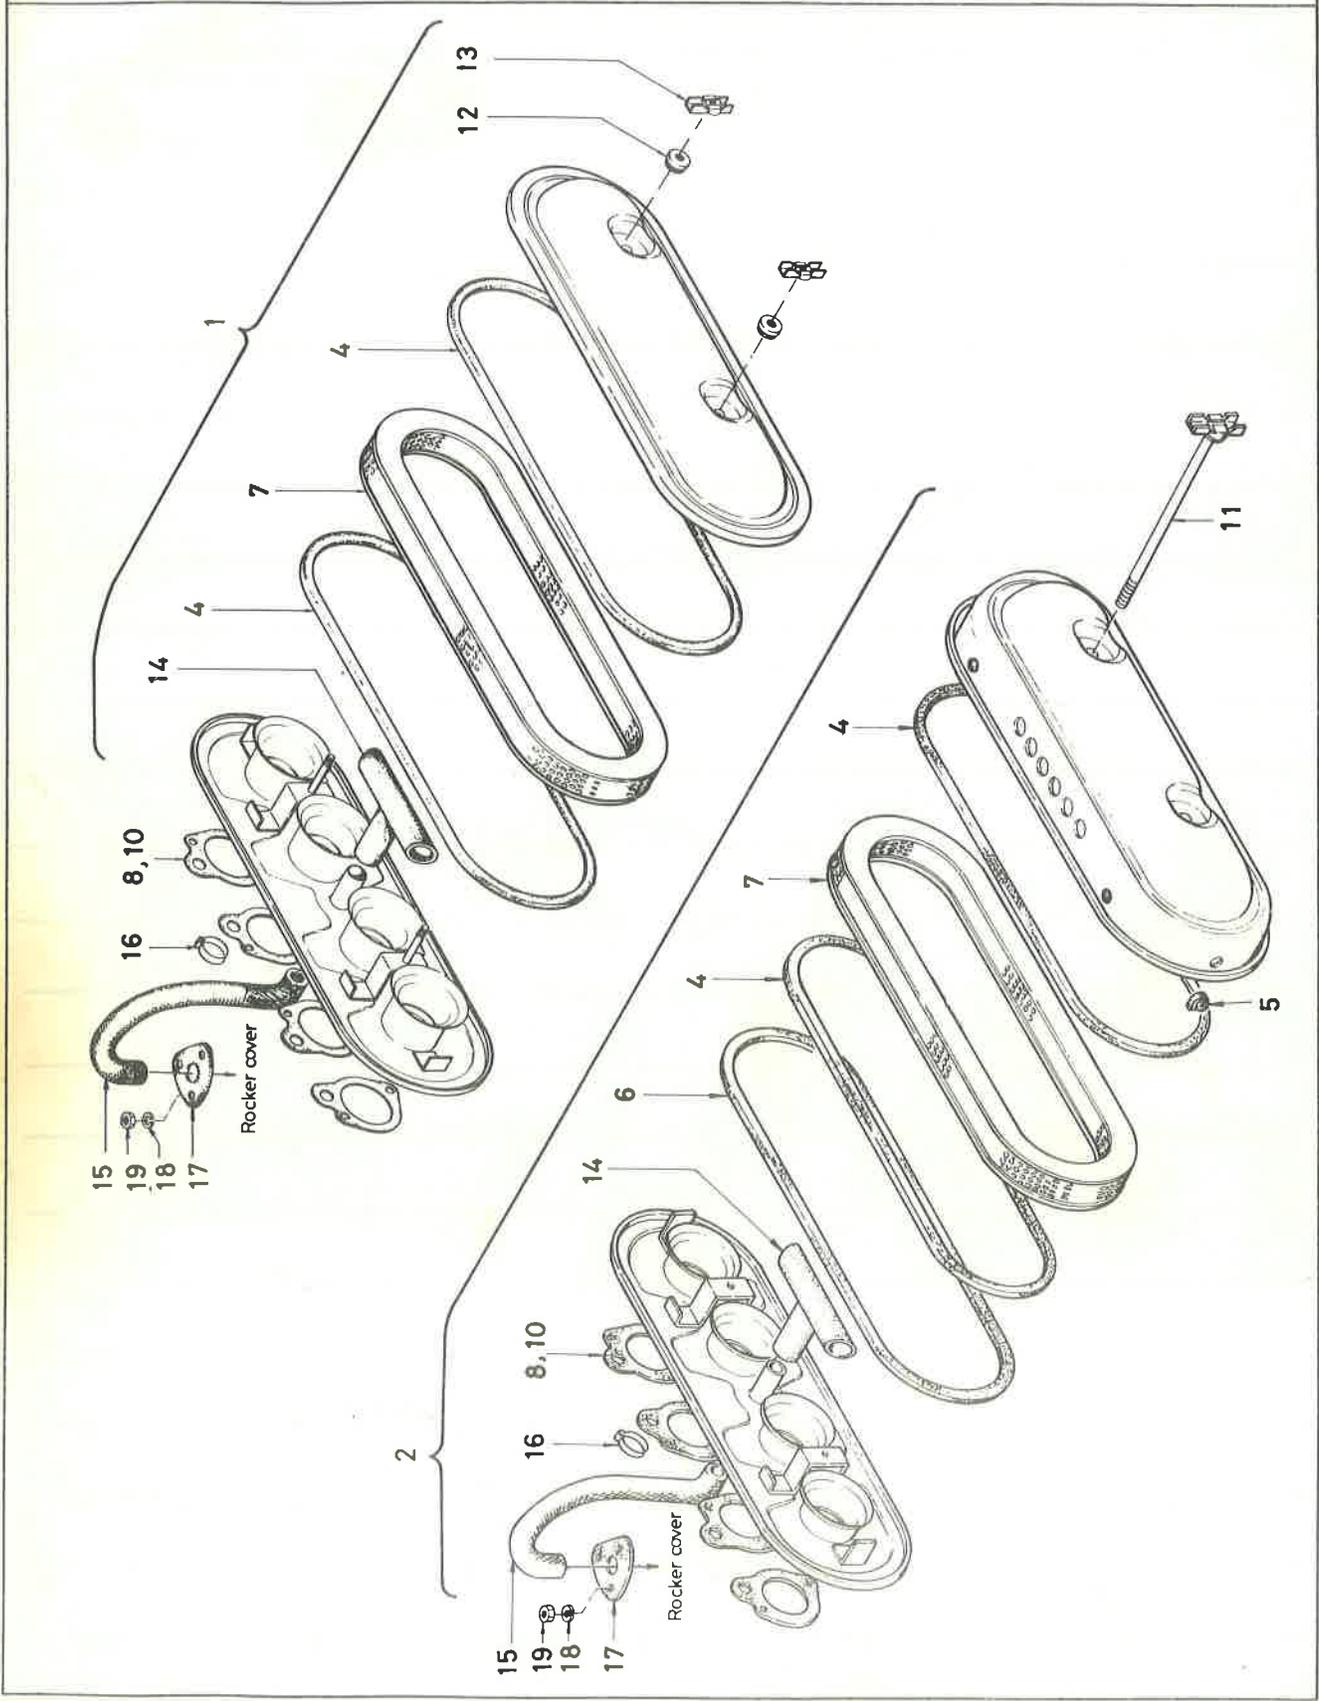

AIR CLEANER (FOR FRANCE)

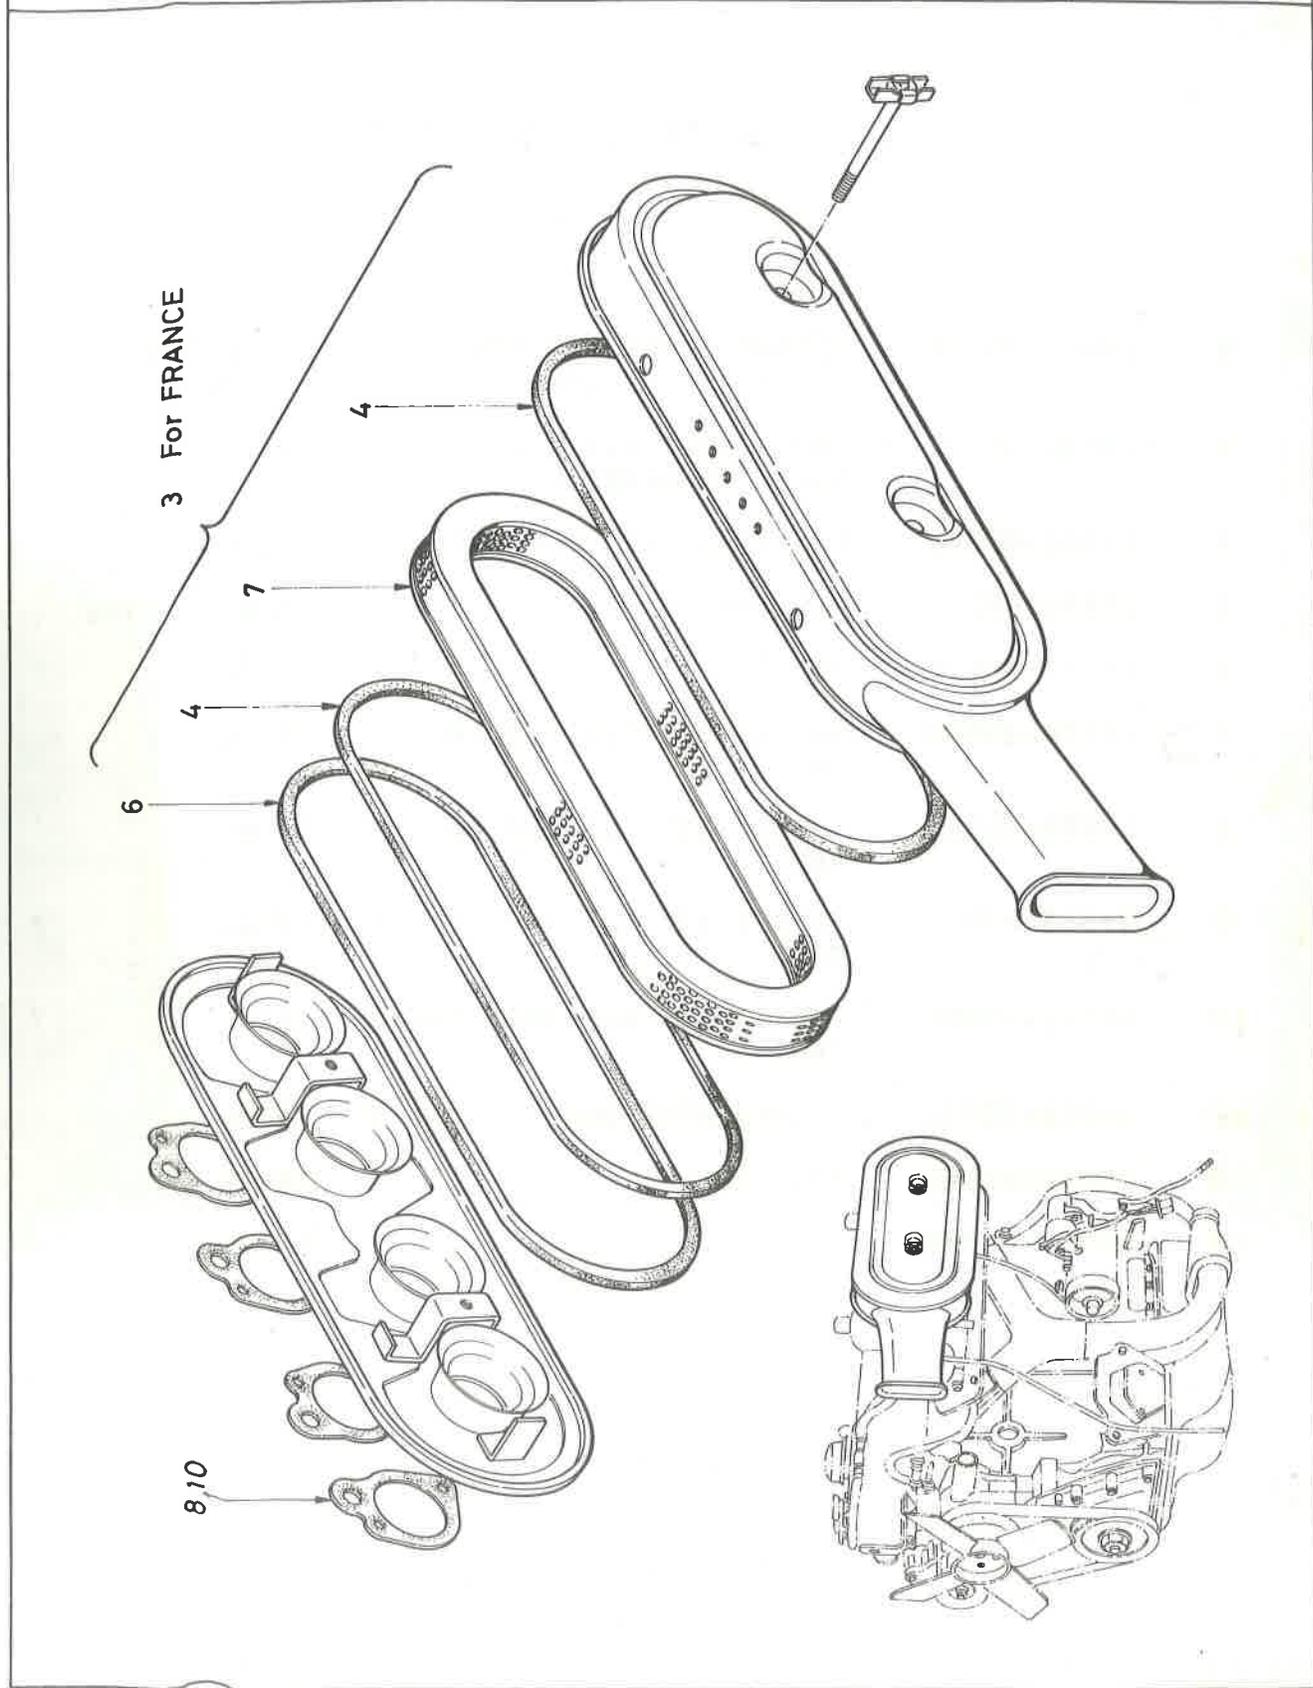

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>AIR CLEANER (2L "SOLEX")</b>				
*	1	16500-25500	ASSY-CLEANER, AIR FOR SOLEX CARBURETOR	1	1	2L EXC FRANCE	
	2	16500-25501	ASSY-CLEANER, AIR FOR SOLEX CARBURETOR	1	1	2L EXC FRANCE	
	3	16500-25502	ASSY-CLEANER, AIR FOR SOLEX CARBURETOR	1	1	2L FRANCE	Y
	4	16536-25500	PACKING-UPPER & LOWER	2	5	2L	
	5	16548-25501	PACKING	5	10	2L FRANCE	
	6	16547-25501	PACKING	1	5	2L	
	7	16546-25500	ASSY-ELEMENT, AIR CLEANER	1	1	2L	
	8	16523-20100	GASKET AIR CLEANER TO CAB	4	10	2L	
*	9	16523-25500	GASKET AIR CLEANER TO CAB	4	10	2L	Y
	10	16523-25501	GASKET AIR CLEANER TO CAB	4	10	2L	Y
	11	16516-25501	ASSY-CENTER BOLT	2	5	2L	
	12	16568-08000	PACKING	2	10	2L	
	13	16551-08000	NUT-WING	2	10	2L	
	14	16580-25500	HOSE-BREATHING PIPE	1		2L	
	15	16571-25500	HOSE-ROCKER COVER TO AIR CLEANER	1	5	2L	
	16	16572-10801	CLAMP-HOSE	1	10	2L	
	17	16568-25500	PACKING-COVER TO HOSE	1	10	2L	
	18	08915-13610	WASHER-SPRING M6	3	50	2L	
	19	08911-10610	NUT-HEXAGON M6 X 1.0	3	50	2L	

**NOTE**

---

---

---



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---

---

AIR CLEANER (2L "SU")

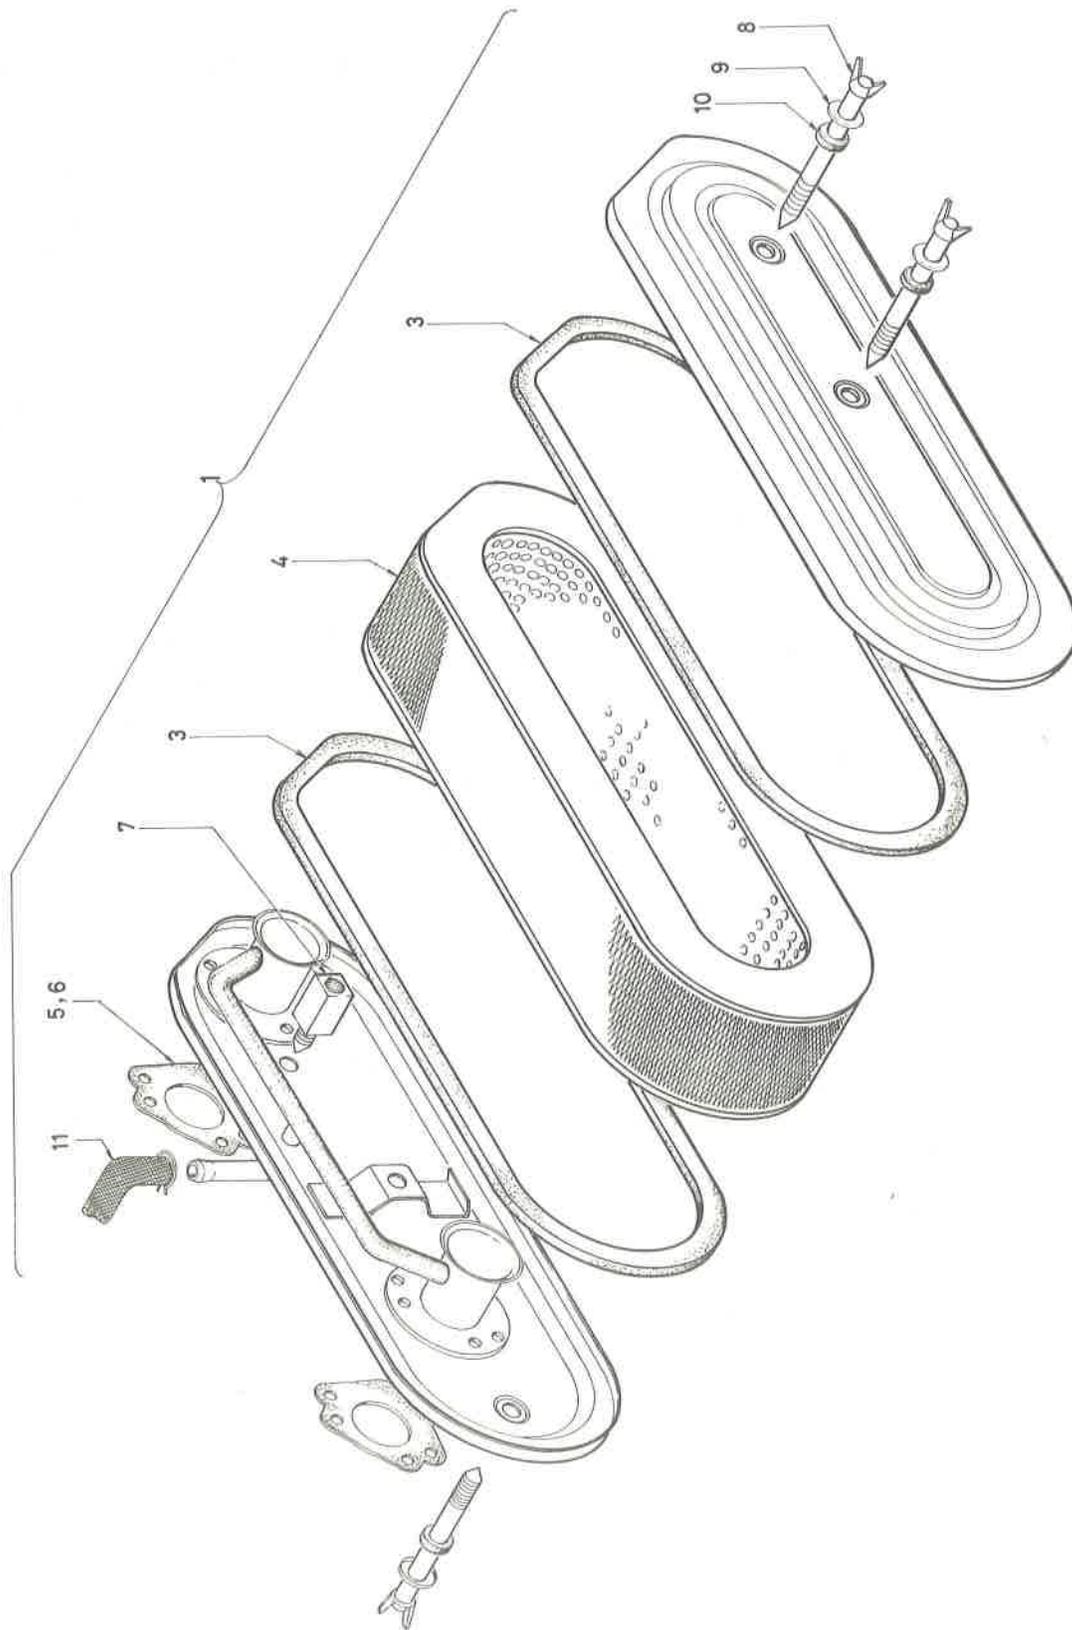

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>AIR CLEANER (2L "SU")</b>				
	1	16500-25600	ASSY-AIR CLEANER FOR SU	1	1	2L EXC EVAPO	
	2	16500-A7800	ASSY-AIR CLEANER FOR SU	1		2L EVAPO	
	3	16536-25600	PACKING-UPPER & LOWER	2	5	2L	
	4	16546-25600	ELEMENT-PAPER	1	1	2L	
	5	16523-25600	PACKING	2	10	2L	
	6	16523-E3210	PACKING	2		2L	Y
	7	16517-25600	CONNECTOR-SCREW	1	10	2L	
	8	16516-25600	BOLT-CENTER	3	10	2L	
	9	16555-37500	RETAINER	3	10	2L	
	10	16568-37500	PACKING	3	10	2L	
	11	16580-25600	HOSE-RUBBER	1	5	2L	

**NOTE**


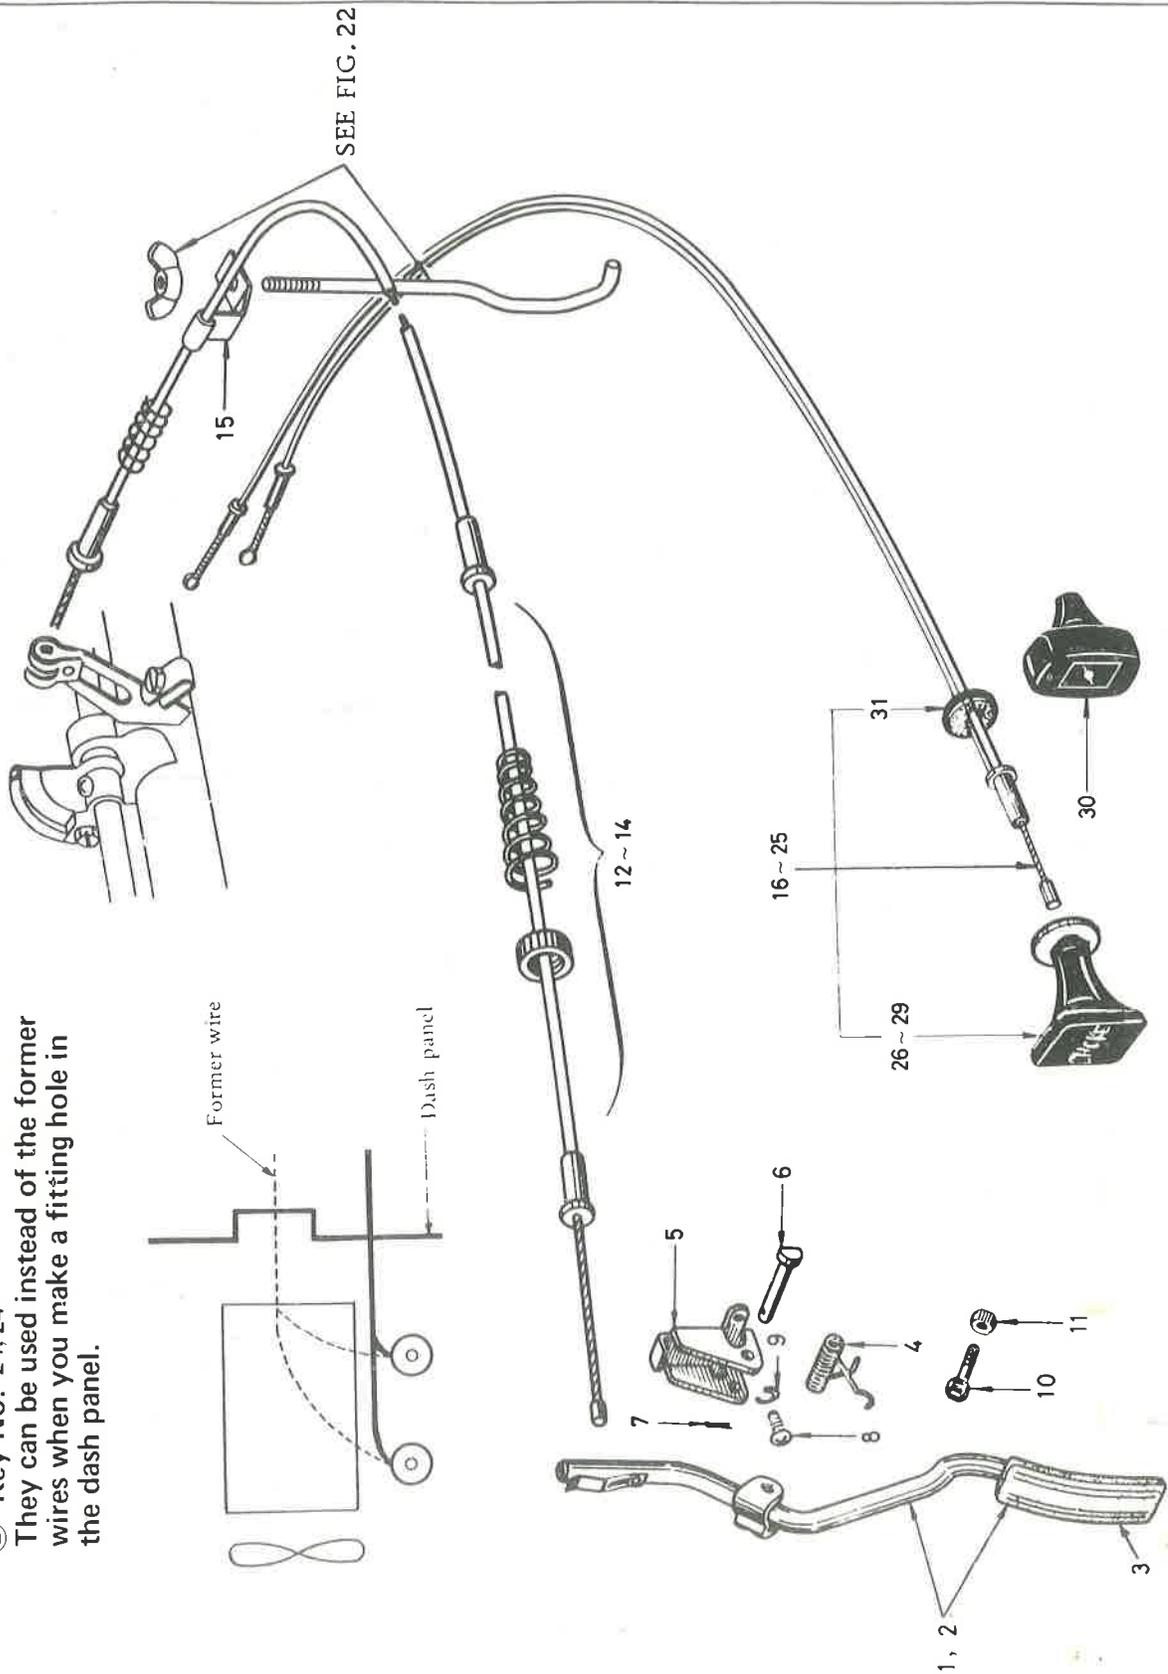


FIG. 12

NISSAN MOTOR CO., LTD.

ACCELERATOR LINKAGE (R DRIVE)

- Note:
- ① Key No. 18, 20, 23  
Only the shape of the knob is different.
  - ② Key No. 21, 24  
They can be used instead of the former wires when you make a fitting hole in the dash panel.

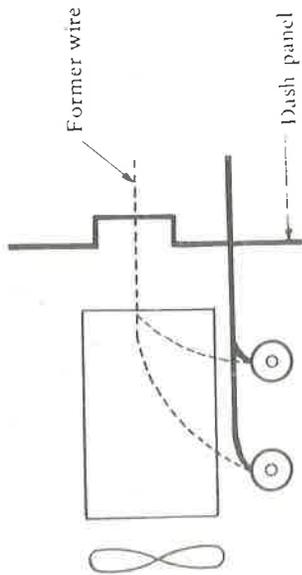

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>ACCELERATOR LINKAGE (R DRIVE)</b>							
	1	18010-14600	ASSY-ARM, PEDAL	1	1 SP		
	2	18010-25500	ASSY-ARM, PEDAL (FROM E/ # R-40001)	1	1 SP, SR		N
	3	18017-15800	PAD-PEDAL, ACCELERATOR	1	5 SP, SR		
	4	18138-10401	SPRING-RETURN, ACCELE TOR	1	5 SP, SR		
	5	18020-04100	BRACKET-ACCELERATOR PE DAL	1	1 SP, SR		
	6	18022-04100	PIN-ACCELERATOR PEDAL ARM	1	10 SP, SR		
	7	00921-11210	PIN-COTTER	1	50 SP, SR		
	8	00314-41410	SCREW	3	50 SP, SR		
	9	00915-11410	WASHER-LOCK	3	50 SP, SR		
	10	00124-42210	BOLT	1	50 SP, SR		
	11	00911-34410	NUT	1	50 SP, SR		
	12	18100-12201	ASSY-WIRE, ACCELERATOR	1	1 SP, SR		
	13	18100-25500	ASSY-WIRE, ACCELERATOR	1	1 SP		Y
	14	18100-25501	ASSY-WIRE, ACCELERATOR	1	1 SR		Y
	15	18128-14600	CLAMP-ACCELERATOR WIRE	1	5 SP, SR		
*	16	18410-14600	COMP-WIRE, CHOKE CONTROL (TO E/#R-40000)	1	SP		
	17	18410-14601	COMP-WIRE, CHOKE CONTROL (FROM E/#R-40001 TO SEP-67)	1	5 SP, SR		Y
*	18	18410-25900	COMP-WIRE, CHOKE CONTROL (FROM OCT-67 TO JUN- 69)	1	2 SR SOLEX		C

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	19	18410-A7400	COMP-WIRE,CHOKE CONTROL (FROM JULY-69)	1		SR SOLEX	Y
	20	18410-26001	COMP-WIRE,CHOKE CONTROL (FROM OCT-67 TO SEP-68)	1	2	SR SU	C
*	21	18410-A3200	COMP-WIRE,CHOKE CONTROL (FROM OCT-68)	1	5	SR SU	C
	22	18410-A7500	COMP-WIRE,CHOKE CONTROL (FROM JULY-69)	1		SR SU	Y
	23	18410-14603	WIRE CHOKE CONTROL (FROM OCT-67 TO SEP-68)	1	1	SP SU	C
*	24	18410-A3201	WIRE CHOKE CONTROL (FROM OCT-68 TO JUN-69)	1	5	SP SU	C
	25	18410-A7410	WIRE CHOKE CONTROL (FROM JULY-69)	1		SP SU	Y
*	26	18415-13200	KNOB CHOKE WIRE(TO E/# R-40000)	1	5	SP	
	27	18415-A0601	KNOB CHOKE WIRE(TO E/# R-40000)	1		SP	Y
	28	18415-25500	KNOB CHOKE WIRE(FROM E/#R-40001 TO SEP-67)	1	5	SR	N
*	29	18415-25900	KNOB CHOKE WIRE(FROM OCT-67)	1	5	R DRIVE	N
	30	18415-A7400	KNOB CHOKE WIRE (FROM JULY-69)	1		R DRIVE	Y
	31	18417-15800	GROMMET RUBBER	1	5	R DRIVE	


**NOTE**



FIG. 13

NISSAN MOTOR CO., LTD.

ACCELERATOR LINKAGE (L DRIVE)

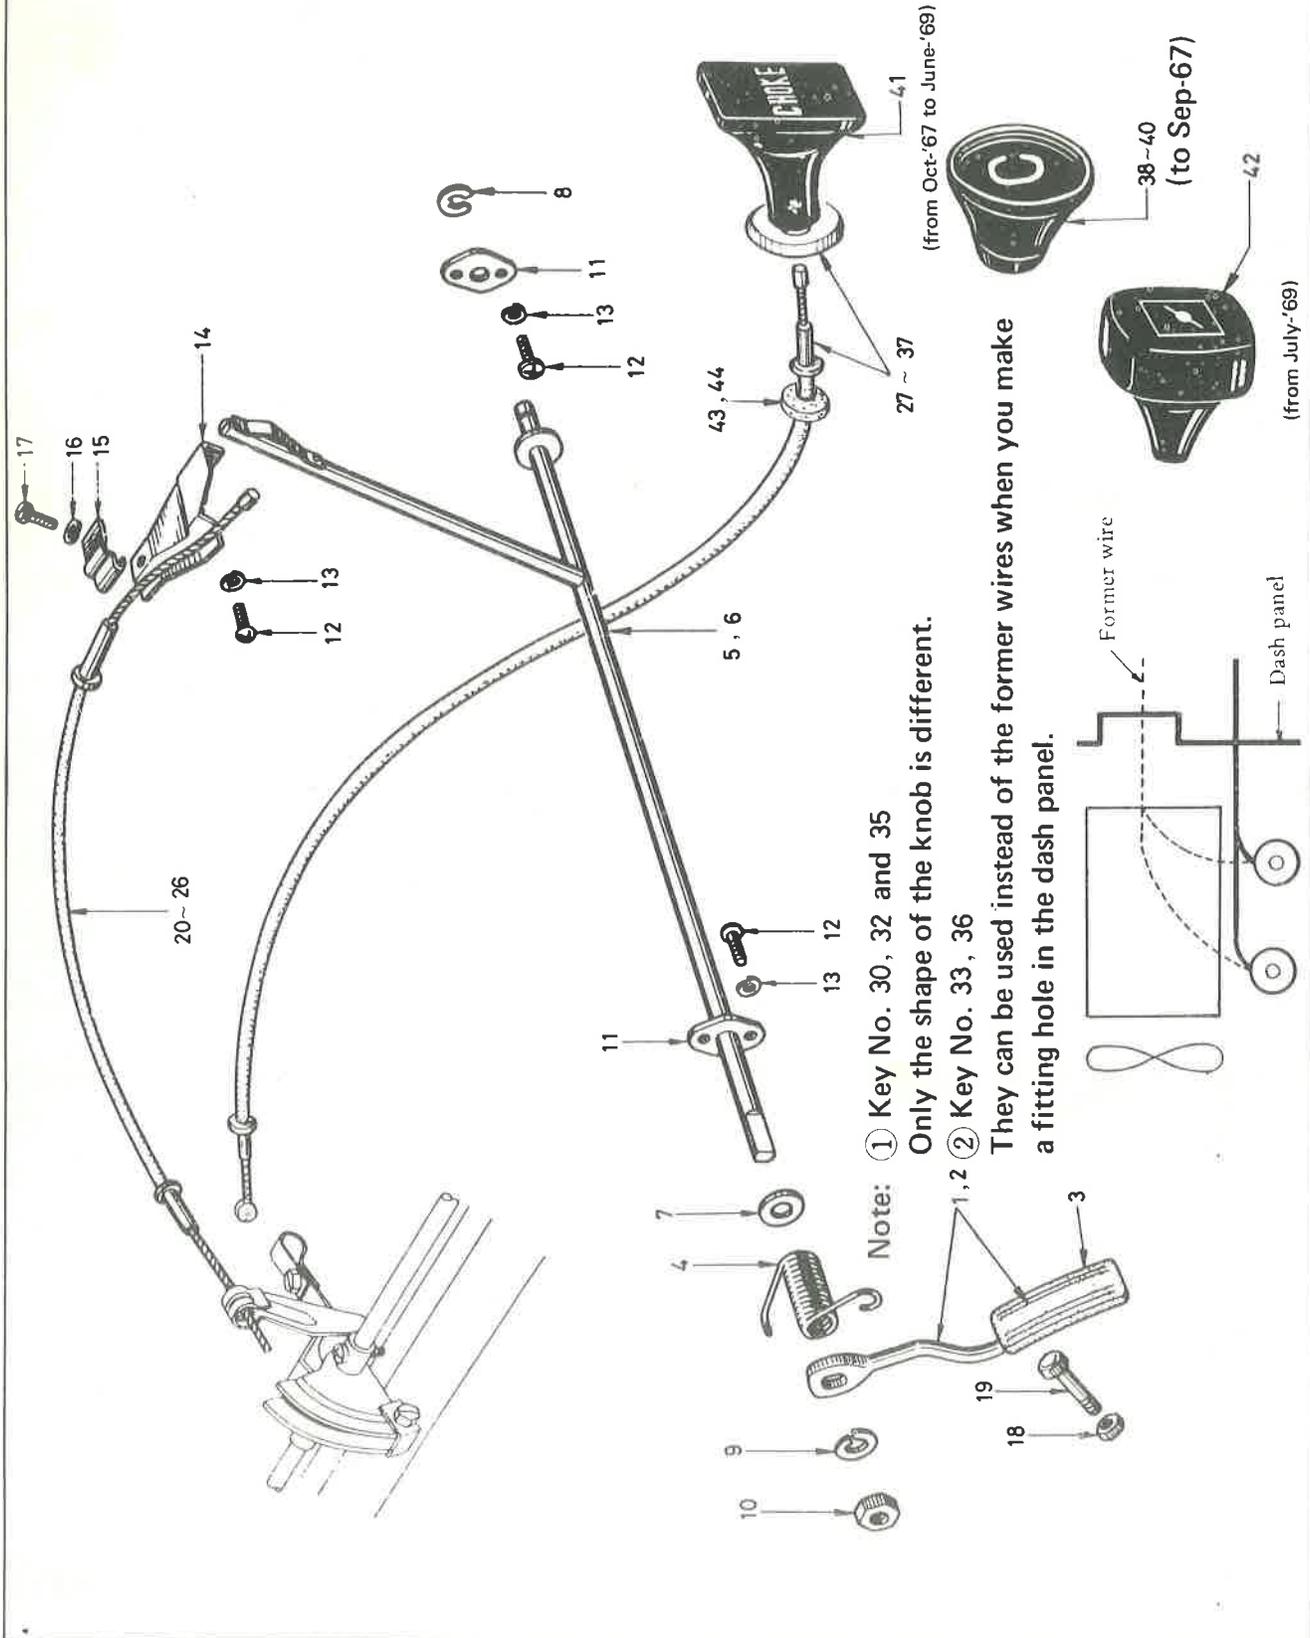

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
		<b>ACCELERATOR LINKAGE (L DRIVE)</b>					
*	1	18010-14700	ASSY-ARM, PEDAL	1	1	SPL, SRL	
	2	18010-25600	ASSY-ARM, PEDAL	1	1	SPL, SRL	Y
	3	18017-15800	PAD-PEDAL, ACCELERATOR	1	5	SPL, SRL	
	4	18138-14700	SPRING-RETURN, ACCELERATOR	1	10	SPL, SRL	
	5	18400-12300	ASSY-SHAFT, CROSS, ACCELERATOR	1	1	SPL	
	6	18400-25600	ASSY-SHAFT, CROSS, ACCELERATOR (FROM E/# R-4000 1)	1	1	SPL, SRL	N
	7	18126-61000	WASHER-CROSS SHAFT	1	10	SPL, SRL	
	8	18137-10600	RING-SNAP, "E"	1	10	SPL, SRL	
	9	00915-11610	WASHER-LOCK	1	50	SPL, SRL	
	10	00911-14610	NUT	1	50	SPL, SRL	
	11	18127-12300	BRACKET-CROSS SHAFT	2	5	SPL, SRL	
	12	00314-41410	SCREW	6	50	SPL, SRL	
	13	00915-11410	WASHER-LOCK	6	50	SPL, SRL	
	14	18020-12300	HOLDER-ACCELERATOR WIRE	1	1	SPL, SRL	
	15	18021-12300	CLAMP-ACCELERATOR WIRE	1	5	SPL, SRL	
	16	00915-11010	WASHER-LOCK	1	50	SPL, SRL	
	17	00369-01210	SCREW	1	50	SPL, SRL	
	18	00911-34410	NUT	1	50	SPL, SRL	
	19	00124-42010	BOLT	1	50	SPL, SRL	
*	20	18100-12301	ASSY-WIRE, ACCELERATOR	1	5	SPL, (SU)	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	21	18100-25601	ASSY=WIRE,ACCELERATOR	1		SPL (SU)	Y
	22	18100-26000	ASSY=WIRE,ACCELERATOR (L=570)	1		SPL SPLU (SU)	Y
*	23	18100-25603	ASSY=WIRE,ACCELERATOR	1		SPL(SOLEX)	Y
	24	18100-26002	ASSY=WIRE,ACCELERATOR (L=685)	1		SPL(SOLEX CARB)	Y
*	25	18100-25602	ASSY=WIRE,ACCELERATOR	1		SRL (SU)	Y
	26	18100-26001	ASSY=WIRE,ACCELERATOR (L=685)	1	5	SRL,SRLU (SU & SOLEX)	Y
*	27	18410-14600	COMP=WIRE,CHOKE CONTROL (TO E/#R-40000)	1		SPL,SPLU	
	28	18410-14601	WIRE-CHOKE CONTROL (FROM E/# R-40001 TO SEP-67)	1	5	SPL,SPLU SRLU	Y
	29	18410-25600	WIRE-CHOKE CONTROL (TO SEP-67)	1	1	SRL	
*	30	18410-25900	WIRE-CHOKE CONTROL (FROM OCT-67 TO JUNE-69)	1	2	SRL,SRLU (SOLEX)	C
	31	18410-A7400	WIRE-CHOKE CONTROL (FROM JULY-69)	1		SRL,SRLU (SOLEX)	Y
	32	18410-26001	WIRE-CHOKE CONTROL FOR SU (FROM OCT-67 TO SEP-68)	1	2	SRL,SRLU	C
*	33	18410-A3200	WIRE-CHOKE CONTROL (FROM OCT-68)	1	5	SRL,SRLU (SU)	C
	34	18410-A7500	WIRE-CHOKE CONTROL (FROM JULY-69)	1		SRL,SRLU (SU)	Y
	35	18410-14603	WIRE-CHOKE CONTROL (FROM OCT-67 TO SEP-68)	1	1	SPL,SRLU (SU)	C
*	36	18410-A3201	WIRE-CHOKE CONTROL (FROM OCT-68 TO JUNE-69)	1	5	SPL,SPLU (SU)	C

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	37	18410-A7410	WIRE-CHOKE CONTROL (FROM JULY-69)	1		SPL,SPLU (SU)	Y
*	38	18415-13200	KNOB-CHOKE WIRE (TO E/ # R=40000)	1	5	SPL	
	39	18415-A0601	KNOB-CHOKE WIRE (TO E/# R=40000)	1		SPL	Y
	40	18415-25500	ASSY-KNOB,CHOKE CONTROL (TO SEP-67)	1	5	SRL,SRLU	
*	41	18415-25900	ASSY-KNOB,CHOKE CONTROL (FROM OCT-67)	1	5	L DRIVE	N
	42	18415-A7400	ASSY-KNOB,CHOK CONTROL (FROM JULY-69)	1		L DRIVE	Y
*	43	18417-72600	GROMMET-RUBBER	1	5	L DRIVE	
	44	18417-15800	GROMMET-RUBBER	1	5	L DRIVE	Y

NOTE



EXHAUST TUBE & MUFFLER (TO C/ # SP311-03000, SPL311-17000, SR311-00007, SRL311-00069)

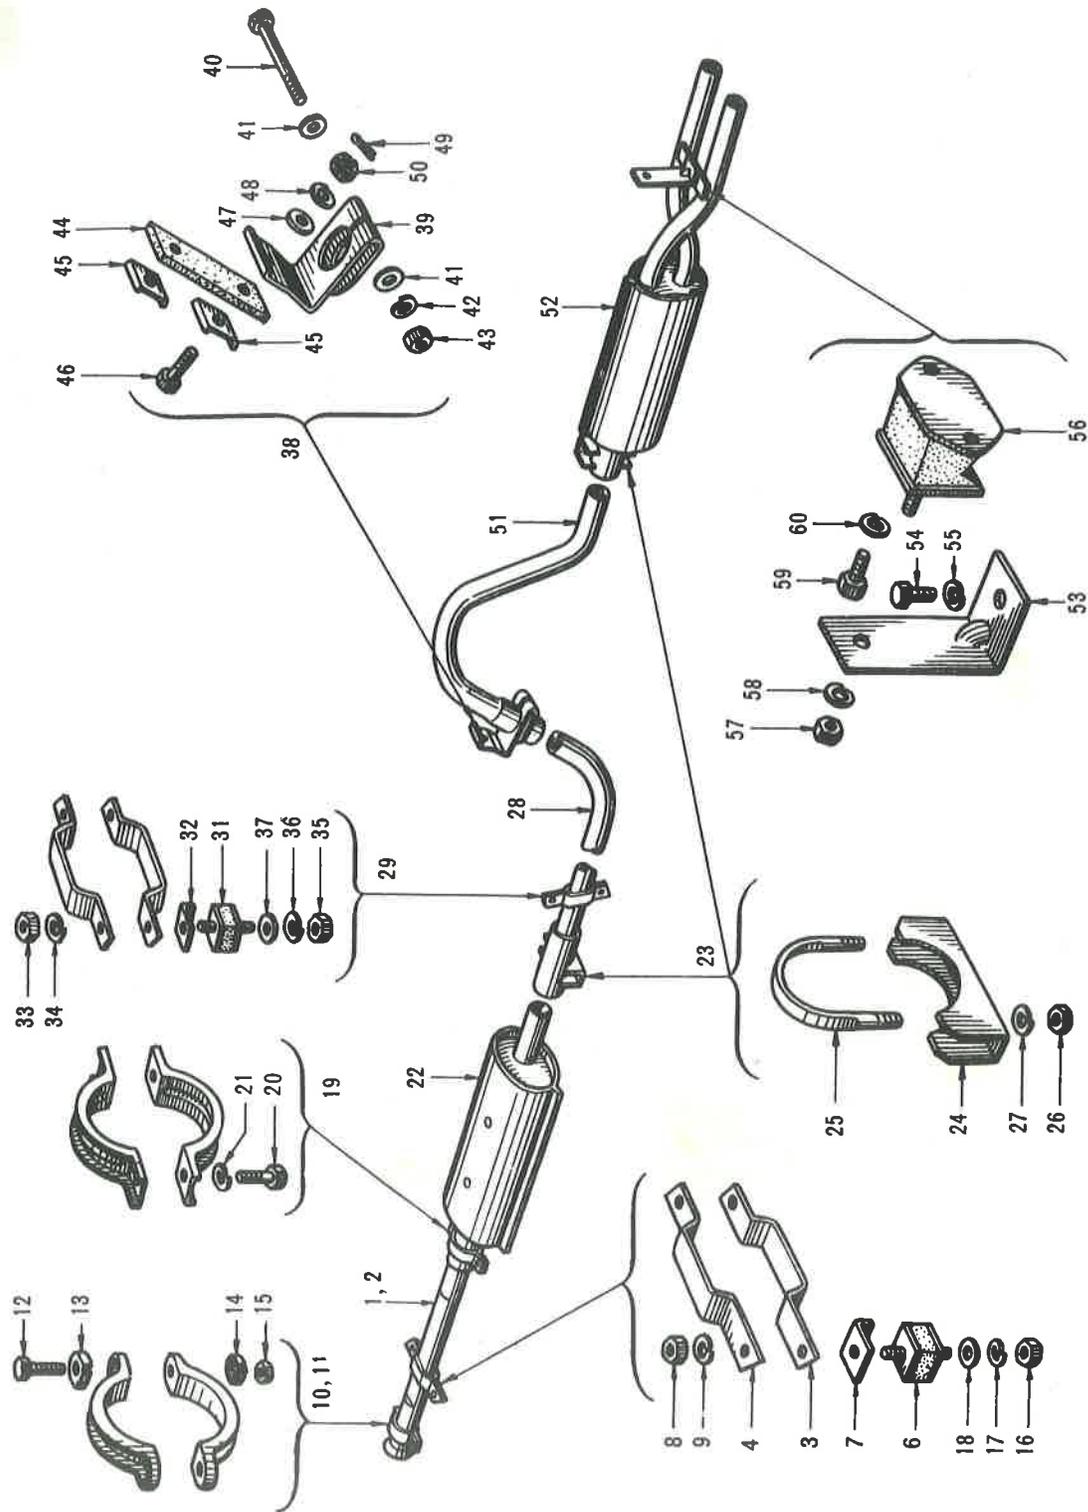

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>EXHAUST TUBES</b>				
	1	20011-16350	ASSY-TUBE, EXHAUST FRONT, WITH CLAMP	1		1.6L	
	2	20011-25550	ASSY-TUBE, EXHAUST FRONT, WITH CLAMP (TO C/# SR311 00007, SRL311 00069)	1		2L	
	3	20611-12200	CLAMP-EXHAUST TUBE	1	5	ALL	
	4	20612-12200	CLAMP-EXHAUST TUBE	1	1	ALL	
*	5	20220-04100	MOUNTING-RUBBER, EXHAUST TUBE	2	5	ALL	
	6	20220-14600	MOUNTING-RUBBER, EXHAUST TUBE	2		ALL	Y
	7	20613-12200	INSULATOR-MOUNTING, EXHAUST	2	50	ALL	
	8	00911-14510	NUT TO FIX CLAMP	2		ALL	
	9	00915-11510	WASHER-LOCK TO FIX CLAMP	2		ALL	
	10	20013-32250	ASSY-CLAMP, EXHAUST FRONT TUBE, FRONT	1	1	1.6L	
	11	20013-25500	CLAMP-MUFFLER, FRONT LOWER (TO C/# SR311 00007, SRL311 00069)	2	1	2L	
	12	00114-55010	BOLT	2		ALL	
	13	20014-04100	SEAT-EXHAUST TUBE CLAMP	2	50	ALL	
	14	20015-04100	SEAT-EXHAUST TUBE CLAMP	2	50	ALL	
	15	14039-30000	NUT	2	50	ALL	
	16	00911-14510	NUT TO FIX EXHAUST TUBE TO FRAME	2		ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	17	00915-11510	WASHER-LOCK TO FIX EXH AUST TUBE TO FRAME	2		ALL	
	18	00915-41510	WASHER-PLAIN TO FIX EX HAUST TUBE TO FRAME	2		ALL	
	19	20132-32251	ASSY-CLAMP, MUFFLER TO FRONT TUBE	1	50	ALL	
	20	00114-52010	BOLT	2		ALL	
	21	00915-11510	WASHER-LOCK	2		ALL	
	22	20101-16300	ASSY-MUFFLER	1	1	ALL	
	23	20023-04550	ASSY-CLAMP, EXHAUST TUB E, "U" BOLT	2	1	ALL	
	24	20023-04500	CLAMP-EXHAUST TUBE, FRO NT	2	1	ALL	
	25	20031-04500	"U" BOLT-EXHAUST TUBE CLAMP	2	50	ALL	
	26	00911-14510	NUT	4		ALL	
	27	00915-11510	WASHER-LOCK	4		ALL	
	28	20201-10400	TUBE-EXHAUST, CENTER	1	1	ALL	
	29	20023-10451	ASSY-CLAMP, EXHAUST TUB E, 2ND	1	10	ALL	
*	30	20220-04100	MOUNTING-RUBBER, EXHAUS T TUBE	2	5	ALL	
	31	20220-14600	MOUNTING-RUBBER, EXHAUS T TUBE	2		ALL	Y
	32	20613-12200	INSULATOR-MOUNTING, EXH AUST	2	50	ALL	
	33	00911-14510	NUT TO FIX CLAMP TO MO UNTING RUBBER	2		ALL	
	34	00915-11510	WASHER-LOCK TO FIX CLA MP TO MOUNTING RUBBER	2		ALL	
	35	00911-14510	NUT TO FIX MOUNTING RU BBER TO BRACKET	2		ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	36	00915-11510	WASHER-LOCK TO FIX MOUNTING RUBBER TO BRACKET	2		ALL	
	37	00915-41510	WASHER-PLAIN TO FIX MOUNTING RUBBER TO BRACKET	2		ALL	
	38	20641-10451	ASSY-CLAMP, EXHAUST TUBE, CENTER	1		ALL	
	39	20641-10400	CLAMP-EXHAUST TUBE	1	10	ALL	
	40	00114-56510	BOLT	1	25	ALL	
	41	00915-41510	WASHER-PLAIN	1		ALL	
	42	00915-11510	WASHER-LOCK	1		ALL	
	43	00911-14510	NUT	1		ALL	
	44	20632-10600	STRAP-EXHAUST HANGER	1	10		
	45	20622-10600	WASHER-STRAP	2	10	ALL	
	46	00114-52210	BOLT TO FIX REAR TUBE TO CENTER TUBE	2		ALL	
	47	00915-41510	WASHER-PLAIN TO FIX REAR TUBE TO CENTER TUBE	2		ALL	
	48	00915-11510	WASHER-LOCK TO FIX REAR TUBE TO CENTER TUBE	2		ALL	
	49	00921-11810	PIN-COTTER TO FIX REAR TUBE TO CENTER TUBE	2	50	ALL	
	50	00911-74510	NUT TO FIX REAR TUBE TO CENTER TUBE	2	50	ALL	
	51	20211-10401	TUBE-EXHAUST, REAR	1	1	ALL	
	52	20300-10450	ASSY-BOOSTER, WITH TAIL PIPE CLAMP	1		ALL	
	53	20216-10401	HANGER-EXHAUST TUBE REAR	1	50	ALL	
	54	00114-51610	BOLT	1		ALL	
	55	00915-11510	WASHER-LOCK	1		ALL	


S KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
56	11328-30001	COMP.,-MOUNTING	1	5	ALL	
57	00911-14510	NUT	1		ALL	
58	00915-11510	WASHER-LOCK	1		ALL	
59	00114-51610	BOLT	2		ALL	
60	00915-11510	WASHER-LOCK	2		ALL	

NOTE



EXHAUST TUBES & MUFFLER

(FROM C/# SP311-03001, SPL311-17001  
SR311-00008, SRL311-00070)

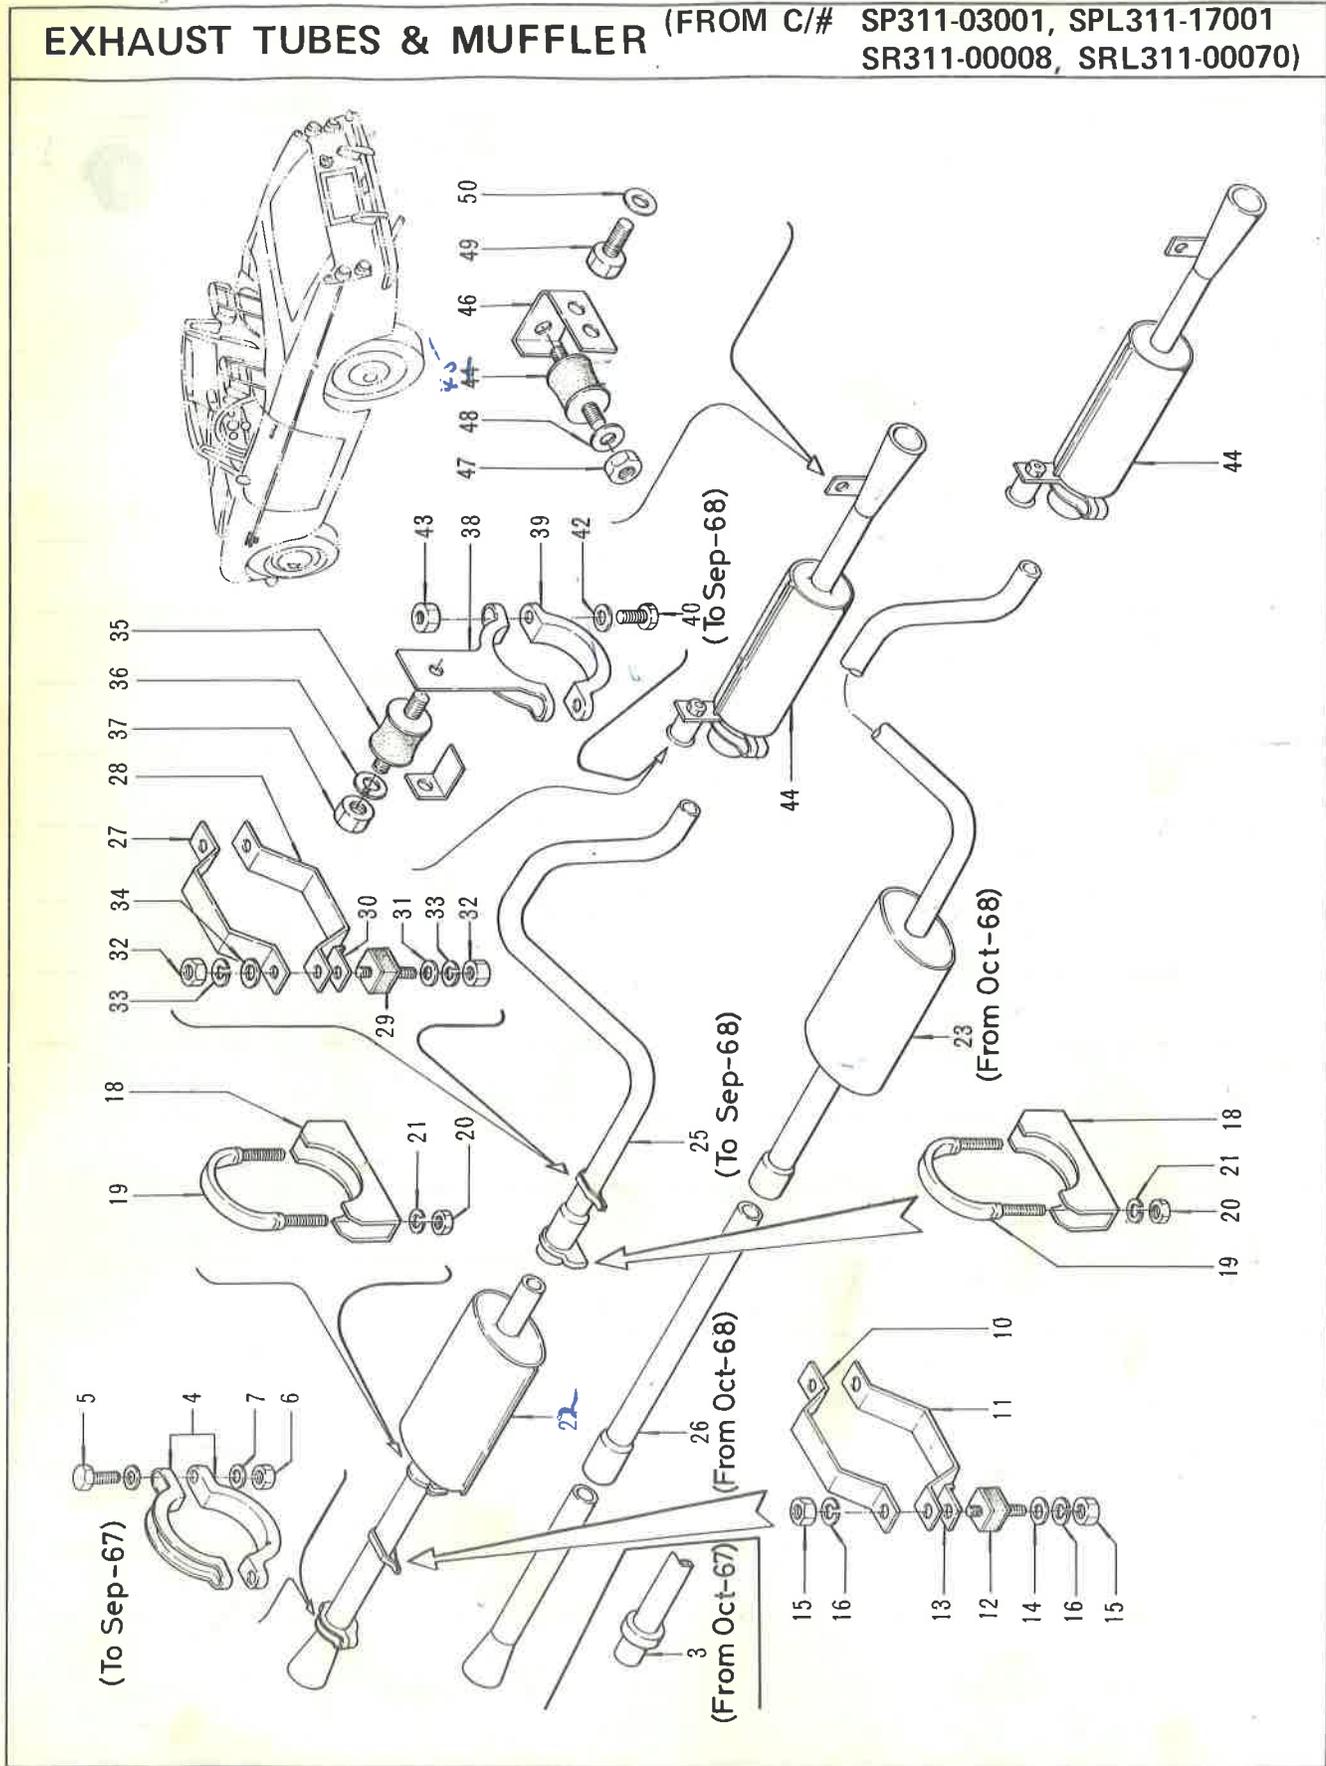

KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>EXHAUST TUBE &amp; MUFFLER</b>						
<b>(FROM C/# SP311-03001, SPL311-17001</b>						
<b>SR311-00008, SRL311-00070)</b>						
1	20011-16350	TUBE-FRONT W/CLAMP (TO SEP-67)	1	1	1,6L	
2	20011-25551	TUBE-FRONT W/CLAMP (TO SEP-67)	1		2L	
3	20010-25950	TUBE-FRONT W/CLAMP (FR OM OCT-67)	1	1	ALL	N
4	20013-25501	CLAMP TO EXHAUST	2	1	2L	
5	00114-52510	BOLT (TO SEP-67)	2	100	2L	
6	14039-30000	NUT (TO SEP-67)	2	50	2L	
7	00915-11510	WASHER (TO SEP-67)	2	50	2L	
8	20601-25900	PLATE-TUBE END (FROM O CT-67)	1	1	ALL	
9	20650-37700	NUT-MANIFOLD TO TUBE ( FROM OCT-67)	1	50	ALL	
10	20665-25500	CLAMP-UPPER	1		ALL	
11	20666-25500	CLAMP-LOWER	1		ALL	
12	20220-25500	RUBBER	2		ALL	
13	20613-12200	INSULATOR	2	50	ALL	
14	20614-14600	SHIM	2	10	ALL	
15	00911-14510	NUT	4	100	ALL	
16	00915-11510	WASHER-LOCK	4	50	ALL	
17	00915-41510	WASHER-PLAIN	2	50	ALL	
18	20102-25500	CLAMP	2		ALL	
19	20103-25500	U BOLT	2		ALL	
20	00911-14510	NUT	4	100	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	21	00915-11510	WASHER	4	50	ALL	
	22	20101-25500	ASSY-MUFFLER (TO SEP-68)	1	1	ALL	
	23	20101-A3200	ASSY-MUFFLER(FROM OCT-68)	1		ALL	N
	24	20201-25550	ASSY-TUBE WITH CENTER CLAMP	1		ALL	
	25	20201-25551 ✓	ASSY-TUBE WITH CENTER CLAMP (TO SEP-68)	1	1	ALL	Y
	26	20201-A3250	ASSY-TUBE WITH CENTER CLAMP(FROM OCT-68)	1		ALL	N
	27	20667-25500	CLAMP-UPPER	1		ALL	
	28	20668-25500	CLAMP-LOWER	1		ALL	
	29	20220-25500	RUBBER	2		ALL	
	30	20613-12200	INSULATOR	2	50	ALL	
	31	20614-14600	SHIM	2	10	ALL	
	32	00911-14510	NUT	4	100	ALL	
	33	00915-11510	WASHER-LOCK	4	50	ALL	
	34	00915-41510	WASHER-PLAIN	2	50	ALL	
	35	20303-25500	RUBBER-MOUNTING	1		ALL	
	36	00915-11510	WASHER	2	50	ALL	
	37	00911-14510.	NUT	2	100	ALL	
	38	20202-25500	CLAMP-UPPER	1		ALL	
	39	20661- <sup>73250</sup> <del>73201</del>	CLAMP-LOWER	1	1	ALL	
	40	00114-52010	BOLT (TO SEP-68)	2	100	ALL	
	41	00114-52510	BOLT-HEX (FROM OCT-68)	2	100	ALL	N
	42	00915-11510	WASHER	2	50	ALL	
	43	00911-14510	NUT	2	100	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	44	20300-25500	ASSY-BOOSTER	1		ALL	
	45	20303-25500	RUBBER-MOUNTING	1		ALL	
	46	20304-25500	BRACKET	1		ALL	
	47	00911-14510	NUT	2	100	ALL	
	48	00915-11510	WASHER	2	50	ALL	
	49	00114-51610	BOLT	2	50	ALL	
	50	00915-11510	WASHER	2	50	ALL	

NOTE 019

ADJ 13007



JJA

JJA

JJA

JJA 01

JJA 02


JJA 03

JJA 04

FIG. 22-1


NISSAN MOTOR CO., LTD.

WIRING (TO JUNE.-'69)

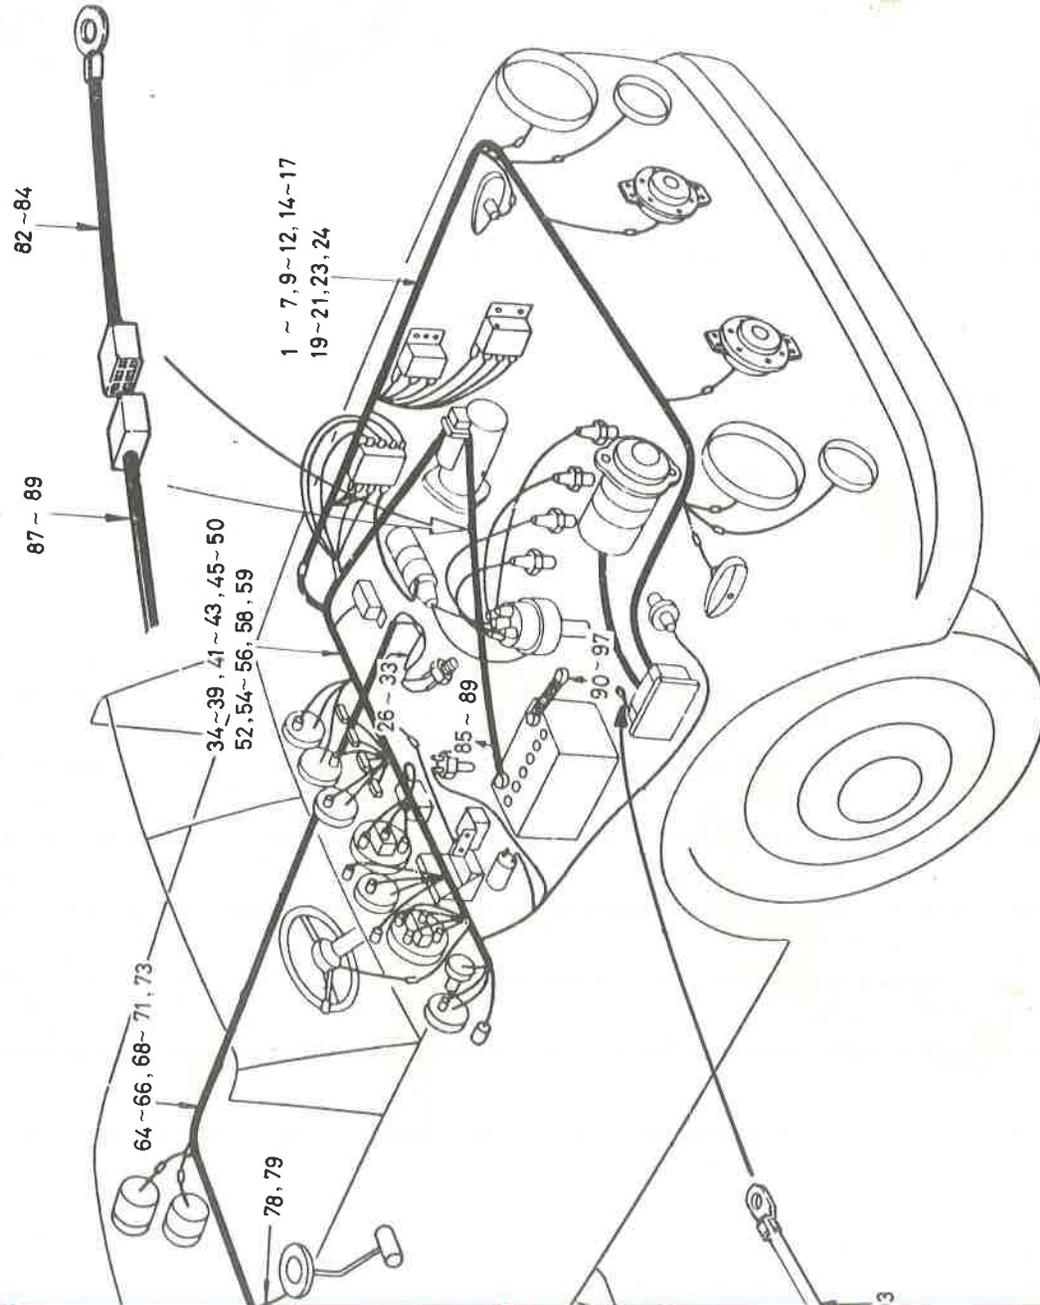

Note: Key No. 7, 12, 17, 21, 24, 39, 43, 50, 56, 59, 84  
When engine room harness, inst harness and starter harness are replaced together, they are interchangeable.

WIRING (FROM JULY.-'69)

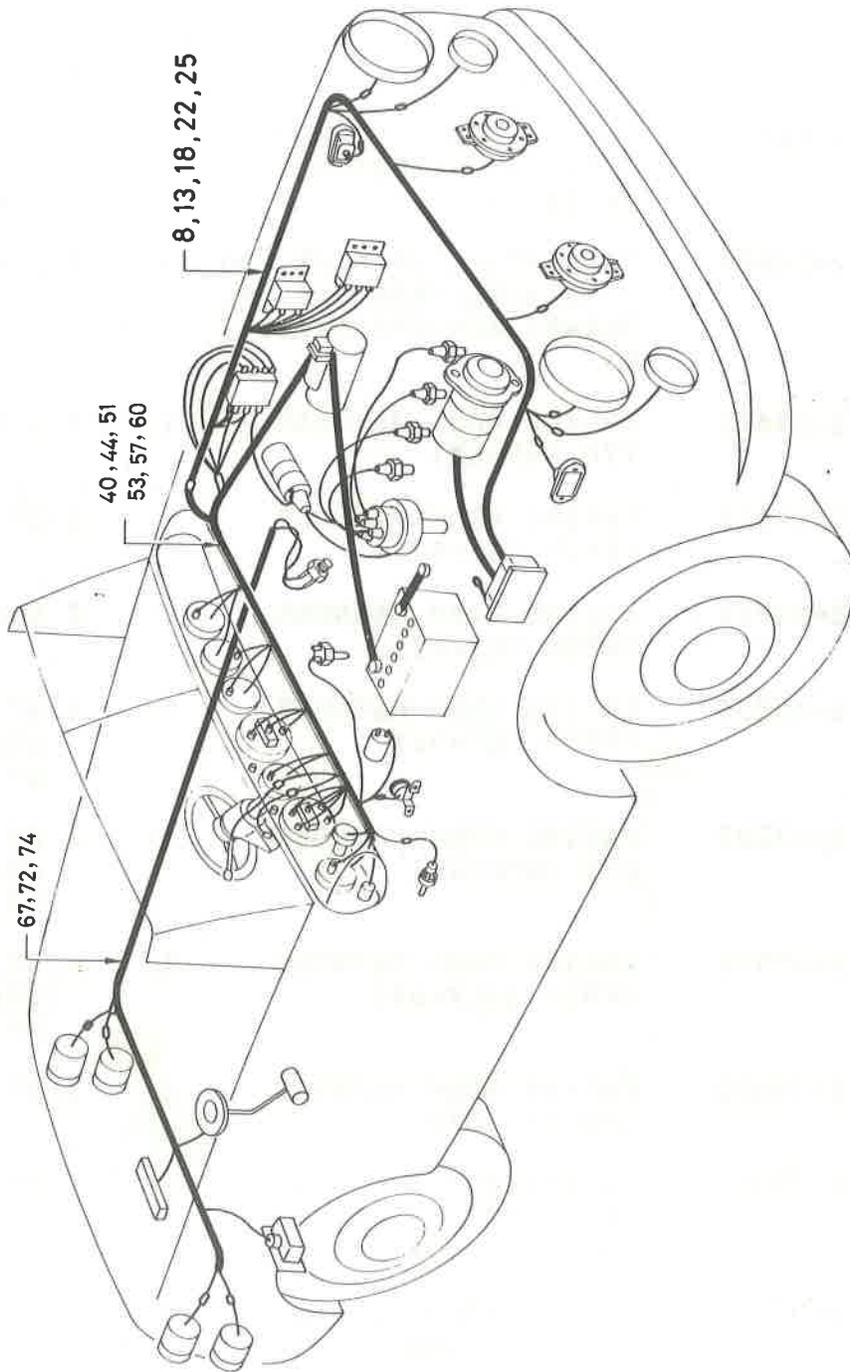

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>WIRING</b>							
	1	24012-14601	ENGINE ROOM HARNESS (T O C/# SPL311-3323.SP31 1-80)	1	1	1,6L	
	2	24012-14604	COMP.-CABLE,ENGINE ROO M HARNESS(FROM C/# SPL 311-003324 SP311-00081 1)	1	1	1,6L	N
	3	24012-14610	ENGINE ROOM HARNESS (TO SEP-67)	1	1	1,6L	Y
	4	24012-14611	ENGINE ROOM HARNESS (FROM OCT-67)	1	1	SP	N
	5	24012-14701	ENGINE ROOM HARNESS (FROM OCT-67)	1	1	SPL	N
	6	24012-A3203	ENGINE ROOM HARNESS (FROM OCT-68)	1	1	SP,SPL EXC USA & CANA DA	N
	7	24012-A3207	ENGINE ROOM HARNESS (TO JUNE-69)	1	1	SP,SPL EXC USA & CANA DA	C
	8	24012-A7501	ENGINE ROOM HARNESS (FROM JULY-69)	1		SP,SPL EXC USA & CANA DA	N
	9	24012-25600	ENGINE ROOM HARNESS (TO SEP-67)	1	1	SR	
	10	24012-25901	ENGINE ROOM HARNESS (FROM OCT-67 TO SEP- 68)	1	1	SR	N
	11	24012-A3202	ENGINE ROOM HARNESS (FROM OCT-68)	1	1	SR	N
	12	24012-A3206	ENGINE ROOM HARNESS (TO JUNE-69)	1	1	SR	C
	13	24012-A7500	ENGINE ROOM HARNESS (FROM JULY-69)	1	1	SR	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	14	24012-25500	ENGINE ROOM HARNESS (TO SEP-67)	1	1	SRL	
	15	24012-26001	ENGINE ROOM HARNESS (FROM OCT-67 TO SEP-68)	1	1	SRL	N
	16	24012-A3302	ENGINE ROOM HARNESS (FROM OCT-68)	1	1	SRL EXC USA & CANA DA	N
	17	24012-A3305	ENGINE ROOM HARNESS	1		SRL EXC USA & CANA DA	C
	18	24012-A7801	ENGINE ROOM HARNESS (FROM JULY-69)	1		SRL EXC USA & CANA DA	N
	19	24012-26000	ENGINE ROOM HARNESS (FROM OCT-67 TO SEP-68)	1	1	USA	N
	20	24012-A3301	ENGINE ROOM HARNESS (FROM OCT-68)	1	1	1,6L USA & CANADA	N
	21	24012-A3304	ENGINE ROOM HARNESS (TO JUNE-69)	1	1	1,6L USA & CANADA	C
	22	24012-A7700	ENGINE ROOM HARNESS (FROM JULY-69)	1		1,6L USA & CANADA	N
	23	24012-A3300	ENGINE ROOM HARNESS (FROM OCT-68)	1	1	2L USA & CANADA	N
	24	24012-A3303	ENGINE ROOM HARNESS (TO JUNE-69)	1	1	2L USA & CANADA	C
	25	24012-A7800	ENGINE ROOM HARNESS (FROM JULY-69)	1	1	2L USA & CANADA	N
	26	24149-14600	CABLE-REVERSE LAMP SW (TO SEP-67)	1	1	1,6L	
	27	24149-25501	CABLE-REVERSE LAMP SW (TO SEP-67)	1	1	2L	
	28	24149-14601	CABLE-REVERSE LAMP SW (FROM OCT-67 TO SEP-68)	1	1	ALL	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	29	24149-14602	CABLE REVERSE LAMP SW (FROM OCT-68 TO JUNE -69)	1	1	1.6L	N
	30	24149-A7401	CABLE REVERSE LAMP SW (FROM JULY-69)	1		1.6L EXC EMISSION CONTROL	N
	31	24149-A7700	CABLE REVERSE LAMP SW (FROM JULY-69)	1		1.6L EMISSION CONTROL	N
	32	24149-14601	CABLE REVERSE LAMP SW (FROM OCT-68 TO JUNE -69)	1	1	2L	N
	33	24149-A7400	CABLE REVERSE LAMP SW (FROM JULY-69)	1		2L	N
	34	24013-14601	INSTRUMENT HARNESS (TO C/# SP311-8110)	1	1	SP	
	35	24013-14603	INSTRUMENT HARNESS (FR OM C/#SP311-811 TO E/#R -40000)	1	1	SP	N
	36	24013-25500	INSTRUMENT HARNESS (FR OM E/#R-40001 TO SEP-6 7)	1	1	SP,SR	N
	37	24013-25900	INSTRUMENT HARNESS (FROM OCT-67 TO SEP- 68)	1	1	SP	N
	38	24013-A3203	INSTRUMENT HARNESS (FROM OCT-68)	1	1	SP	N
	39	24013-A3207	INSTRUMENT HARNESS (TO JUNE-69)	1	1	SP	C
	40	24013-A7501	INSTRUMENT HARNESS (FROM JULY-69)	1	1	SP	N
	41	24013-25901	INSTRUMENT HARNESS (FROM OCT-67 TO SEP- 68)	1	1	SR	N
	42	24013-A3202	INSTRUMENT HARNESS (FROM OCT-68)	1	1	SR	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	43	24013-A3206	INSTRUMENT HARNESS (TO JUNE-69)	1	1	SR	C
	44	24013-A7500	INSTRUMENT HARNESS (FROM JULY-69)	1	1	SR	N
	45	24013-14701	INSTRUMENT HARNESS (TO C/#SPL311-3323)	1	1	SPL	
	46	24013-14703	INSTRUMENT HARNESS (FROM OMC/#SPL311-3324 TO E/*R=40000	1	1	SPL	N
	47	24013-25600	INSTRUMENT HARNESS (FROM E/*R=40001 TO SEP-67)	1	1	L DRIVE	N
	48	24013-26000	INSTRUMENT HARNESS (FROM OCT-67 TO SEP-68)	1	1	1,6L L DRIVE	N
	49	24013-A3301	INSTRUMENT HARNESS (FROM OCT-68)	1	1	1,6L USA & CANADA	N
	50	24013-A3305	INSTRUMENT HARNESS (TO JUNE-69)	1	1	1,6L USA & CANADA	C
	51	24013-A7700	INSTRUMENT HARNESS (FROM JULY-69)	1		1,6L USA & CANADA	N
	52	24013-A3303	INST HARNESS FOR PASSING LIGHT (FROM OCT-68 TO JUNE-69)	1	1	1,6L L DRIVE	N
	53	24013-A7701	INSTRUMENT HARNESS FOR PASSING LIGHT (FROM JULY-69)	1	1	1,6L L DRIVE	N
	54	24013-26001	INSTRUMENT HARNESS (FROM OCT-67 TO SEP-68)	1	1	2L L DRIVE	N
	55	24013-A3300	INSTRUMENT HARNESS (FROM OCT-68)	1	1	2L USA & CANADA	N
	56	24013-A3304	INSTRUMENT HARNESS (TO JUNE-69)	1	1	2L USA & CANADA	C
	57	24013-A7800	INSTRUMENT HARNESS (FROM JULY-69)	1		2L USA & CANADA	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	58	24013-A3302	INSTRUMENT HARNESS FOR PASSING LIGHT (FROM OCT-68)	1	1	2L L DRIVE EXC USA & CANADA	N
	59	24013-A3306	INSTRUMENT HARNESS FOR PASSING LIGHT (TO JUNE -69)	1		2L L DRIVE EXC USA & CANADA	C
	60	24013-A7801	INSTRUMENT HARNESS FOR PASSING LIGHT (FROM JUL Y-69)	1		2L L DRIVE EXC USA & CANADA	N
*	61	26261-58000	BULB(12V-3W)	9	10	ALL	
	62	26713-89900	BULB(12V-3W)	9	10	ALL	Y
*	63	26261-30100	BULB(12V-1.5W)	3	1	ALL	
	64	24014-14600	CHASSIS HARNESS (TO SE P-67)	1	1	SP,SR.	
	65	24014-25900	CHASSIS HARNESS (FROM OCT-67 TO SEP-68)	1	1	SP SR	N
	66	24014-25901	CHASSIS HARNESS (FROM OCT-68 TO JUNE-69)	1	1	SP,SR	N
	67	24014-A7500	CHASSIS HARNESS (FROM JULY-69)	1	1	SP,SR	N
	68	24014-14700	CHASSIS HARNESS (TO E/ * R-40000)	1	1	SPL	
	69	24014-25600	CHASSIS HARNESS (FROM E/*R-40001 TO SEP-67)	1	1	SPL,SRL	N
	70	24014-26000	CHASSIS HARNESS (FROM OCT-67 TO SEP-68)	1	1	L DRIVE	N
	71	24014-26000	CHASSIS HARNESS (FROM OCT-68 TO JUNE-69)	1	1	SPL,SRL	Y
	72	24014-A7801	CHASSIS HARNESS (FROM JULY-69)	1		SPL,SRL	N
	73	24014-A3300	CHASSIS HARNESS (FROM OCT-68 TO JUNE-69)	1	1	USA	N
	74	24014-A7800	CHASSIS HARNESS (FROM JULY-69)	1		USA & CANA DA	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	75	00951-10600	GROMMET	2	10	ALL	
	76	24250-A7400	GROMMET WIRING(FROM JULY-69)	1		ALL	
	77	24251-A7400	GROMMET WIRING(FROM JULY-69)	1		ALL	
	78	24017-25900	CABLE-FUEL TANK GAUG (NOT ADOPTED)	1	1	ALL	
	79	24017-14600	CABLE-FUEL TANK GAUG	1	1	ALL	Y
	80	00314-41010	SCREW TO FIX CHASSIS & ENGINE HARNESS EARTH TO FRAME	2	50	ALL	
	81	00915-11410	WASHER-LOCK TO FIX CHASSIS & ENGINE HARNESS EARTH TO FRAME	2	50	ALL	
	82	24018-14601	HARNESS-STARTER TO INST HARNESS (TO SEP-67)	1	1	ALL	
	83	24018-25900	HARNESS STARTER TO INST HARNESS (FROM OCT-67)	1	1	ALL	N
	84	24018-A3200	HARNESS STARTER TO INSTRUMENT HARNESS	1	1	ALL	C
	85	24110-14600	ASSY-CABLE, STARTER MOTOR	1	5	SP	
	86	24110-14700	ASSY-CABLE, STARTER MOTOR	1	5	SPL	
	87	24110-25601	ASSY-CABLE, STARTER MOTOR (FROM E/# R40001 TO SEP-68)	1	1	ALL	N
*	88	24110-25600	ASSY CABLE, STARTER MOTOR (FROM OCT-68)	1	5	ALL EXC SR	
	89	24110-25601	ASSY CABLE, STARTER MOTOR (FROM OCT-68)	1	1	SR	
	90	24080-14600	ASSY-CABLE, GROUND CONNECTION BATTERY	1	1	SP	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	91	24080-25600	ASSY-CABLE,GROUND CONN ECTION BATTERY(FROM E/ # R-40001)	1	1	SP,SR	N
	92	24080-A3301	ASSY CABLE,GROUND CONN ECTION BATTERY (FROM OCT-68)	1	1	SP	
	93	24080-A3201	ASSY CABLE,GROUND CONN ECTION BATTERY (FROM OCT-68)	1	1	SR	
	94	24080-14700	ASSY-CABLE,GROUND CONN ECTION BATTERY	1	10	SPL	
	95	24080-14710	ASSY-CABLE,GROUND CONN ECTION BATTERY(FROM E/ # R-40001)	1	1	SPL SPLU SRL	N
	96	24080-26000	CABLE-BATTERY EARTH (FROM OCT-67 TO SEP- 68)	1	1	SRL SRLU	N
	97	24080-A3301	ASSY CABLE,GROUND CONN ECTION BATTERY (FROM OCT-68)	1	1	SPL,SRL	
	98	24085-A3201	EARTH BOND	1		FRANCE	
	99	24120-32200	ASSY-CABLE,GROUND CONN ECTION,STARTER	1	5	ALL	
*	100	24023-14600	ASSY-HARNES CONSOLE (TO SEP-67)	1		ALL EXC USA	
	101	24023-14601	ASSY-HARNES CONSOLE (FROM OCT-67 TO SEP-68 )	1	1	ALL EXC USA	Y
*	102	24023-25900	ASSY-CABLE CONSOLE	1	1	USA OP,ALL EXC USA	
	103	24023-25901	ASSY-CABLE CONSOLE (FROM OCT-67 TO SEP-68 )	1	1	USA OP,ALL EXC USA	Y
	104	24023-A3201	ASSY CABLE CONSOLE WIT H HAZARD CIRCUIT(FROM OCT-68)	1	1	ALL EXC USA	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	105	24023-A3202	ASSY CABLE CONSOLE W/O HAZARD CIRCUIT(FROM OC T-68)	1	1	ALL EXC USA	
	106	24023-A3300	ASSY CABLE CONSOLE (FROM OCT-68)	1	1	USA	N
	107	00314-41210	SCREW	1	50	ALL	
	108	00114-41210	BOLT	1	50	ALL	
	109	00915-11410	WASHER-SPRING	2	50	ALL	
	110	00915-41410	WASHER-PLAIN	2	50	ALL	
	111	24020-76000	HARNES THERMAL T/M	1	1	1,6L	
	112	24070-25600	G/CONN TO ALTERNATOR	1	1	SR, & USA	

NOTE




ELECTRIC UNIT

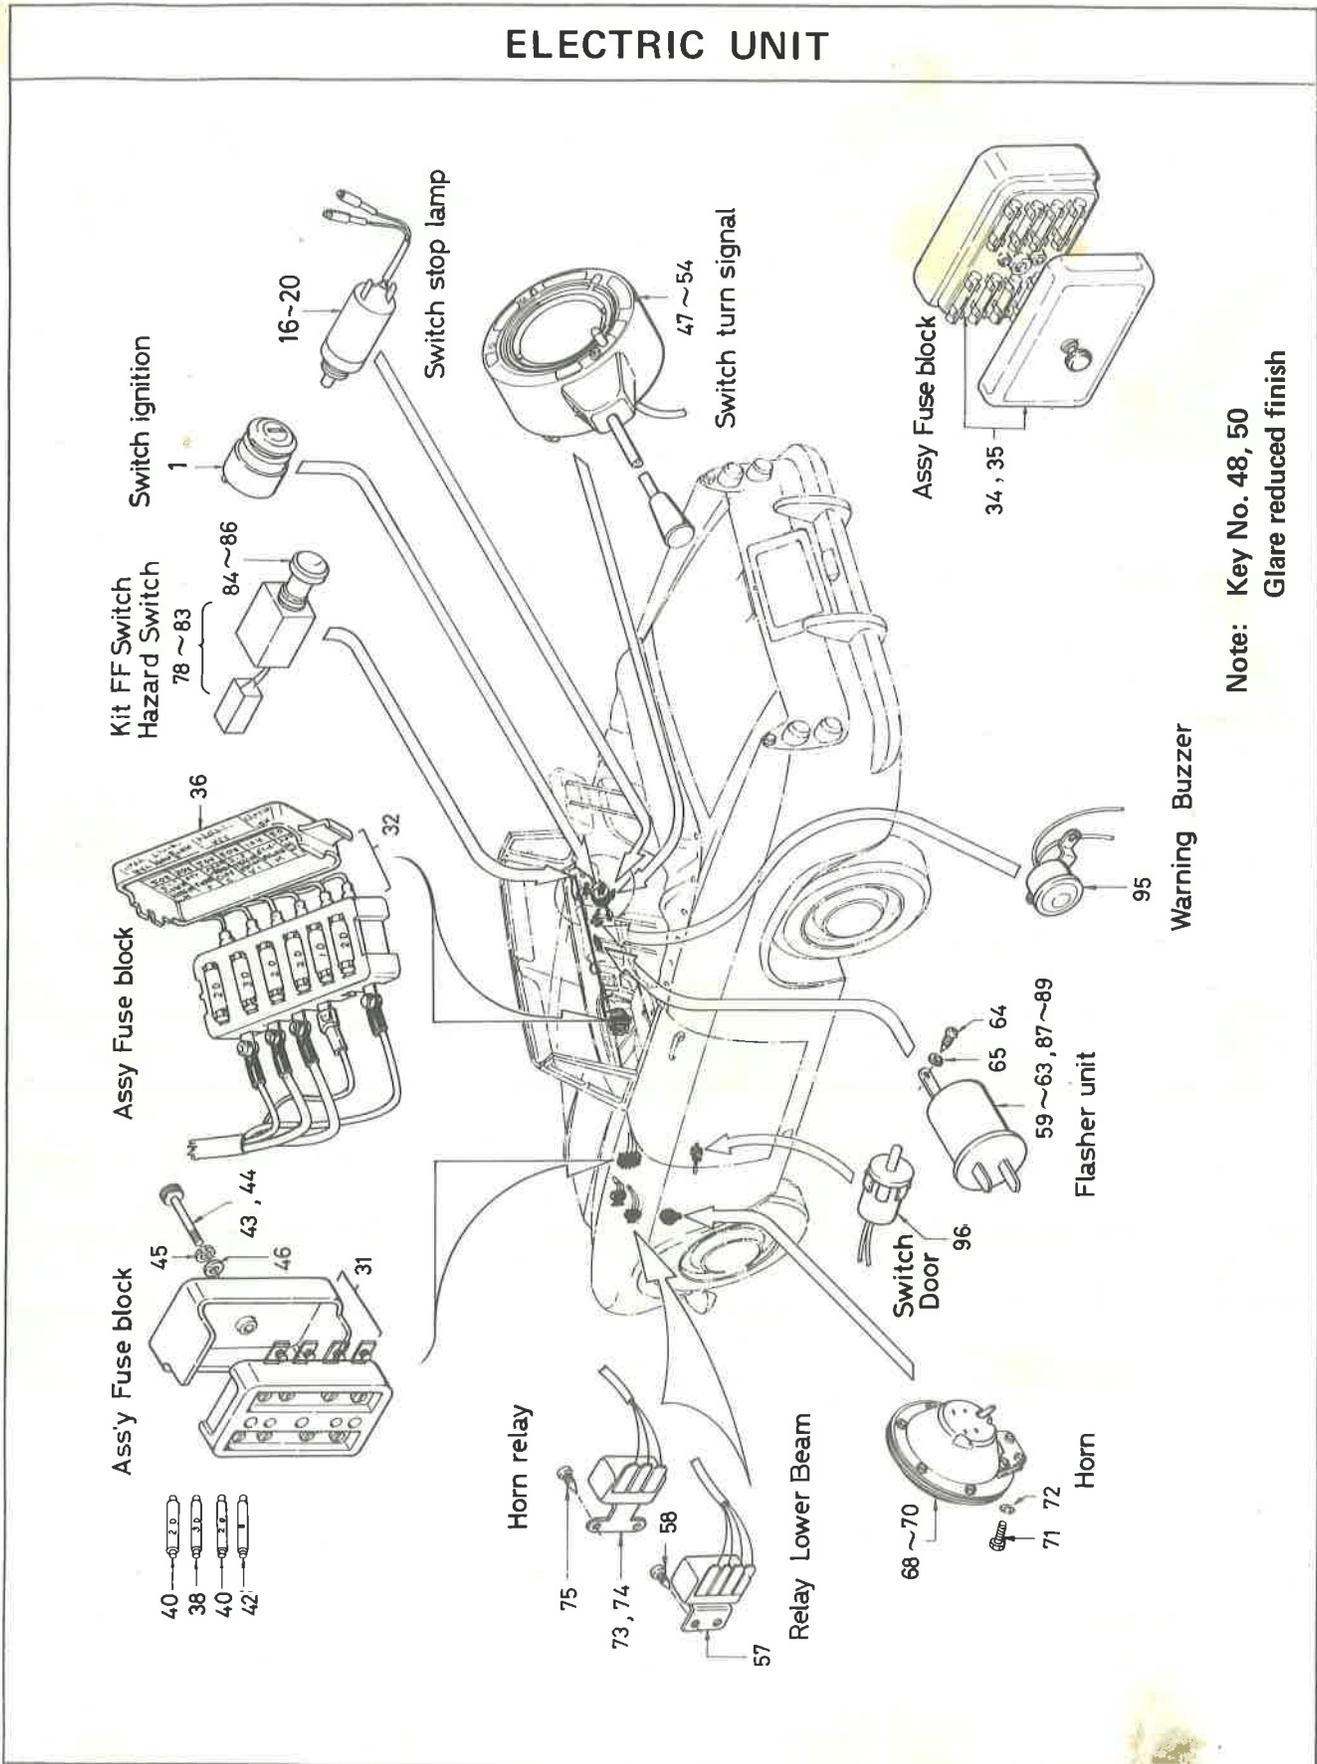


Note: Key No. 48, 50  
Glare reduced finish

SWITCH PARTS (TO JUNE.-'69)

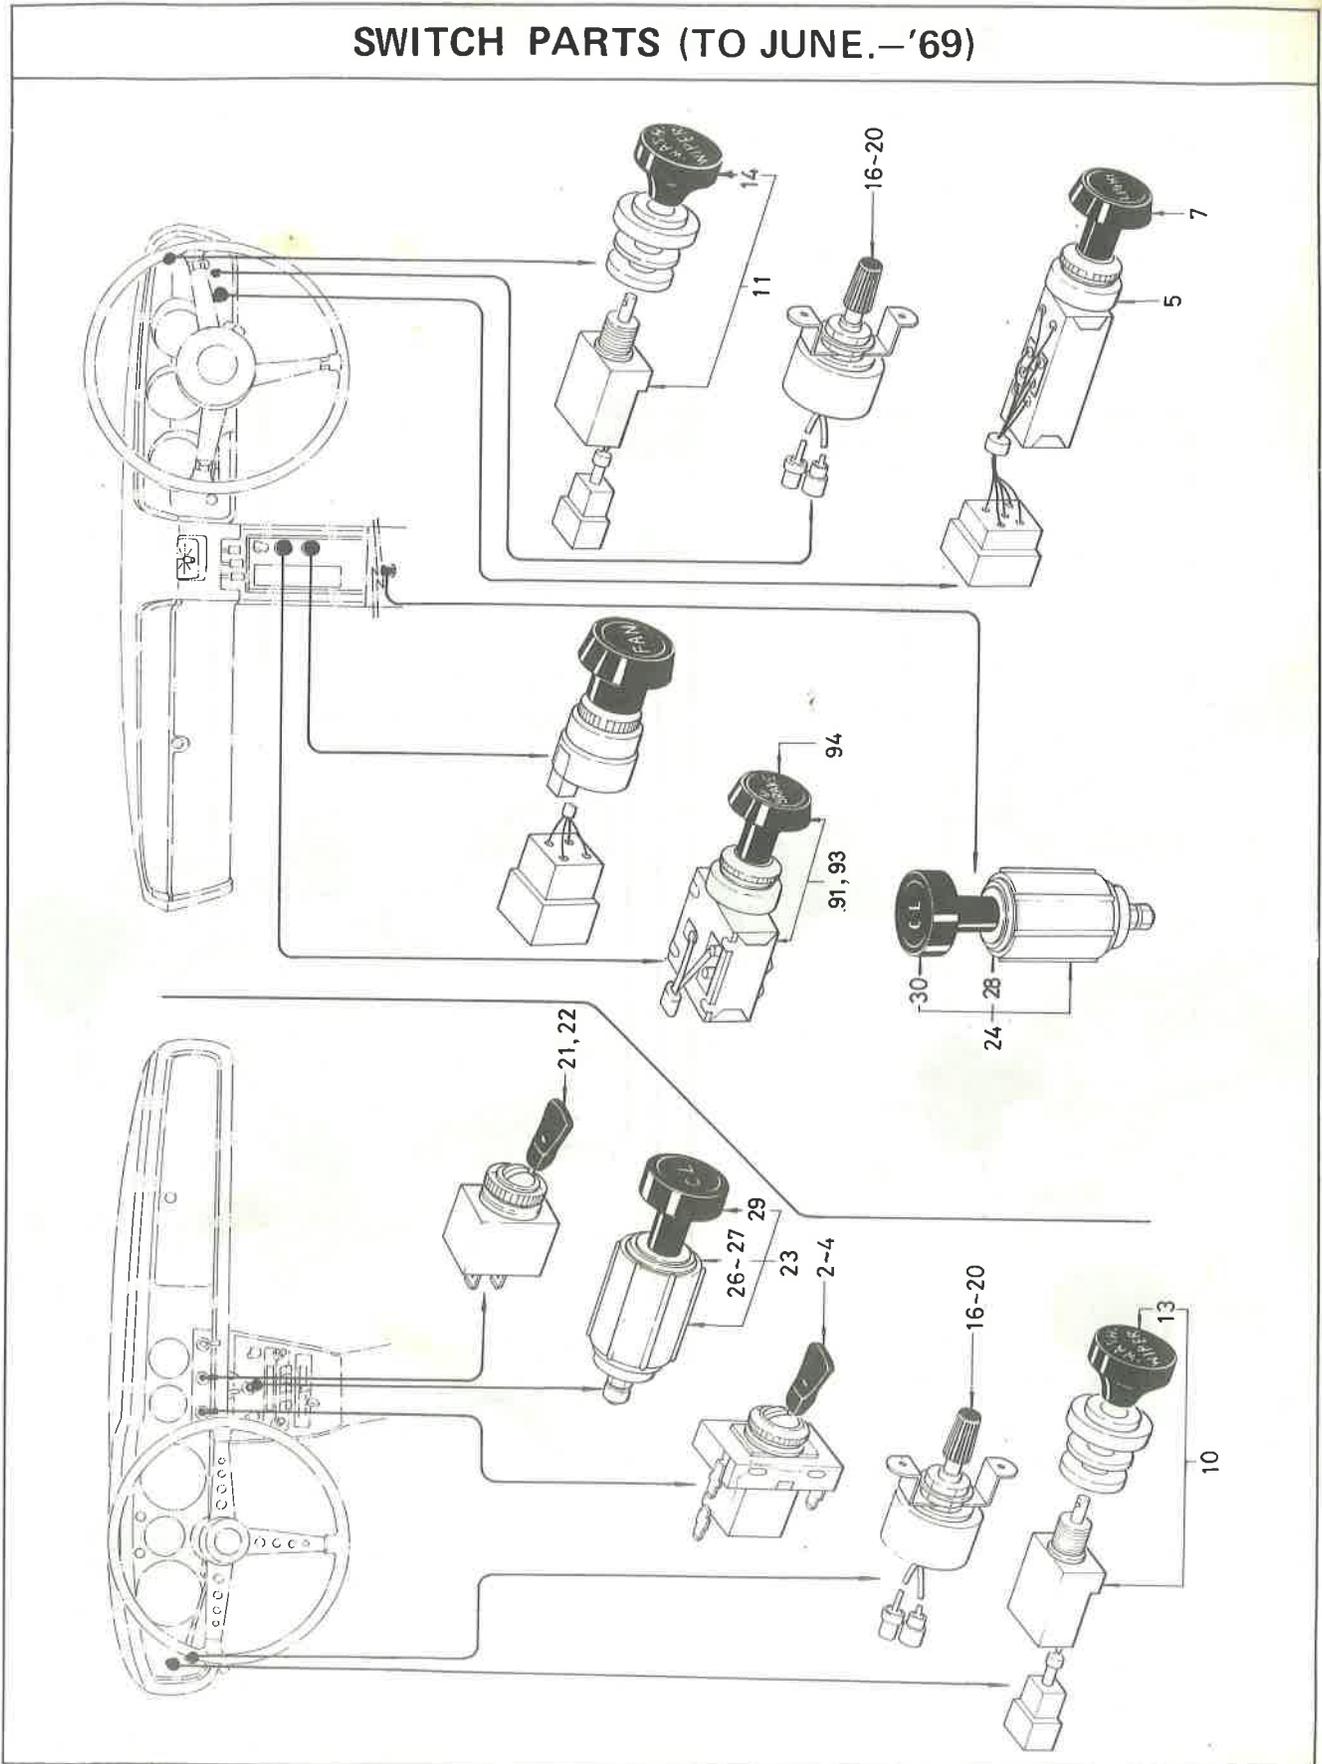

SWITCH PARTS (FROM JULY - '69)

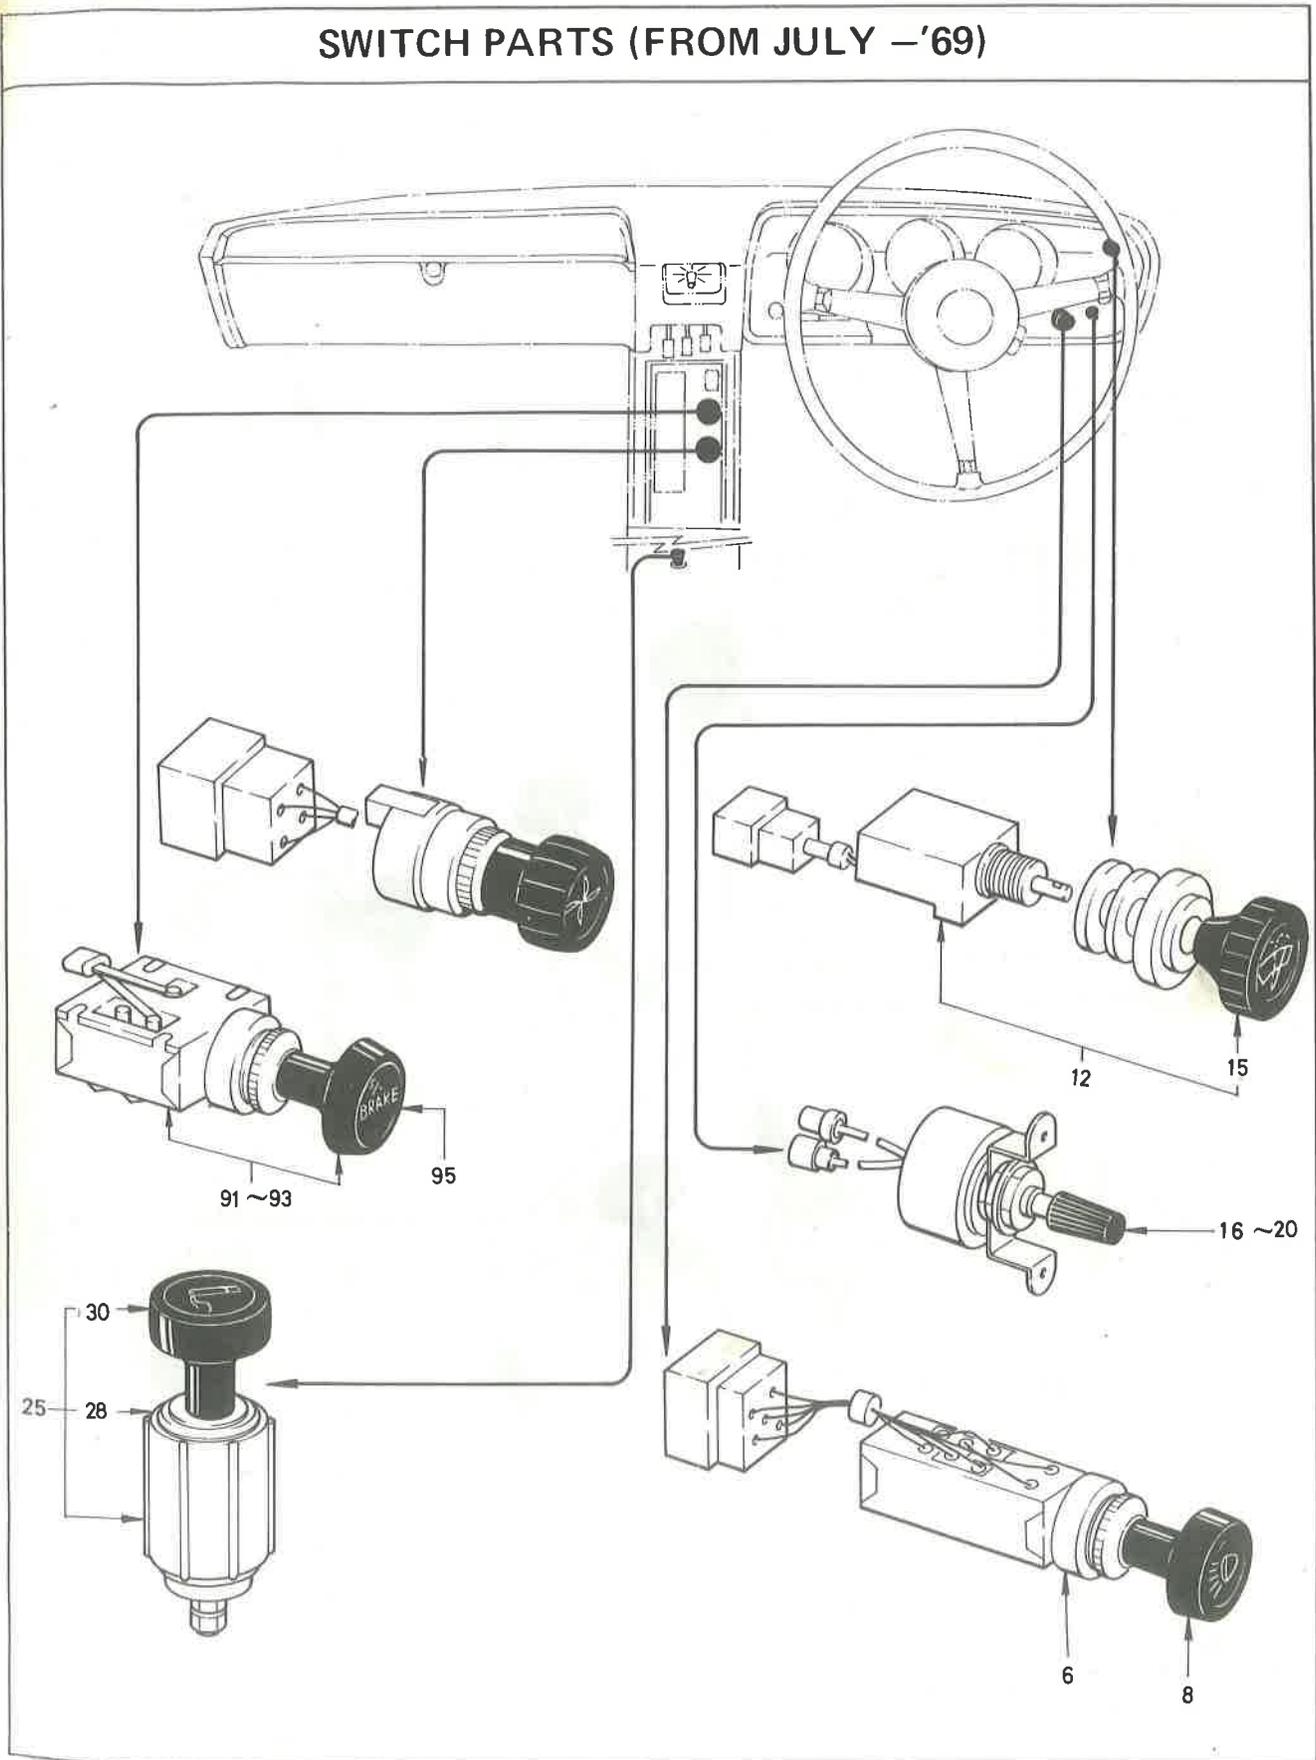

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>ELECTRIC UNIT</b>				
	1	25150-10600	COMP.-SWITCH,IGNITION WITH KEY(TO E/# R-4000 1)	1	1	1.6L	
	2	25160-61500	COMP-SWITCH,LIGHTING (TO E/# R-40000)	1	1	1.6L	
	3	25160-25500	SWITCH-LIGHTING(FROM E /#R-40001 TO SEP-67)	1	1	ALL	N
	4	25160-25900	COMP-SWITCH,LIGHTING (FROM OCT-67 TO SEP-68)	1	1	ALL	N
*	5	25160-A3200	COMP-SWITCH,LIGHTING (FROM OCT-68)	1	1	ALL	N
	6	25160-A7400	COMP-SWITCH,LIGHTING (FROM JULY-69)	1	1	ALL	Y
*	7	25165-25900	KNOB-LIGHTING SW (FROM OCT-67)	1	5	ALL	
	8	25165-A7400	KNOB-LIGHTING SW (FROM JULY-69)	1	5	ALL	Y
	9	25160-61500	COMP-SWITCH,WIPER MOTOR(TO E/# R-40000)	1	1	1.6L	
	10	25260-25500	SWITCH-WIPER & WASHER (FROM E/#R-40001 TO SEP-67)	1	2	ALL	N
*	11	25260-25900	COMP-SWITCH,WIPER & WASHER (FROM OCT-67)	1	1	ALL	N
	12	25260-A7400	COMP-SWITCH,WIPER & WASHER (FROM JULY-69)	1	1	ALL	Y
	13	25265-13200	KNOB-WIPER & WASHER SW (TO SEP-67)	1	5	ALL	
*	14	25265-25900	KNOB-WIPER & WASHER (FROM OCT-67)	1	5	ALL	N

FIG. 22A

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	15	25265-A7400	KNOB-WIPER & WASHER (FROM JULY-69)	1	5	ALL	Y
	16	25320-02700	COMP.-SWITCH, STOP LAMP FOR TANDEM BRAKE CYLI NDER	1	10	1.6L	
	17	25320-89900	COMP-SWITCH, STOP LAMP FOR TANDEM BRAKE CYLIN DER	1	10	1.6L	Y
*	18	25320-73000	COMP.-SWITCH, STOP LAMP FOR TANDEM BRAKE CYLI NDER (FROM E/# R-40001)	1		ALL	N
	19	25320-89910	COMP-SWITCH, STOP LAMP FOR TANDEM BRAK CYLIND ER	1	1	ALL	Y
	20	25320-73001	COMP-SWITCH, STOP LAMP FOR TANDEM BRAK CYLIND ER	1	1	ALL	Y
	21	25370-61500	COMP.-SWITCH, FOG LAMP	1	1	OP, 1.6L	
	22	25370-25500	COMP.-SWITCH, FOG LAMP (C FROM E/# R-40001)	1	2	OP, ALL	N
	23	25330-10600	LIGHTER-CIGARETTE (TO SEP-67)	1	1	ALL	
*	24	25330-25900	LIGHTER-CIGARETTE (FRO M OCT-67)	1	1	ALL	N
	25	25330-A7400	LIGHTER-CIGARETTE (FRO M JULY-69)	1	1	ALL	Y
*	26	B5330-10601	ELEMENT WITH KNOB (TO SEP-67)	1	1	ALL	
	27	B5330-10602	ELEMENT WITH KNOB (TO SEP-67)	1	1	ALL	N
	28	B5330-25901	ELEMENT WITH KNOB (FRO M OCT-67)	1	1	ALL	N
	29	25335-10600	ASSY-KNOB, CIGARETTE LI GHTER	1	5	ALL	
	30	25335-A7400	ASSY-KNOB, CIGARETTE LIGHTER (FROM JULY-69)	1	5	ALL	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	31	25410-14600	ASSY-BLOCK, FUSE (TO SEP-67)	1	1	ALL	
	32	25410-22000	ASSY-BLOCK, FUSE (FROM OCT-67 TO SEP-68)	1	1	ALL	N
*	33	25410-A3200	ASSY-BLOCK, FUSE (FROM OCT-68)	1	1	ALL	N
	34	25410-A3250	ASSY-BLOCK, FUSE (FROM OCT-68)	1	1	R DRIVE	Y
	35	25410-A3251	ASSY-BLOCK, FUSE (FROM OCT-68)	1	1	L DRIVE	N
	36	25415-22000	COVER-FUSE BLOCK (FROM OCT-67)	1	1	ALL	
	37	25463-50000	FUSE-30A	1	100	ALL	
	38	25463-89901	FUSE-30A	1	100	ALL	Y
*	39	25462-50000	FUSE-20A	2	100	ALL	
	40	25462-89901	FUSE-20A	2	10	ALL	Y
*	41	25467-30800	FUSE-8A	1	1	ALL	
	42	25478-89900	FUSE-8A	1	50	ALL	Y
	43	00314-02210	SCREW TO FIX FUSE BLOCK (TO SEP-68)	2	50	ALL	
	44	00314-02510	SCREW TO FIX FUSE BLOCK (FROM OCT-68)	2	50	ALL	N
	45	00915-11010	WASHER-LOCK TO FIX FUSE BLOCK (TO SEP-68)	2	50	ALL	
	46	00915-41010	WASHER-PLAIN TO FIX FUSE BLOCK	2	50	ALL	
*	47	25540-12900	SWITCH-TURN & DIM (TO SEP-66)	1	1	SP SR	
	48	85540-12900	SWITCH, TURN & DIM (FROM OCT-66 TO SEP-67)	1	1	SP, SR	C
*	49	25540-13000	SWITCH-TURN & DIM (TO SEP-66)	1	1	SPL SRL	


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	50	85540-13000	SWITCH-TURN & DIM (FROM OCT-66 TO SEP-67)	1	1	SPL, SRL	C
	51	25540-25900	SWITCH-TURN & DIM (FROM OCT-67)	1	1	ALL EXC EUROPE	N
	52	25540-25901	SWITCH-TURN DIMMER & PASSING SIGNAL (FROM OCT-67)	1	1	EUROPE	
	53	25540-25900	SWITCH-TURN & DIMMER (FROM OCT-68)	1	1	ALL EXC USA	
	54	25540-A3200	SWITCH-TURN & DIMMER (FROM OCT-68)	1	1	USA	
*	55	25230-10600	COMP.,-RELAY, LOWER BEAM	1	1	ALL	
	56	25230-28000	COMP.,-RELAY, LOWER BEAM	1	1	ALL	Y
	57	25230-89905	COMP.,-RELAY, LOWER BEAM (FROM OCT-68)	1	1	ALL	N
	58	00511-21010	SCREW TO FIX RELAY	2	50	ALL	
	59	25520-33500	ASSY-FLASHER UNIT (12V)	1	5	ALL (EXC. AUSTRALIA)	
	60	25520-89901	ASSY-FLASHER UNIT (12V), AUDIABLE	1	1	SP SR (AUSTRALIA)	
	61	25520-89911	ASSY FLASHER UNIT 4WAY (FROM OCT-68)	1	5	ALL EXC USA & CANADA	
	62	25520-89904	ASSY FLASHER UNIT (FROM OCT-68)	1	1	USA & CANADA	
	63	25520-89910	ASSY FLASHER UNIT 4WAY (FROM OCT-68)	1	1	USA & CANADA	
	64	00314-01010	SCREW TO FIX FLASHER UNIT	1	50	ALL	
	65	00915-11010	WASHER-LOCK TO FIX FLASHER UNIT	1	50	ALL	
*	66	26310-16300	ASSY-HORN, HIGH	1	1	1,6L	
	67	26310-14600	ASSY-HORN, HIGH (FROM E/ # R-40001)	1	1	ALL	Y

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	68	26330-16300	ASSY-HORN,LOW	1	1	1,6L	
*	69	26330-14600	ASSY-HORN,LOW	1	1	1,6L	Y
	70	26330-14601	ASSY-HORN,LOW(FROM E/# R-40001)	1	1	ALL	Y
	71	00114-52210	BOLT TO FIX HORN	4	50	ALL	
	72	00915-11510	WASHER-LOCK TO FIX HORN	4	50	ALL	
	73	26320-14800	ASSY-RELAY,HORN	1	2	ALL	
	74	25230-89903	ASSY-RELAY,HORN	1	1	ALL	N
	75	00511-21010	SCREW (TO FIX RELAY)	2	50	S,U,L.	
	76	25595-14610	KIT-FLASHER,4-WAY	1	1	OP,SP,SR	
	77	25595-14611	KIT-FLASHER 4 WAY	1	1	OP SP SR	
	78	25910-25600	SWITCH-HAZARD WARNING (TO SEP-67)	1	50	OP,ALL	
*	79	25910-25900	SWITCH-HAZARD WARNING (FROM OCT-67 TO SEP- 68)	1	1	OP ALL	N
*	80	25910-25900	SWITCH-HAZARD WARNING (FROM OCT-68)	1	1	OP,ALL EXC U.S.A. & CANADA	Y
	81	25910-A7500	SWITCH-HAZARD WARNING (FROM JULY-69)	1	1	OP,ALL EXC U.S.A. & CANADA	Y
*	82	25596-A3300	SWITCH-HAZARD WARNING (FROM OCT-68)	1	1	U.S.A. & CANADA	N
	83	25596-A7800	SWITCH-HAZARD WARNING (FROM JULY-69)	1	1	U.S.A. & CANADA	Y
	84	25165-25600	KNOB-HAZARD WARNING SW (TO SEP-67)	1	5	OP,ALL	
*	85	25915-25900	KNOB-HAZARD WARNING SW (FROM OCT-67)	1	5	OP ALL	N
	86	25915-A7400	KNOB-HAZARD WARNING SW (FROM JULY-69)	1	5	OP,ALL	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	87	25520-89910	ASSY-UNIT,FLASHER	1	1	OP,SP,SR( EXC, AUSTRALIA) SPL, SRL	
	88	25520-89911	ASSY-UNIT,FLASHER	1	5	OP,SP,SR (EXC AUSTRALIA) SPL, SRL	Y
	89	25520-74100	ASSY-UNIT,FLASHER,AUDI BLE	1	1	OP, AUSTRALIA ONLY	
	90	25597-14611	HARNES- HAZZARD	1	1	OP SP SR	
	91	25810-25900	SWITCH-BRAKE WARNING (FROM OCT-67)	1	1	ALL	
*	92	25810-A3200	SWITCH-BRAKE WARNING (FROM OCT-68) (NOT ADOP TED)	1		ALL	N
	93	25810-25901	SWITCH-BRAKE WARNING	1	1	ALL	Y
	94	25815-25900	KNOB-BRAKE WARNING SW (FROM OCT-67)	1	5	ALL	
	95	24814-A7800	WARNING BUZZER (FROM JULY-69)	1	1	USA & CANA DA	
	96	25360-89901	SWITCH DOOR (FROM JULY -69)	1	5	USA & CANA DA	



MAP LAMPS

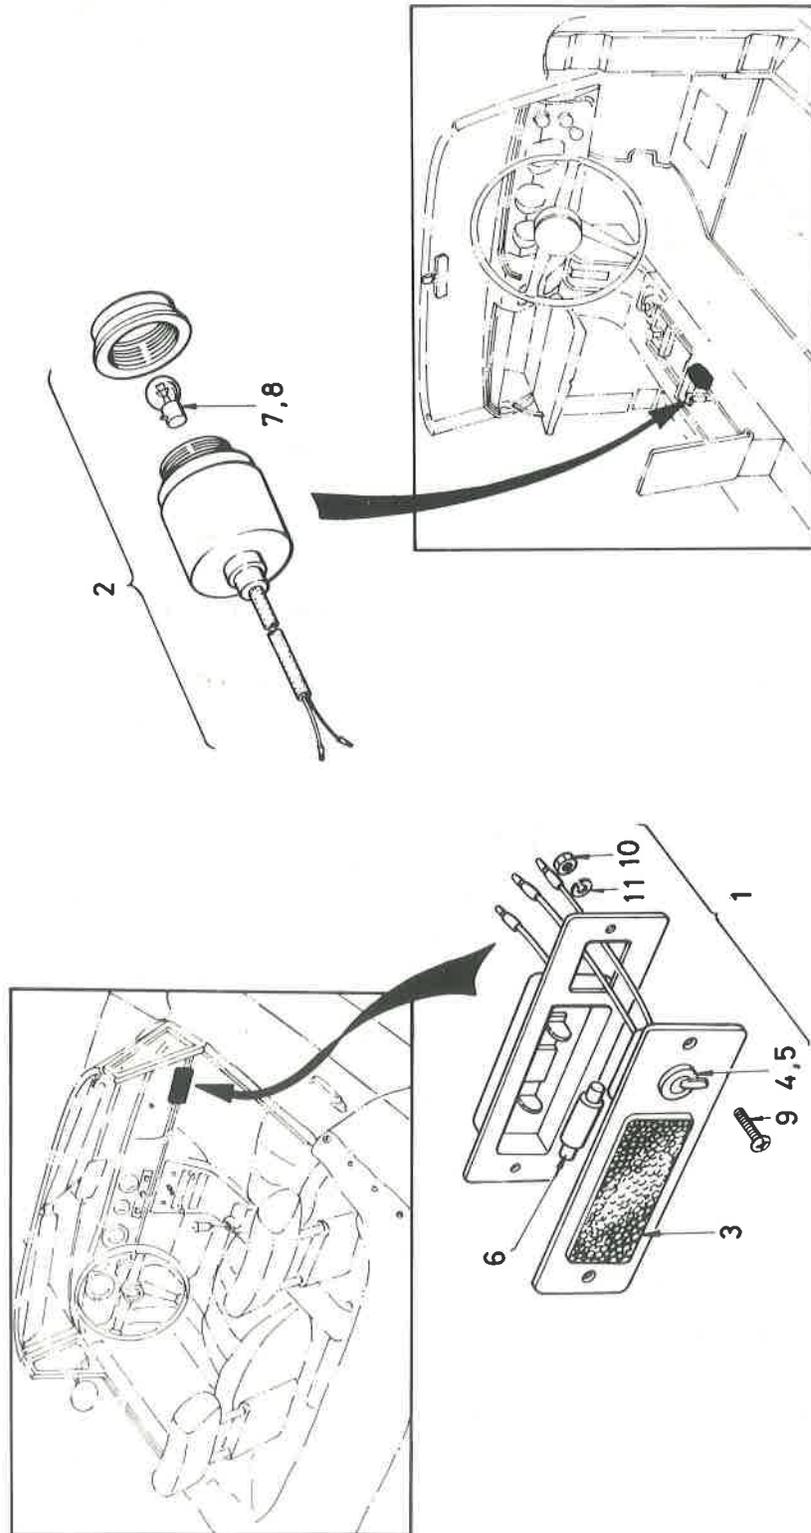


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>MAP LAMPS</b>				
	1	26410-12900	ASSY=LAMP MAP (TO SEP-67)	1	ALL		
	2	26410-25901	ASSY=LAMP MAP (FROM OCT-67)	1	ALL		N
	3	26512-12900	ASSY=LENS & RIM, MAP LAMP (TO SEP-67)	1	ALL		
*	4	25270-12900	COMP=SWITCH, MAP LAMP (TO SEP-67)	1	ALL		
	5	25270-10400	COMP=SWITCH, MAP LAMP (TO SEP-67)	1	ALL		Y
*	6	26718-10600	BULB 12V-1.5W (TO SEP-67)	1	ALL		
*	7	26717-04200	BULB 12V-8W (FROM OCT-67)	1	ALL		N
	8	26715-89901	BULB 12V-8W (FROM OCT-67)	1	ALL		Y
	9	00334-01210	SCREW=MACHINE (TO SEP-67)	2	ALL		
	10	00911-10610	NUT=HEX (TO SEP-67)	2	ALL		
	11	00915-10610	WASHER=SPRING (TO SEP-67)	2	ALL		

**NOTE**



**CHASSIS**

CLUTCH

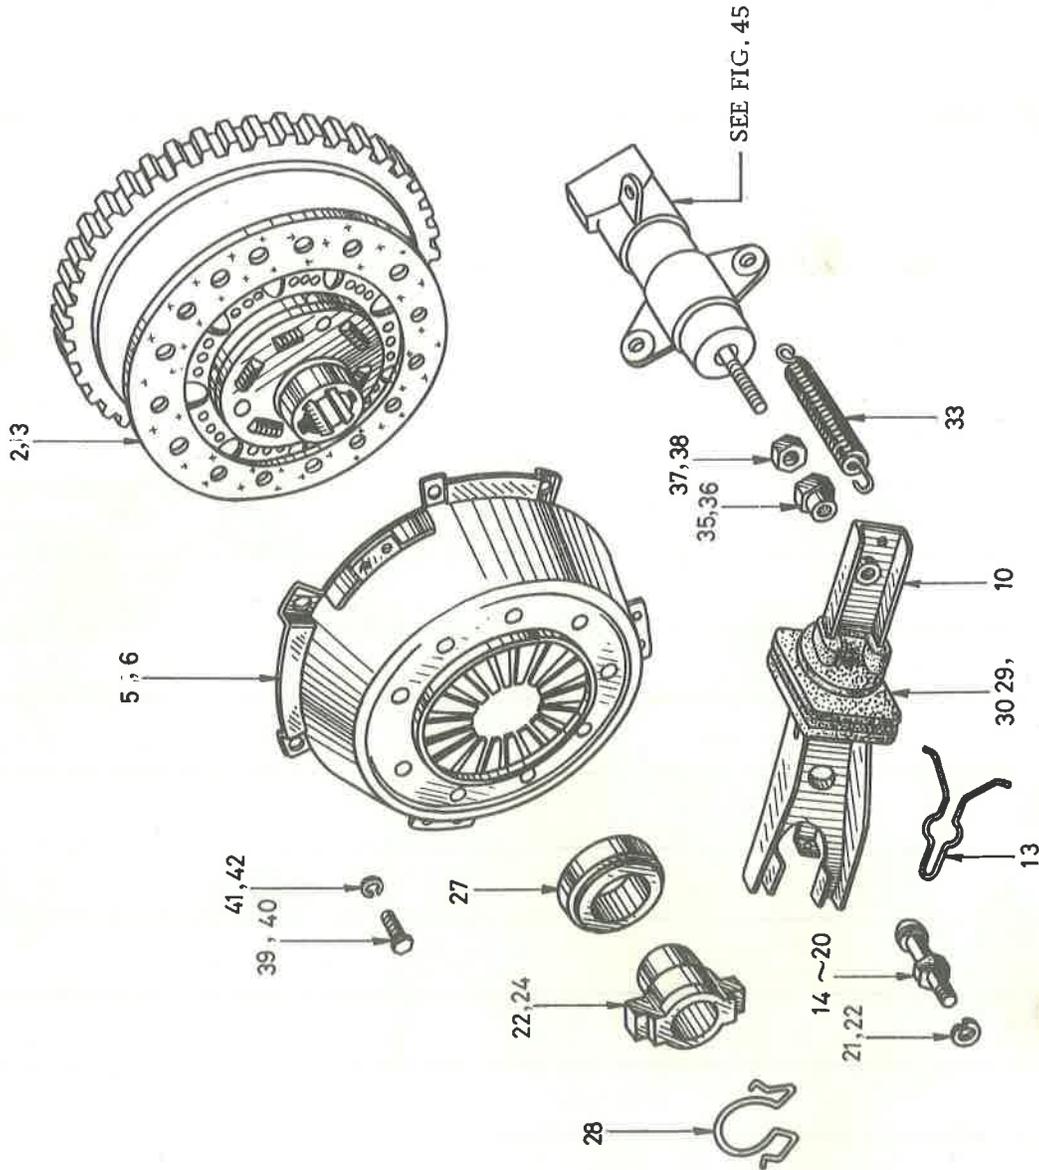

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>CLUTCH</b>				
*	1	30100-14600	ASSY-DISC, CLUTCH	1		ALL	
*	2	30100-14601	ASSY-DISC, CLUTCH	1	1	ALL	Y
	3	30100-14602	ASSY-DISC, CLUTCH (HT 50S-17)	1	1	ALL	Y
*	4	30210-14600	ASSY-COVER, CLUTCH (465 KG)	1	1	1,6L	
	5	30210-20100	ASSY-COVER, CLUTCH (600K G) (FROM E/# R-40001)	1	1	ALL	N
	6	30210-20110	ASSY-COVER, CLUTCH (650K G)	1	1	OP, ALL	
	7	30223-E4100	CAP-SCREW CLUTCH COVER TO FLY WHEEL	6		ALL	
	8	08915-23810	WASHER-LOCK	6		ALL	
	9	30531-14602	LEVER-CLUTCH WITHDRAWA L	1	1	1,6L	
	10	30531-78002	LEVER-CLUTCH WITHDRAWA L	1	1	2L	
*	11	30534-14601	SPRING-RETAINER, WITHDR AWAL LEVER	1		1,6L	
*	12	30534-14602	SPRING-RETAINER, WITHDR AWAL LEVER	1		ALL	Y
	13	30534-21000	SPRING-RETAINER, WITHDR AWAL LEVER	1	5	ALL	Y
	14	30537-14600	PIN-BALL, WITHDRAWALL LEVER (TO SEP-67)	1	10	1,6L	
	15	30537-21000	PIN-BALL, WITHDRAWAL LEVER (FROM OCT-67)	1	5	1,6L	N
*	16	30537-21001	PIN-BALL WITHDRAWAL LEVER	1		1,6L	N


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	17	30537-21010	PIN-BALL WITHDRAWAL LEVER	1	10	1,6L	Y
*	18	30537-78100	PIN-BALL, WITHDRAWAL LEVER	1	5	2L	
*	19	30537-78001	PIN-BALL, WITHDRAWAL LEVER	1	10	2L	Y
	20	30537-E3200	PIN-BALL, WITHDRAWAL LEVER	1	5	2L	Y
	21	00915-11610	WASHER-LOCK	1	50	1,6L	
	22	08915-14010	WASHER-LOCK	1	50	2L	
	23	30501-14601	SLEEVE-BEARING, CLUTCH RELEASE (TO SEP-67)	1	1	ALL	
	24	30501-28000	SLEEVE-BEARING, CLUTCH RELEASE (FROM OCT-67)	1	1	1,6L	N
	25	30501-23001	SLEEVE-BEARING, CLUTCH RELEASE (FROM OCT-67)	1	1	2L	Y
*	26	30502-14600	BEARING-CLUTCH RELEASE	1		1,6L	
	27	30502-14601	BEARING-CLUTCH RELEASE	1	1	ALL	Y
	28	30514-14600	SPRING-HOLDER, BEARING SLEEVE	1	10	ALL	
	29	30542-14601	COVER-DUST, CLUTCH WITH DRAWAL LEVER (TO SEP-67)	1	5	1,6L	
	30	30542-14602	COVER-DUST, CLUTCH WITH DRAWAL LEVER (FROM OCT-67)	1	5	1,6L	N
	31	30542-78001	COVER-DUST, CLUTCH WITH DRAWAL	1	5	2L	
*	32	30533-14600	SPRING-RETURN	1	10	ALL	
	33	30533-76001	SPRING-RETURN	1	10	ALL	Y
*	34	30547-14600	NUT-PUSH, WITHDRAWAL LEVER	1	5	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	35	30547-78000	NUT-PUSH, WITHDRAWAL LE VER (FROM E/# R-40001)	1	5	1.6L	Y
	36	30547-78001	NUT-PUSH, WITHDRAWAL LE VER	1	10	2L	
	37	12112-02700	NUT-PAL	1	50	ALL	
	38	00911-34510	NUT-PAL	1	50	1.6L	Y
	39	00124-52210	BOLT (TO E/# R-40000)	6	50	1.6L	
	40	08120-82010	BOLT (FROM E/# R-40001) TO FIX CLUTCH COVER	6	50	ALL	N
	41	00915-21510	WASHER-LOCK (TO E/# R- 40000)	6	50	1.6L	
	42	08915-23810	WASHER-LOCK (FROM E/# R -40001)	6	50	ALL	N

NOTE





TRANSMISSION

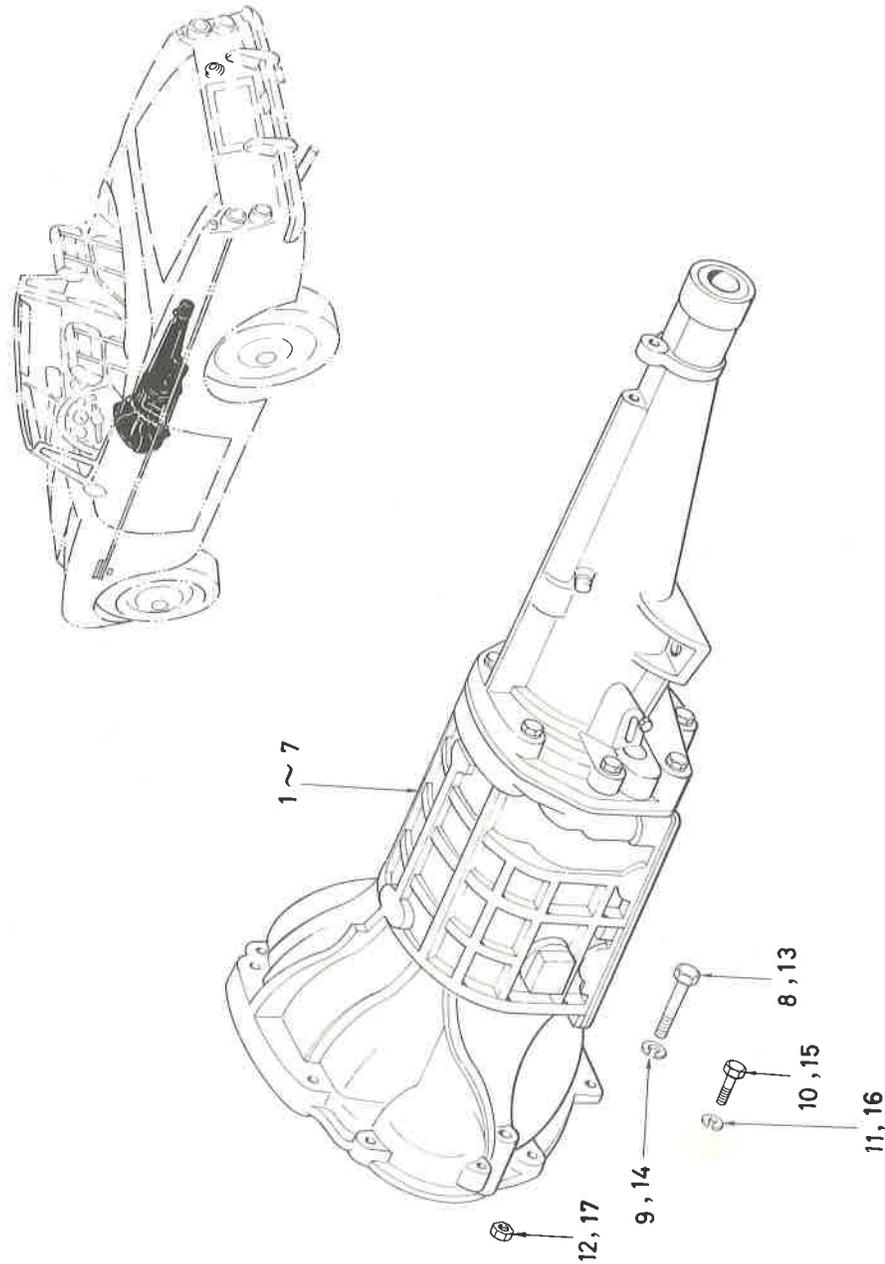

TRANSMISSION GASKET KIT

19 KIT-GASKET TRANSMISSION

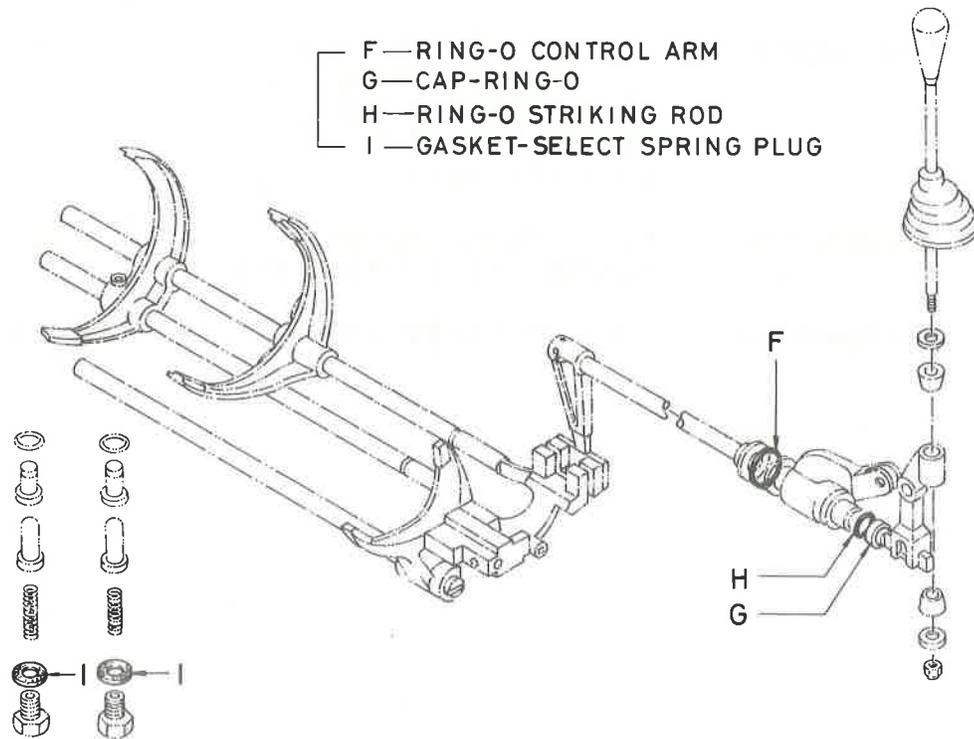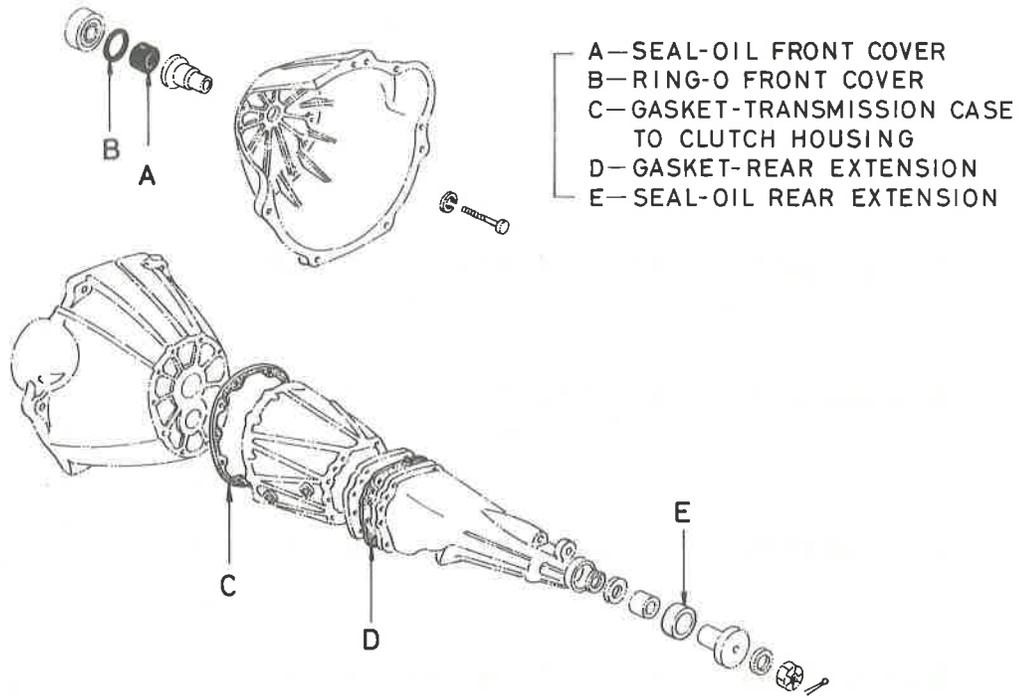


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>TRANSMISSION</b>							
<u>EMISSION CONTROL signifies USA &amp; ONTARIO in CANADA.</u>							
	1	32010-14653	TRANSMISSION 16/5 FOR F/R 3,889(TO SEP-67)	1	1	1.6L	
	2	32010-14655	TRANSMISSION 16/5 FOR F/R 3,889 (FROM OCT-67)	1	1	1.6L SERVO EXC EMISSION CONTROL	N
	3	32010-A3350	TRANSMISSION 16/5 FOR F/R 3,889	1		1.6L WARNER EXC EMISSION CONTROL	
	4	32010-A7752	ASSY-TRANSMISSION 16/5	1	1	1.6L SERVO EMISSION CONTROL	
	5	32010-A7750	ASSY-TRANSMISSION 16/5	1	1	1.6L WARNER EMISSION CONTROL	
	6	32010-25551	ASSY-TRANSMISSION, 5-SP EED(18/6)FOR FINAL RATIO 3,7000(R12,922,1:2.957,2:1.858,3:1.311,4:1.00,5:10.852)	1	1	2L SERVO	
	7	32010-A2550	ASSY-TRANSMISSION 5-SPEED 18/6 FOR 3,700	1	1	2L WARNER	
	8	00131-66010	BOLT TRANSMISSION TO ENGINE	4	25	1.6L	
	9	00915-21610	WASHER-SPRING TRANSMISSION TO ENGINE	4	50	1.6L	
	10	00111-52510	BOLT TRANSMISSION CASE TO ENGINE PLATE	2	50	1.6L	
	11	00915-11510	WASHER-SPRING TRANSMISSION CASE TO ENGINE PLATE	2	50	1.6L	
	12	00911-11510	NUT TRANSMISSION CASE TO ENGINE PLATE	2	50	1.6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	13	08131-06510	BOLT TRANSMISSION TO ENGINE	4	10	2L	
	14	08915-24010	WASHER-SPRING TRANSMISSION TO ENGINE	4	50	2L	
	15	08110-82010	BOLT-M8 X 1.25 TRANSMISSION CASE TO ENGINE PLATE	2	50	2L	
	16	08915-13810	WASHER-SPRING TRANSMISSION CASE TO ENGINE PLATE	2	50	2L	
	17	08911-10810	NUT-M8 X 1.25 TRANSMISSION CASE TO ENGINE PLATE	2	50	2L	
	18	32010-22026	KIT-GASKET TRANSMISSION	1	1	1.6L	
*	19	32010-25525	KIT-GASKET TRANSMISSION	1	1	2L	
	20	32010-25526	KIT-GASKET TRANSMISSION	1	2L		Y


**NOTE**



*Enjoy the Assurance of Datsun Factory Parts.*

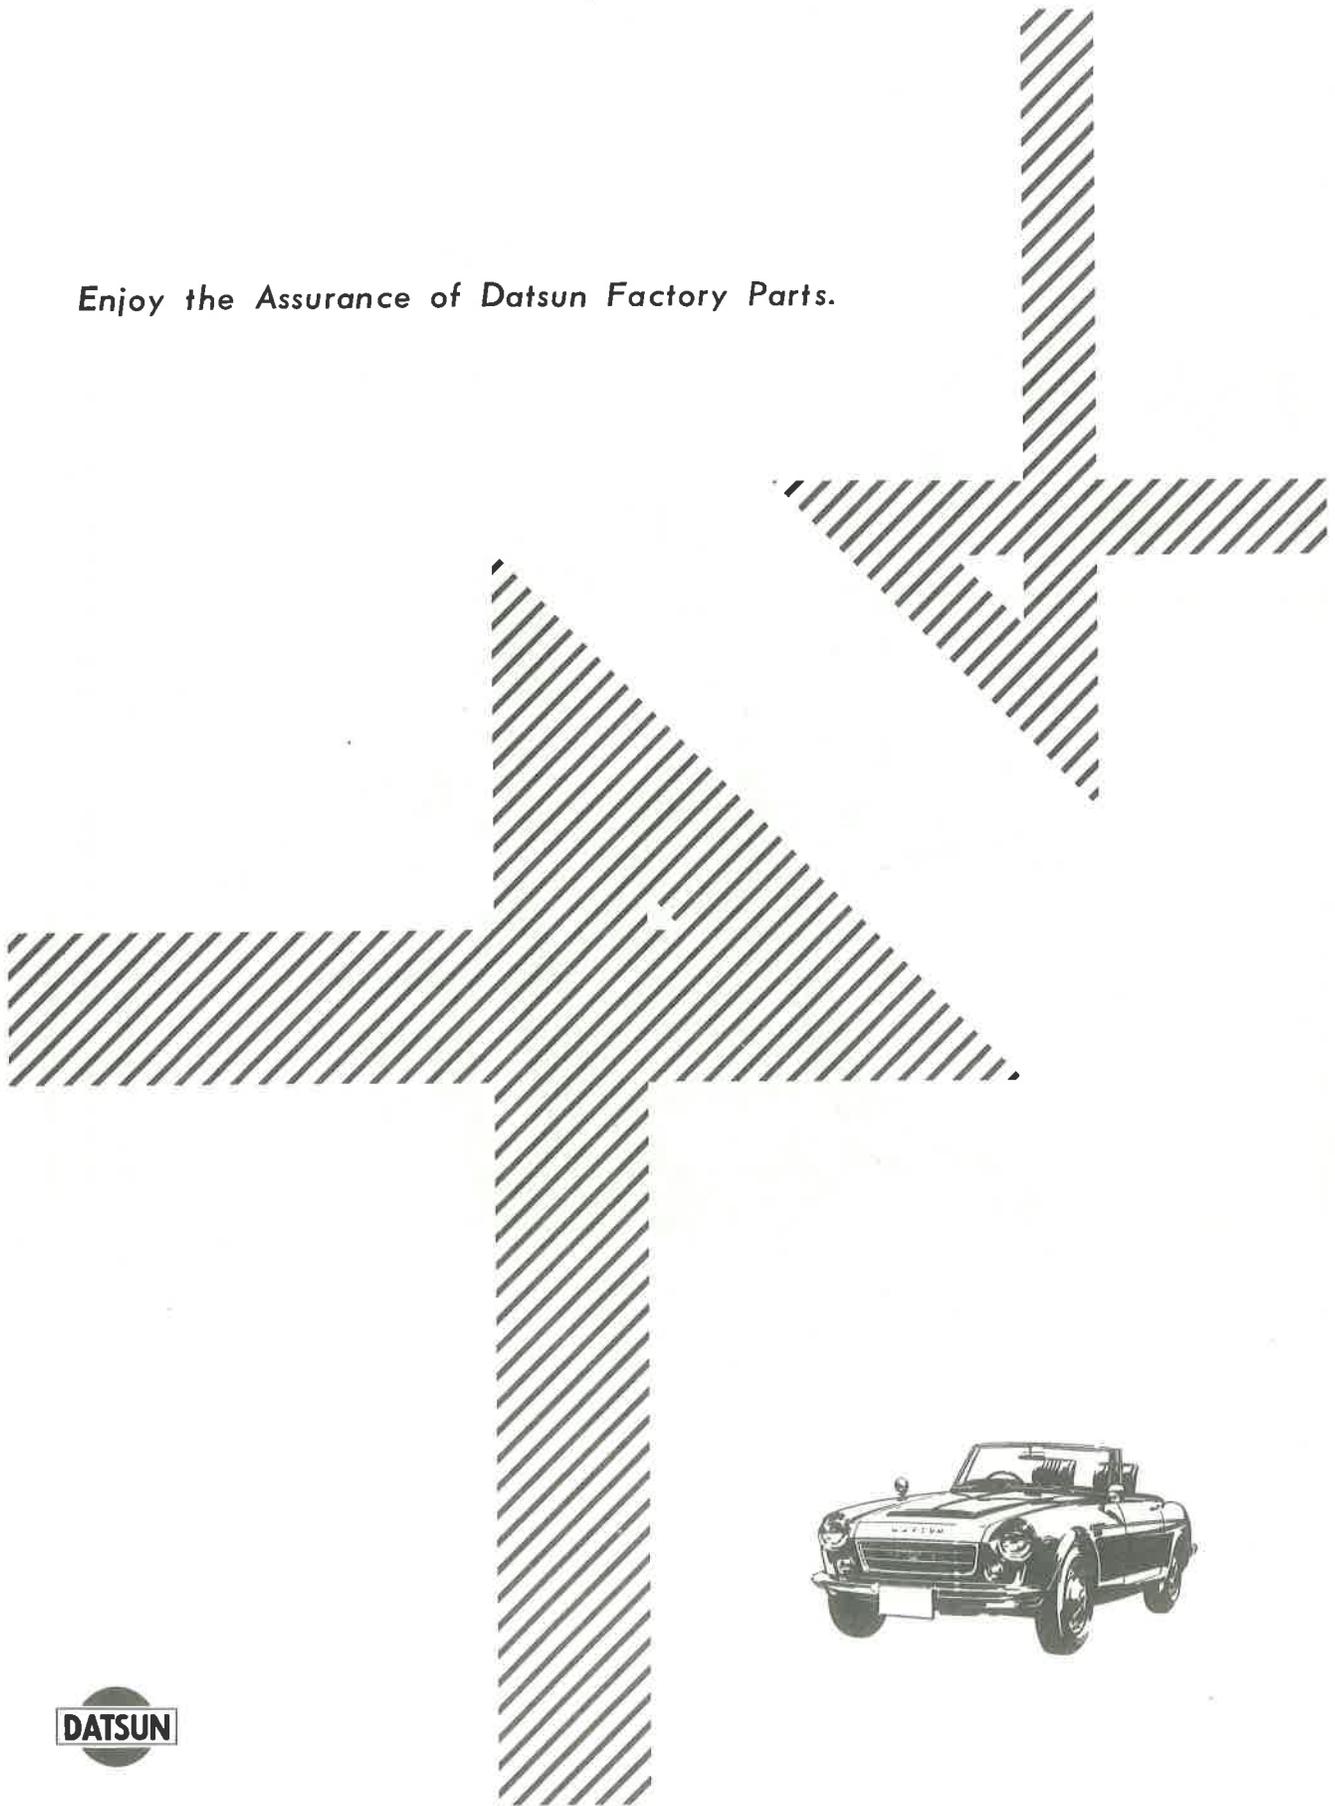

TRANSMISSION CASE (1.6 L)

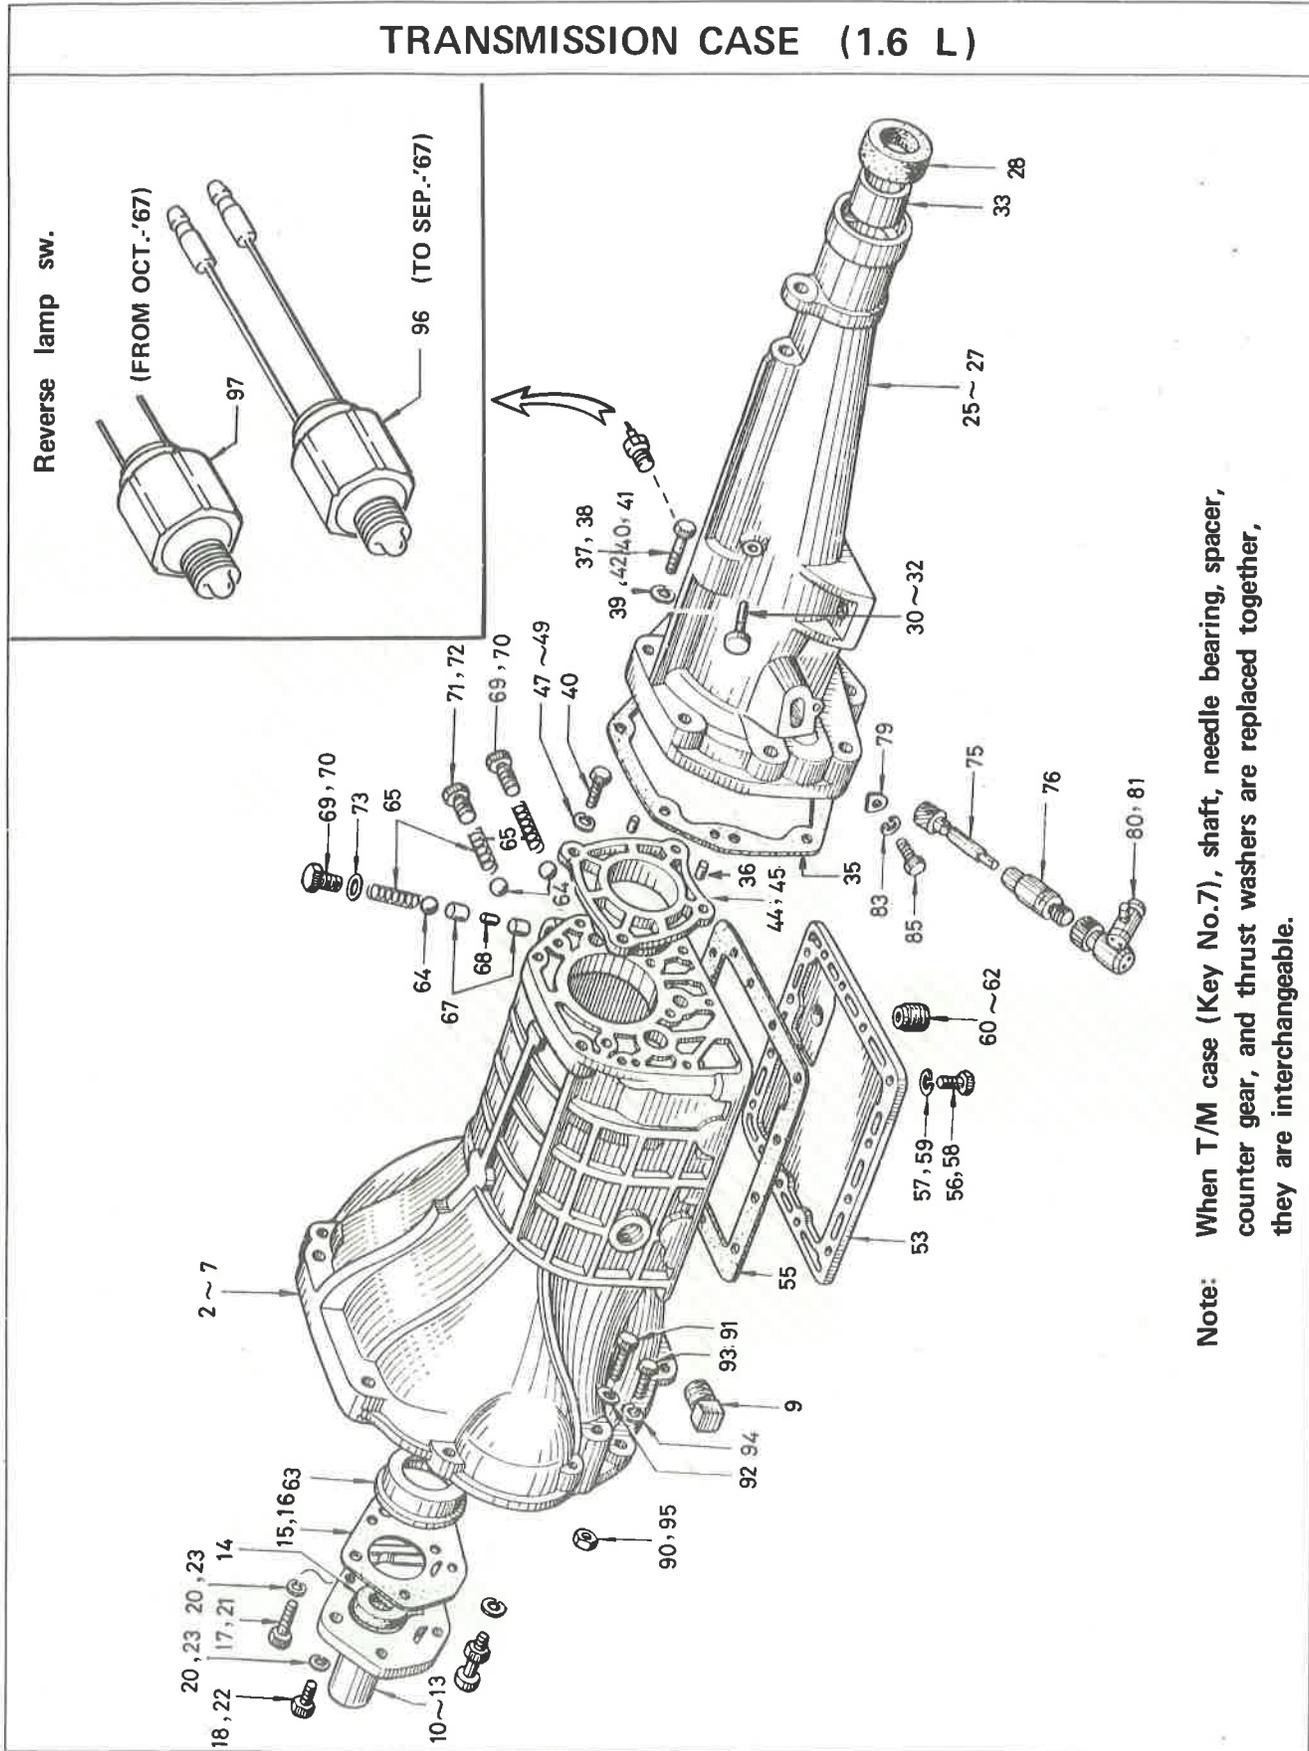

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>TRANSMISSION CASE (1.6L)</b> <u>EMISSION CONTROL signifies USA &amp; ONTARIO in CANADA.</u>							
*	1	32101-14601	COMP.-CASE, TRANSMISSIO N	1		1.6L	
	2	32101-14602	COMP.-CASE, TRANSMISSIO N	1	1	1.6L	Y
*	3	32101-15800	COMP.-CASE, TRANSMISSIO N (FROM C/# SP311-00987 , SPL311-004518)	1		1.6L	Y
*	4	32101-18800	CASE-TRANSMISSION (FROM E/# R-40001 TO SEP-67)	1		1.6L	Y
	5	32101-14602	CASE-TRANSMISSION (FROM E/# R-40001 TO SEP-67)	1	1	1.6L	Y
	6	32101-14610	CASE-TRANSMISSION (FRO M OCT-67)	1	1	1.6L	N
	7	32101-A3210	CASE-TRANSMISSION	1	1	1.6L	C
*	8	00931-11200	PLUG-TAPER THREAD	1		1.6L	
	9	00931-11210	PLUG-TAPER THREAD	1	10	1.6L	Y
*	10	32111-14600	COVER-FRONT (TO SEP-67 )	1		1.6L	
	11	32110-14601	COVER-FRONT (TO SEP-67 )	1	1	1.6L	Y
*	12	32111-22000	COVER-FRONT (FROM OCT- 67)	1		1.6L	N
	13	32110-A1100	COVER-FRONT	1	1	1.6L	N
	14	32113-14601	SEAL-OIL, FRONT COVER	1	10	1.6L	
	15	32112-14810	GASKET-FRONT COVER	1	10	1.6L	
	16	32112-A0900	GASKET-FRONT COVER	1	10	1.6L	N
	17	00114-53510	BOLT TO FIX FRONT COVE R	2	50	1.6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	18	00114-52210	BOLT TO FIX FRONT COVER	3	50	1,6L	
*	19	00915-11500	WASHER-SPRING TO FIX FRONT COVER	5		1,6L	
	20	00915-11510	WASHER-SPRING TO FIX FRONT COVER	5	50	1,6L	Y
	21	08110-83510	BOLT HEX TO FIX FRONT COVER (METRIC)	3	25	1,6L	N
	22	08110-82510	BOLT HEX TO FIX FRONT COVER (METRIC)	2	50	1,6L	N
	23	08915-13810	WASHER SPRING TO FIX FRONT COVER (METRIC)	5	50	1,6L	N
*	24	32130-14600	ASSY-EXTENSION, REAR	1	1	1,6L	
	25	32130-14601	EXTENSION-REAR (FROM E/# R-40001 TO SEP-67)	1	1	1,6L	Y
	26	32130-14610	EXTENSION-REAR (FROM OCT-67)	1	1	1,6L EXC EMISSION CONTROL	N
	27	32130-A7700	EXTENSION-REAR	1	1	1,6L EMISSION CONTROL	
	28	32136-07200	SEAL-OIL, REAR EXTENSION	1	10	1,6L	
*	29	38322-14600	ASSY-BREATHER	1		1,6L	
	30	38322-20500	ASSY-BREATHER (FROM E/# R-40001)	1	2	1,6L	N
*	31	38322-21100	ASSY-BREATHER (METRIC)	1	10	1,6L	N
	32	38322-A0900	ASSY-BREATHER	1	10	1,6L	Y
	33	32132-14601	BUSH-REAR EXTENSION	1	1	1,6L	
*	34	32134-14600	GASKET-REAR EXTENSION	1		1,6L	
	35	32134-14810	GASKET-REAR EXTENSION	1	10	1,6L	Y
	36	32133-14600	PIN-DOWEL REAR EXTENSION	2	10	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	37	00114-53010	BOLT TO FIX REAR EXTENSION	4	50	1,6L	
	38	00114-54510	BOLT TO FIX REAR EXTENSION (INCH)	4	50	1,6L	
	39	00915-11510	WASHER-SPRING TO FIX REAR EXTENSION (INCH)	8	50	1,6L	
	40	08120-83210	BOLT HEX TO FIX REAR EXTENSION (METRIC)	4	50	1,6L	N
	41	08120-84510	BOLT HEX TO FIX REAR EXTENSION (METRIC)	4		1,6L	N
	42	08915-13810	WASHER SPRING TO FIX FRONT COVER (METRIC)	8	50	1,6L	N
*	43	32138-14600	RETAINER-BEARING, MAIN SHAFT	1		1,6L	
	44	32138-73200	RETAINER-BEARING, MAIN SHAFT	1	1	1,6L	Y
	45	32138-A0900	RETAINER-BEARING MAIN SHAFT	1	1	1,6L	N
	46	00114-52510	BOLT TO FIX BEARING RETAINER (INCH)	4	50	1,6L	
	47	00915-11510	WASHER-SPRING TO FIX BEARING RETAINER (INCH)	4	50	1,6L	
	48	08110-82510	BOLT TO FIX BEARING RETAINER (METRIC)	4	50	1,6L	N
	49	08915-13810	WASHER SPRING TO FIX BEARING RETAINER	4	50	1,6L	N
*	50	32161-14600	COVER-BOTTOM, TRANSMISSION CASE	1		1,6L	
*	51	32161-73200	COVER-BOTTOM, TRANSMISSION CASE	1		1,6L	Y
*	52	32161-14810	COVER-BOTTOM, TRANSMISSION CASE	1	1	1,6L	Y
	53	32161-A0925	COVER BOTTOM, TRANSMISSION CASE WITH DRAIN PLUG	1	1	1,6L	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
*	54	32162-14600	GASKET-BOTTOM COVER	1		1.6L	
	55	32162-14810	GASKET-BOTTOM COVER	1	10	1.6L	Y
	56	00114-52510	BOLT TO FIX BOTTOM COVER (INCH)	14	50	1.6L	
	57	00915-11510	WASHER-SPRING TO FIX BOTTOM COVER (INCH)	14	50		
	58	08110-81610	BOLT TO FIX BOTTOM COVER (METRIC)	14	50	1.6L	N
	59	08915-13810	WASHER SPRING TO FIX BOTTOM COVER (METRIC)	14	50	1.6L	N
	60	32103-14600	ASSY-PLUG, DRAIN	1	10	1.6L	
	61	11128-69200	ASSY-PLUG, DRAIN	1	10	1.6L	N
	62	11026-61000	WASHER DRAIN	1	50	1.6L	
	63	32208-14600	RETAINER-BEARING, MAIN DRIVE	1	1	1.6L	
	64	32829-26760	BALL-CHECKING	3	50	1.6L	
	65	32831-00100	SPRING-CHECKING BALL	3	50	1.6L	
*	66	32832-14600	PLUNGER-INTER LOCK	2		1.6L	
	67	32815-36900	PLUNGER-INTER LOCK	2	10	1.6L	Y
	68	32833-14600	PIN-INTER LOCK	1	10	1.6L	
	69	32834-14600	PLUG-CHECKING BALL	2	10	1.6L	
	70	32834-21100	PLUG-CHECKING BALL (METRIC)	2	10	1.6L	N
	71	32835-14600	PLUG-CHECKING BALL	1	10	1.6L	
	72	32835-78000	PLUG-CHECKING BALL (METRIC)	1	10	1.6L	N
	73	32836-14600	WASHER-PLAIN	3	10	1.6L	
*	74	32703-14616	ASSY-PINION, SPEEDOMETER (16T)	1	1	1.6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	75	32703-32200 <i>use 32703-22000</i>	PINION-SPEEDOMETER 16T NYLON	1	1	1,6L	Y
	76	32707-14600	ASSY-SLEEVE, SPEEDOMETER PINION	1	1	1,6L	
	77	32712-61000	PIN-RETAINING	1	10	1,6L	
	78	32873-14600	PIN-RETAINING	1		1,6L	Y
	79	32718-14600	PLATE-LOCK, SPEEDOMETER SLEEVE	1	10	1,6L	
*	80	32730-14600	ADAPTER-SPEEDOMETER PI NION	1	1	1,6L	
*	81	32730-28500	ADAPTER-SPEEDOMETER PI NION(W/CURVED GREASE N IPPLE)	1	1	1,6L	Y
*	82	00915-11400	WASHER-SPRING	1		1,6L	
	83	00915-11410	WASHER-SPRING	1	50	1,6L	Y
	84	00114-41610	BOLT	1	50	1,6L	
	85	08110-61210	BOLT	1	50	1,6L	Y
	86	00131-66010	BOLT TO FIX TRANSMISSI ON (INCH)	4	25	1,6L	
	87	00915-21610	WASHER-SPRING TO FIX TRANSMISSION (INCH)	4	50	1,6L	
	88	00111-52510	BOLT TO FIX TRANSMISSI ON (INCH)	2	50	1,6L	
	89	00915-11510	WASHER-SPRING TO FIX TRANSMISSION (INCH)	2	50	1,6L	
	90	00911-11510	NUT TO FIX TRANSMISSIO N (INCH)	2	50	1,6L	
	91	08131-06010	BOLT TO FIX TRANSMISSI ON (METRIC)	4	25	1,6L	N
	92	08915-24010	WASHER SPRING TO FIX TRANSMISSION (METRIC)	4	50	1,6L	N
	93	08110-82510	BOLT MBX1,25 TO FIX TRANSMISSION (METRIC)	2	50	1,6L	N

FIG. 31

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	94	08915-13810	WASHER SPRING TO FIX TRANSMISSION (METRIC)	2	50	1.6L	N
	95	08911-10810	NUT M8X1.25 TO FIX TRANSMISSION (METRIC)	2	50	1.6L	N
	96	25310-14600	COMP-SWITCH REV LAMP (TO SEP-67)	1	1	1.6L	
	97	32005-21100	COMP-SWITCH,REV LAMP (FROM OCT-67)	1	1	1.6L	N

**NOTE**

---

---

---



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

FIG. 31A

NISSAN MOTOR CO., LTD.

TRANSMISSION CASE (2 L)

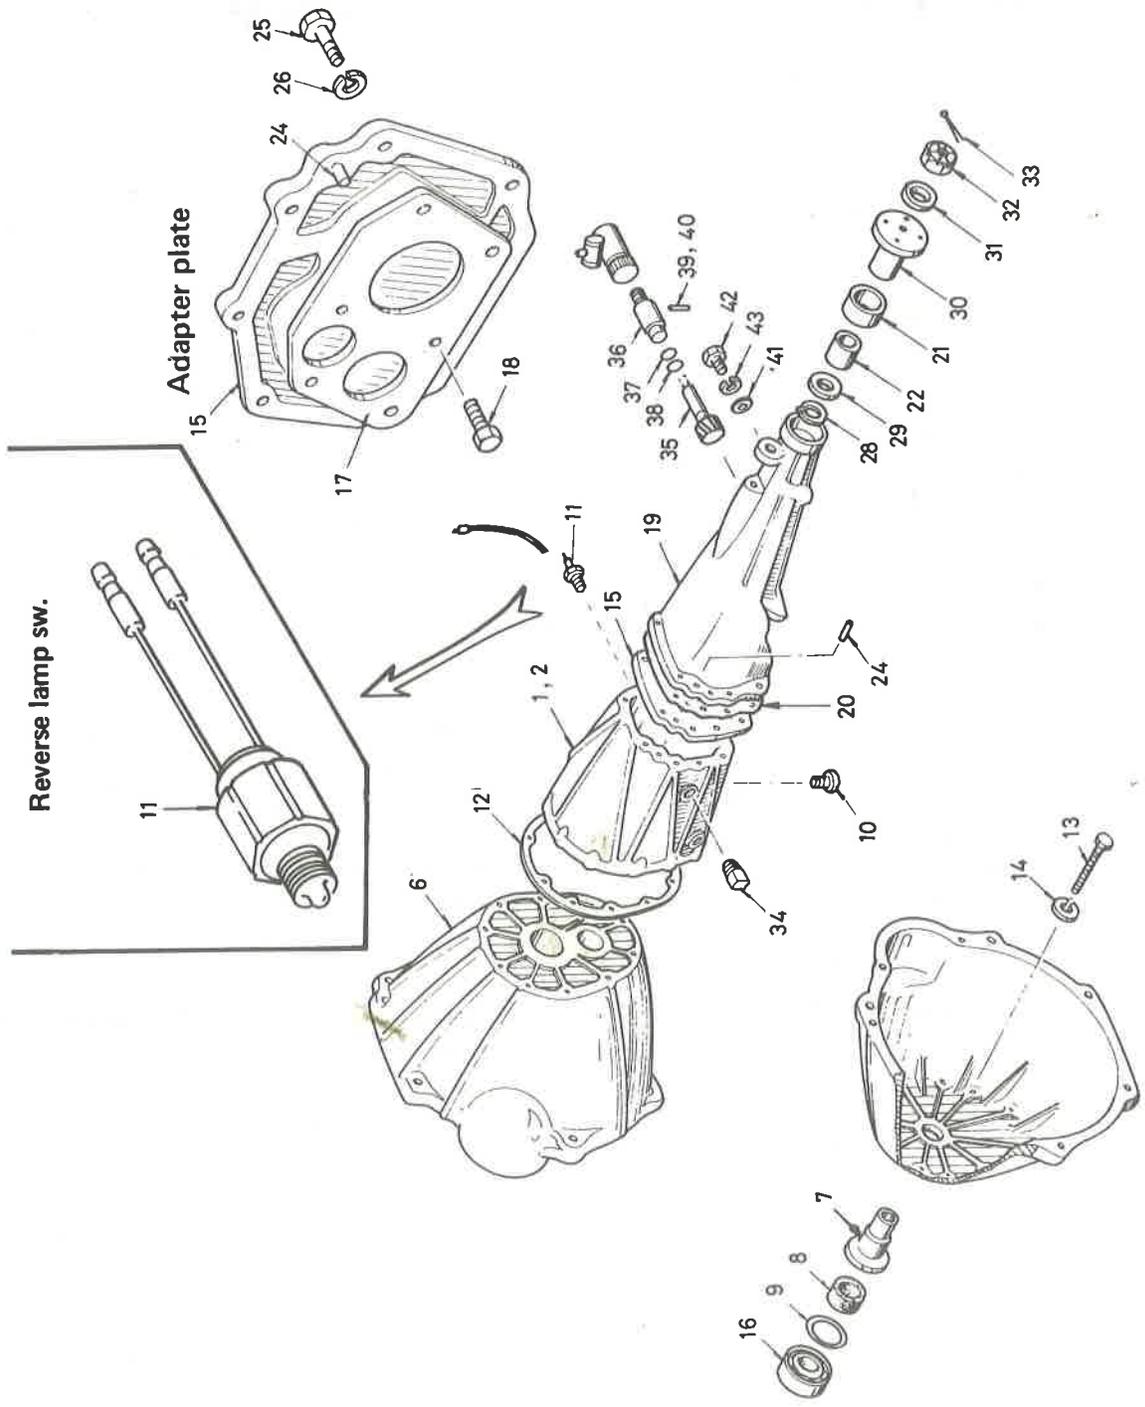

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>TRANSMISSION CASE (2L)</b>				
*	1	32101-78010	CASE-TRANSMISSION	1	1	2L	
	2	32101-78012	CASE-TRANSMISSION	1	1	2L	Y
*	3	32101-78011	CASE-TRANSMISSION	1	1	2L	
*	4	32101-78311	CASE-TRANSMISSION (G,D,C)	1	1	2L	Y
	5	32101-78312	CASE-TRANSMISSION	1	1	2L	Y
	6	30401-78201	HOUSING-CLUTCH	1	1	2L	
	7	32110-78000	COVER-FRONT	1	1	2L	
	8	32114-20100	SEAL-OIL,FRONT COVER	1	10	2L	
	9	32115-20100	"O"RING,FRONT COVER	1	10	2L	
	10	32103-14600	PLUG-DRAIN	1	10	2L	
	11	32005-21000	ASSY-SWITCH,REVERSE LA MP	1	1	2L	
	12	32118-78000	GASKET-TRANSMISSION CA SE TO CLUTCH HOUSING	1	10	2L	
	13	08120-83210	BOLT-M8 X 1,25 TRANSMI SSION CASE TO CLUTCH H OUSING	10	50	2L	
	14	08915-23810	WASHER-SPRING TRANSMIS SION CASE TO CLUTCH HO USING	10	50	2L	
	15	32138-78000	PLATE-ADAPTER	1	1	2L	
	16	32273-04100	BEARING-MAIN SHAFT	1	1	2L	
	17	32139-20100	RETAINER-BEARING	1	1	2L	
*	18	08320-82000	SCREW-MACHINE X 1,25	6	50	2L	
	19	32130-25500	ASSY-EXTENSION,REAR	1	1	2L	

FIG. 31A

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	20	32134-78000	GASKET REAR EXTENTION	1	10	2L	
	21	32136-20100	SEAL-OIL, REAR EXTENSION	1	10	2L	
	22	32203-14360	BEARING, REAR EXTENSION	1	1	2L	
	23	38322-78000	ASSY-BREATHER, REAR EXTENSION	1	5	2L	
	24	32106-20100	DOWEL-TRANSMISSION ADAPTER AND REAR EXTENSION	2	5	2L	
	25	08120-85010	BOLT REAR EXTENSION TO TRANSMISSION CASE	8	25	2L	
	26	08915-23810	WASHER-SPRING REAR EXTENSION TO TRANSMISSION CASE	8	50	2L	
•	27	32228-20103	RING-SNAP	1		2L	
	28	32228-20104	RING-SNAP	1	10	2L	Y
	29	32144-25500	SPACER	1	10	2L	
	30	32140-20100	FLANGE-COMPANION	1	1	2L	
	31	32248-25500	WASHER-PLAIN	1	5	2L	
	32	08911-05000	NUT	1	10	2L	
	33	00921-43510	PIN-COTTER	1	50	2L	
	34	00931-11210	PLUG-LEVER & FILLER	1	10	2L	
	35	32703-78102	ASSY-PINION, SPEEDOMETER(18T)	1	1	2L	
	36	32707-78000	ASSY-SLEEVE, SPEEDOMETER	1	1	2L	
	37	32709-14600	SEAL-OIL 10 X 16 X 4	1	10	2L	
	38	32710-14600	O-RING-PINION SLEEVE	1	10	2L	
	39	32712-61000	PIN-RETAINING, SPEEDOMETER	1	10	2L	


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	40	32873-14600	PIN-RETAINING, SPEEDOMETER	1		2L	Y
	41	32718-14600	PLATE-LOCK, SPEEDOMETER	1	10	2L	
	42	08110-61210	BOLT-PLATE LOCK M6	1	50	2L	
	43	08915-13610	WASHER-SPRING	1	50	2L	
	44	32701-66005	GEAR-DRIVE, MAIN SHAFT (6T)	1	1	2L	
	45	32720-36900	BALL-STEEL 1/4	1	20	2L	
	46	32228-20101	RING-SNAP	2	10	2L	

**NOTE**



TRANSMISSION SHAFT & GEAR (2 L) (SERVO SYNCHRO TYPE)

Note: Key No. 34 inc. 33 & 12.  
 Note: Key No. 68 inc. 73 Gear 1st.

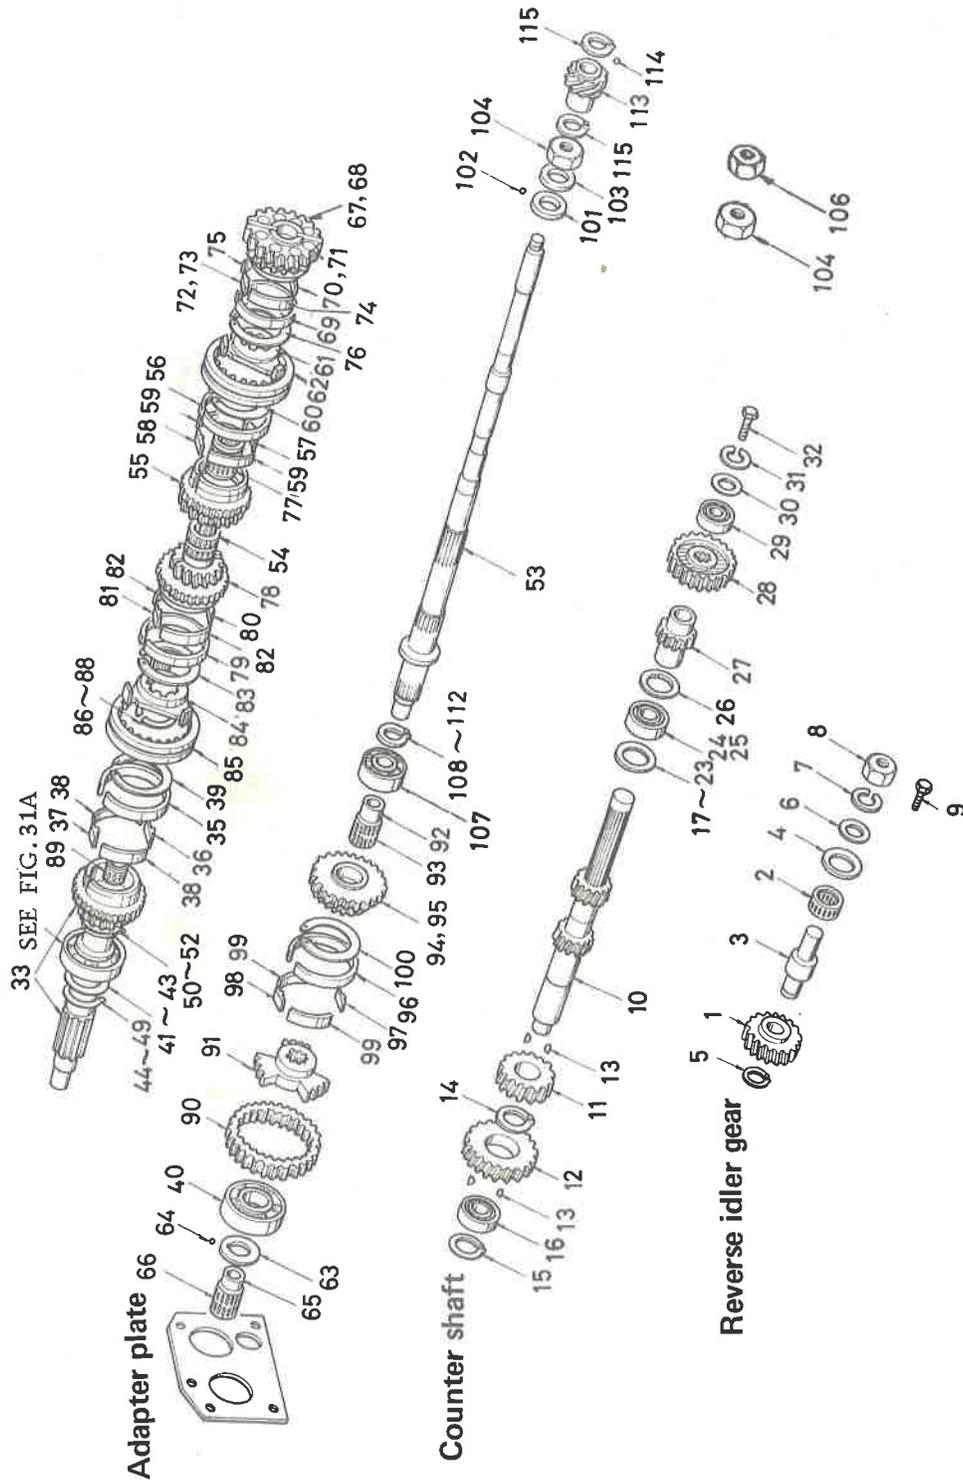

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>TRANSMISSION SHAFT &amp; GEAR (2L) (SERVO SYNCHRO TYPE)</b>							
	1	32282-78010	GEAR-REVERSE IDLER	1	1	2L	
	2	32272-36900	BEARING-NEEDLE 20 X 26 X 20	1	1	2L	
	3	32281-78010	SHAFT-REVERSE IDLER GE AR	1	1	2L	
	4	32284-78000	WASHER-THRUST REVERSE IDLER	2	1	2L	
	5	32285-20100	RING-SNAP, REVERSE IDLE R	1	5	2L	
	6	32294-78010	WASHER-PLAIN	1	10	2L	
	7	08915-14410	WASHER-SPRING	1	50	2L	
	8	08911-34410	NUT-REVERSE IDLER SHAF T M14 X 1.5	1	50	2L	
	9	32290-78000	SET-SCREW, REVERSE IDLE R	1	10	2L	
	10	32212-25501	SHAFT-COUNTER, (1114T, 2 119T)	1	1	2L	
	11	32216-78010	GEAR-COUNTER, 3RD, 26T	1		2L	
	12	32217-78000	GEAR-COUNTER, 4TH, 28T	1	1	2L	
	13	00926-51600	KEY-WOODRUFF	4	10	2L	
	14	00922-13200	RING-SNAP	1	50	2L	
	15	00922-12800	RING-SNAP	1	50	2L	
	16	32273-14360	BEARING-COUNTER SHAFT	1	1	2L	
	17	32218-20100	SHIM-BEARING, COUNTER S HAFT T 1.0	1		2L	
	18	32218-20101	SHIM-BEARING, COUNTER S HAFT T 0.9	1		2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	19	32218-20102	SHIM-BEARING,COUNTER S HAFT T 0,8	1		2L	
	20	32218-20103	SHIM-BEARING,COUNTER S HAFT T 0,7	1		2L	
	21	32218-20104	SHIM-BEARING,COUNTER S HAFT T 0,6	1		2L	
	22	32218-20105	SHIM-BEARING,COUNTER S HAFT T 0,5	1		2L	
	23	32218-20106	SHIM-BEARING,COUNTER S HAFT T 0,4	1		2L	
	24	32203-14360	BEARING-COUNTER SHAFT	1	1	2L	
	25	32203-E0100	BEARING-COUNTER SHAFT	1	1	2L	Y
	26	32224-20100	RING-BEARING,COUNTER S HAFT	1	10	2L	
	27	32220-25500	GEAR-COUNTER SHAFT,REV ERSE	1	1	2L	
	28	32310-25500	GEAR-COUNTER SHAFT,OVE R DRIVE(5TH)	1	1	2L	
	29	21030-15760	BEARING-COUNTER SHAFT, OVER DRIVE	1	1	2L	
	30	08915-54010	WASHER-COUNTER SHAFT	1	50	2L	
	31	08915-14010	WASHER-SPRING	1	50	2L	
	32	32236-25500	BOLT-HEXAGON HEAD M10 X 1,5	1	10	2L	
	33	32200-25500	ASSY-GEAR,MAIN DRIVE	1	1	2L	
	34	32200-25550	SET-GEAR DRIVE M/D	1	1	2L	Y
	35	32611-14600	RING-SYNCHRONIZER	1	10	2L	
	36	32612-14601	BLOCK-THRUST	1	1	2L	
	37	32613-14601	BLOCK-ANCHOR	1	1	2L	
	38	32614-14600	BAND-BRAKE,2,5	2	10	2L	
	39	32616-14600	CIRCLIP	1	5	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	40	32273-04100	BEARING-MAIN DRIVE	1	1	2L	
	41	32205-20100	SPACER-MAIN DRIVE BRG T2 (TO SEP-67)	1	10	2L	
	42	32205-20101	SPACER-MAIN DRIVE BRG T2,1 (TO SEP-67)	1	10	2L	
	43	32205-20102	SPACER-MAIN DRIVE BRG T2,2 (TO SEP-67)	1	10	2L	
	44	32204-78000	RING-SNAP, MAIN DRIVE GEAR T1,80 (FROM OCT-67)	1	5	2L	
	45	32204-78001	RING-SNAP, MAIN DRIVE GEAR T1,87 (FROM OCT-67)	1	5	2L	N
	46	32204-78002	RING-SNAP, MAIN DRIVE GEAR T1,94 (FROM OCT-67)	1	5	2L	N
	47	32204-78003	RING-SNAP, MAIN DRIVE GEAR T2,01 (FROM OCT-67)	1	5	2L	N
	48	32204-78004	RING-SNAP, MAIN DRIVE GEAR T2,08 (FROM OCT-67)	1	5	2L	N
	49	32204-20100	RING-SNAP, MAIN DRIVE (TO SEP-67)	1	5	2L	
	50	32207-20100	RING-SNAP, MAIN DRIVE BEARING T 1,2	1	10	2L	
	51	32207-20101	RING-SNAP, MAIN DRIVE BEARING T 1,4	1	10	2L	
	52	32207-20102	RING-SNAP, MAIN DRIVE BEARING T 1,6	1	10	2L	
	53	32241-25500	SHAFT-MAIN	1	1	2L	
	54	32264-14600	BEARING-NEEDLE ROLLER	1	2	2L	
	55	32250-25501	ASSY-GEAR, 2ND	1	1	2L	
	56	32611-14600	RING-SYNCHRONIZER	1	10	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	57	32612-14601	BLOCK-THRUST	1	1	2L	
	58	32613-14601	BLOCK-ANCHOR	1	1	2L	
	59	32614-14600	BAND-BRAKE, 2,5	2	10	2L	
	60	32616-14600	CIRCLIP	1	5	2L	
	61	32601-14600	HUB-SYNCHRONIZER	1	1	2L	
	62	32606-14600	SLEEVE-COUPLING, SYNCHRONIZER	1	10	2L	
	63	32246-78000	WASHER-THRUST, MAIN SHAFT	1	5	2L	
	64	32247-20100	BALL-THRUST WASHER, MAIN SHAFT	1	50	2L	
	65	32253-14600	BUSH-1ST SPEED, MAIN SHAFT	1	2	2L	
	66	32264-14600	BEARING-NEEDLE, ROLLER	1	2	2L	
*	67	32242-25501	ASSY-GEAR, 1ST	1	1	2L	
	68	32242-25525	SET-GEAR, 1ST	1	1	2L	Y
	69	32611-14600	RING-SYNCHRONIZER	1	10	2L	
	70	32617-14601	BLOCK-THRUST	1	1	2L	
	71	32617-14610	BLOCK-THRUST	1	1	2L	N
	72	32618-14601	BLOCK-ANCHOR	1	1	2L	
	73	32613-14601	BLOCK-ANCHOR	1	1	2L	N
	74	32614-14600	BAND-BRAKE 2,5	1	10	2L	
	75	32615-14600	BAND-BRAKE 2,2	1	5	2L	
	76	32616-14600	CIRCLIP	1	5	2L	
	77	32264-14600	BEARING-NEEDLE, ROLLER	1	2	2L	
	78	32260-25501	ASSY-GEAR, 3RD	1	1	2L	
	79	32611-14600	RING-SYNCHRONIZER	1	10	2L	
	80	32612-14601	BLOCK-THRUST	1	1	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	81	32613-14601	BLOCK-ANCHOR	1	1	2L	
	82	32614-14600	BAND-BRAKE, 2, 5	2	10	2L	
	83	32616-14600	CIRCLIP	1	5	2L	
	84	32601-14600	HUB-SYNCHRONIZER	1	1	2L	
	85	32606-14600	SLEEVE-COUPLING, SYNCHRONIZER	1	10	2L	
	86	32263-14601	RING-SNAP, SYNCHRONIZER T 1,50	1	5	2L	
	87	32263-14602	RING-SNAP, SYNCHRONIZER T 1,55	1	10	2L	
	88	32263-14603	RING-SNAP, SYNCHRONIZER T 1,60	1	10	2L	
	89	32272-36900	BEARING-MAIN SHAFT PILE OT	1	1	2L	
	90	32245-25500	ASSY-GEAR, REVERSE, MAIN SHAFT	1	1	2L	
	91	32258-25500	HUB-SYNCHRONIZER, OVER DRIVE	1	1	2L	
	92	32349-25500	BUSH-OVER DRIVE, MAIN S HAFT	1	2	2L	
	93	32350-25500	BEARING-NEEDLE, OVER DR IVE, MAIN SHAFT	2	1	2L	
	94	32340-25500	ASSY-GEAR, OVER DRIVE, M AIN SHAFT	1	1	2L	
	95	32340-25501	ASSY-GEAR, OVER DRIVE, MAIN SHAFT	1		2L	Y
	96	32361-20100	RING-SYNCHRONIZER	1	1	2L	
	97	32362-20100	BLOCK-THRUST	1	10	2L	
	98	32363-20100	BLOCK-ANCHOR	1	10	2L	
	99	32364-20100	BAND-BRAKE, 2, 5	2	5	2L	
	100	32366-20100	CIRCLIP	1	10	2L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	101	32352-25501	WASHER-THRUST, OVER DRIVE, MAIN SHAFT	1	5	2L	
	102	32247-20100	BALL-THRUST WASHER, MAIN SHAFT	1	50	2L	
	103	32353-78001	PLATE-LOCK T 0,8 (TO C/# SEE FIG)	1	10	2L	
	104	32354-25501	NUT-HEXAGON (FROM C/# SEE FIG)	1	10	2L	N
*	105	32354-25500	NUT-HEXAGON M27X1.0	1	10	2L	
	106	32354-25501	NUT-HEXAGON M27X1.0	1	10	2L	Y
	107	32203-14360	BEARING-OVER DRIVE, MAIN SHAFT	1	1	2L	
	108	32228-20100	RING-SNAP, T 1.1	AR	10	2L	
	109	32228-20101	RING-SNAP, T 1.2	AR	10	2L	
	110	32228-20102	RING-SNAP, T 1.3	AR		2L	
*	111	32228-20103	RING-SNAP, T 1.4	AR		2L	
	112	32228-20104	RING-SNAP, T 1.4	AR	10	2L	Y
	113	32701-66005	GEAR-DRIVE, MAIN SHAFT (6T)	1	1	2L	
	114	32720-36900	BALL-STEEL 1/4	1	20	2L	
	115	32228-20101	RING-SNAP	2	10	2L	

**NOTE**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---



TRANSMISSION SHAFT & GEAR (2 L) (WARNER TYPE)

Note: Key No. 34 inc. 12, 33 & 34.

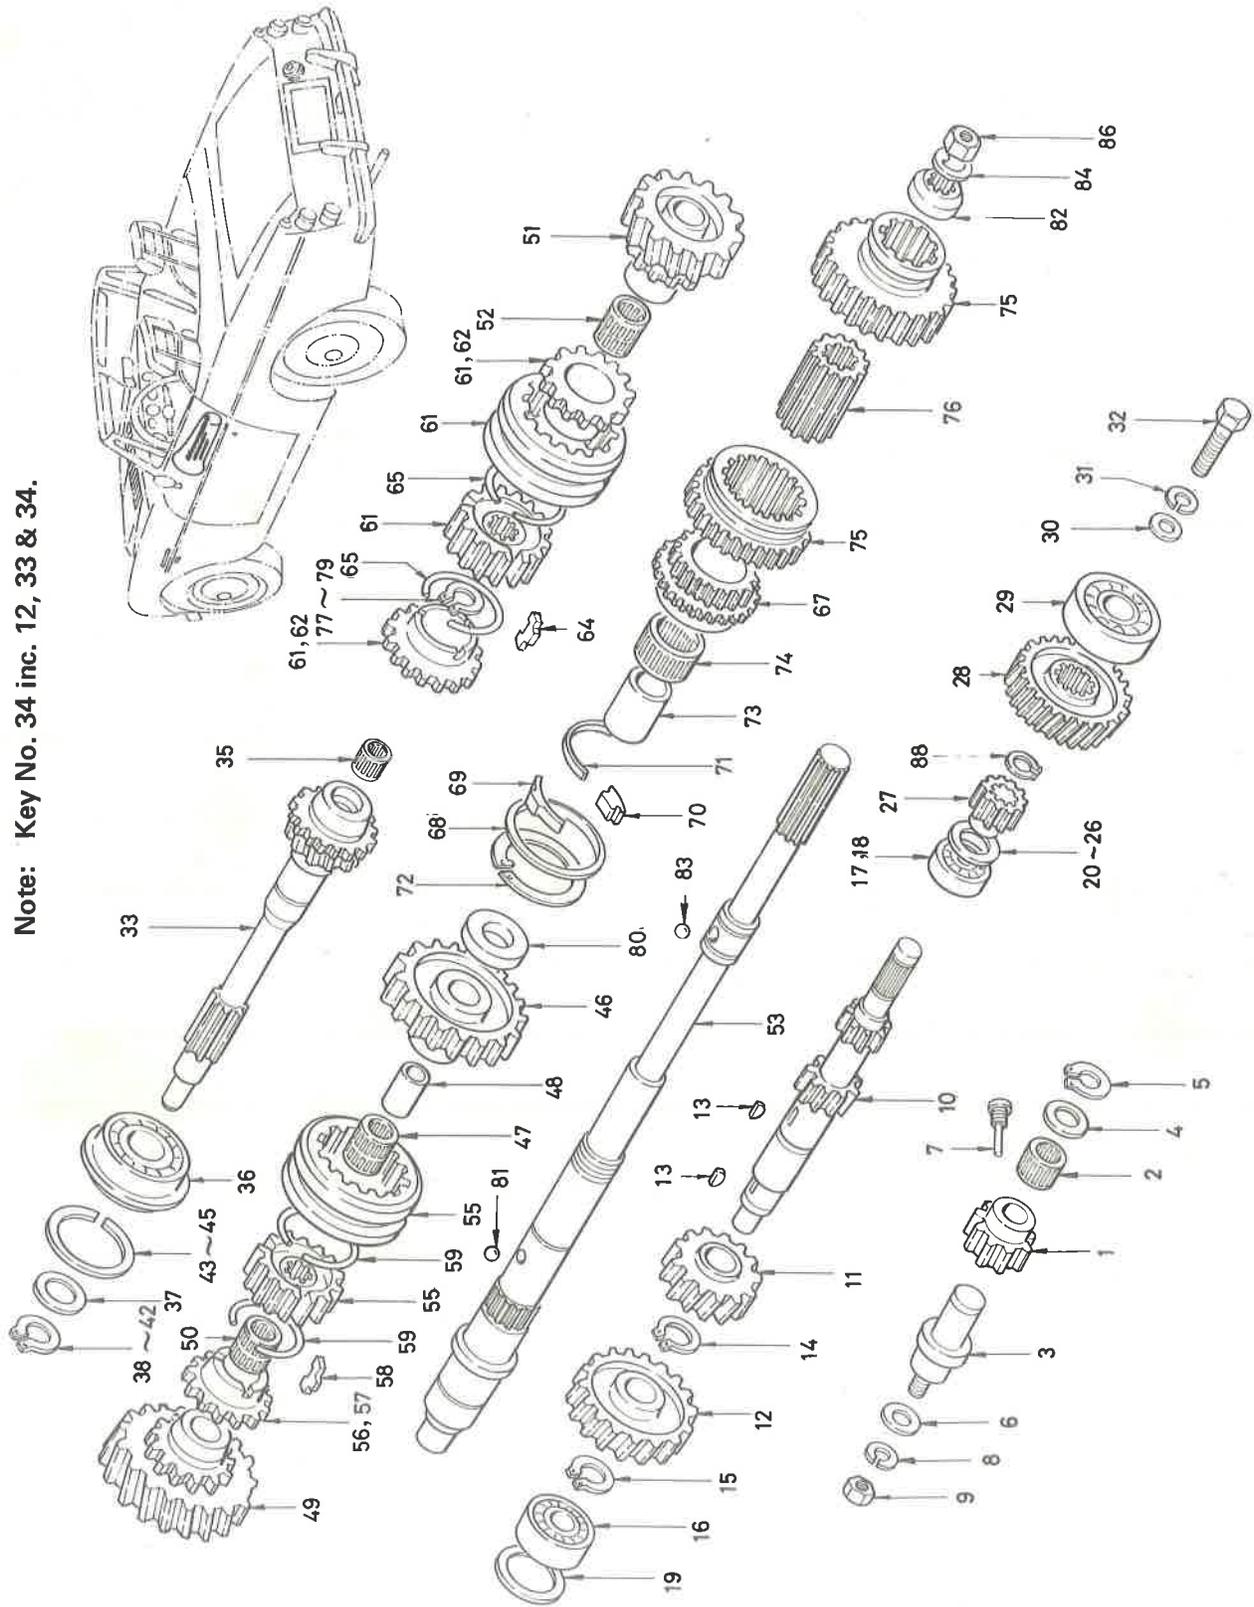

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>TRANSMISSION SHAFT &amp; GEAR (2L) (WARNER TYPE)</b>							
	1	32282-78010	GEAR-REVERSE IDLER	1	1	2L WARNER	
	2	32272-36900	BEARING-NEEDLE 20X26X20	1	1	2L WARNER	
	3	32281-78010	SHAFT-REVERSE IDLER	1	1	2L WARNER	
	4	32284-78000	WASHER-THRUST REVERSE	2	1	2L WARNER	
	5	32285-20100	RING-SNAP REVERSE IDLER	1	5	2L WARNER	
	6	32294-78010	WASHER-PLAIN	1	10	2L WARNER	
	7	32290-78000	SCREW-SET REVERSE IDLER	1	10	2L WARNER	
	8	08915-14410	WASHER-SPRING	1	50	2L WARNER	
	9	08911-34410	NUT-REVERSE IDLER SHAFT	1	50	2L WARNER	
	10	32212-25501	SHAFT-COUNTER	1	1	2L WARNER	
	11	32216-78010	GEAR-3RD SPEED COUNTER	1		2L WARNER	
	12	32217-78000	GEAR-DRIVE COUNTER SHAFT (SEE NOTE)	1	1	2L WARNER	
	13	00926-51600	KEY-WOODRUFF	4	10	2L WARNER	
	14	00922-13200	RING-SNAP	1	50	2L WARNER	
	15	00922-12800	RING-SNAP	1	50	2L WARNER	
	16	32273-14360	BEARING-COUNTER SHAFT FRONT	1	1	2L WARNER	
	17	32203-14360	BEARING-COUNTER SHAFT REAR	1	1	2L WARNER	
	18	32203-E0100	BEARING-COUNTER SHAFT FRONT	1	1	2L WARNER	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	19	32224-20100	RING-BEARING COUNTER SHAFT	1	10	2L WARNER	
	20	32218-20100	SHIM-BEARING COUNTER	1		2L WARNER	
	21	32218-20101	SHIM-BEARING COUNTER	1		2L WARNER	
	22	32218-20102	SHIM-BEARING COUNTER	1		2L WARNER	
	23	32218-20103	SHIM-BEARING COUNTER	1		2L WARNER	
	24	32218-20104	SHIM-BEARING COUNTER	1		2L WARNER	
	25	32218-20105	SHIM-BEARING COUNTER	1		2L WARNER	
	26	32218-20106	SHIM-BEARING COUNTER	1		2L WARNER	
	27	32220-25500	GEAR-REVERSE COUNTER	1	1	2L WARNER	
	28	32310-25500	GEAR-OVER DRIVE COUNTER	1	1	2L WARNER	
	29	21030-15760	BEARING-OVER DRIVE COUNTER SHAFT	1	1	2L WARNER	
	30	08915-54010	WASHER-PLAIN	1	50	2L WARNER	
	31	08915-14010	WASHER-SPRING	1	50	2L WARNER	
	32	32236-25500	BOLT-HEX, M10X1.5	1	10	2L WARNER	
	33	32200-78000	ASSY-GEAR MAIN DRIVE	1	1	2L WARNER	
	34	32200-78050	SET-GEAR DRIVE M/D	1	1	2L WARNER	Y
	35	32272-36900	BEARING-PILOT H/S	1	1	2L WARNER	
	36	32273-04100	BEARING-MAIN DRIVE	1	1	2L WARNER	
	37	32205-78000	SPACER-BEARING MAIN DRIVE	1	10	2L WARNER	
	38	32204-78000	RING-SNAP MAIN DRIVE GEAR	1	5	2L WARNER	
	39	32204-78001	RING-SNAP MAIN DRIVE GEAR	1	5	2L WARNER	
	40	32204-78002	RING-SNAP MAIN DRIVE GEAR	1	5	2L WARNER	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	41	32204-78003	RING-SNAP MAIN DRIVE G EAR	1	5	2L WARNER	
	42	32204-78004	RING-SNAP MAIN DRIVE G EAR	1	5	2L WARNER	
	43	32207-20100	RING-BEARING MAIN DRIV E	1	10	2L WARNER	
	44	32207-20101	RING-BEARING MAIN DRIV E	1	10	2L WARNER	
	45	32207-20102	RING-BEARING MAIN DRIV E	1	10	2L WARNER	
	46	32242-A3300	ASSY-GEAR 1ST SPEED M/S	1	1	2L WARNER	
	47	32264-14600	BEARING-NEEDLE 1ST	1	2	2L WARNER	
	48	32253-14600	BUSH-1ST GEAR M/S	1	2	2L WARNER	
	49	32250-A3300	ASSY-GEAR 2ND SPEED M/S	1	1	2L WARNER	
	50	32264-14600	BEARING-NEEDLE 2ND	1	2	2L WARNER	
	51	32260-78010	ASSY-GEAR 3RD SPEED M/S	1		2L WARNER	
	52	32264-14600	BEARING-NEEDLE 3RD	1	2	2L WARNER	
	53	32241-25500	SHAFT-MAIN	1	1	2L WARNER	
	54	32601-73200	HUB-SYNCHRO 1ST & 2ND	1	1	2L WARNER	
	55	32606-73200	SLEEVE-COUPLING	1	1	2L WARNER	
	56	32604-14810	RING-BAULK	2	1	2L WARNER	
	57	32604-A4610	RING-BAULK	2		2L	Y
	58	32609-73200	INSERT-SHIFTING	3	10	2L WARNER	
	59	32603-73200	SPRING-SPREAD	2	10	2L WARNER	
	60	32605-78001	HUB-SYNCHRO 3RD & 4TH	1	1	2L WARNER	
	61	32606-73200	SLEEVE-COUPLING	1	1	2L WARNER	
	62	32604-14810	RING-BAULK	2	1	2L WARNER	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	63	32604-A4610	RING-BAULK	2		2L WARNER	Y
	64	32609-73200	INSERT-SHIFTING	3	10	2L WARNER	
	65	32603-73200	SPRING-SPREAD	2	10	2L WARNER	
*	66	32340-25500	ASSY-GEAR OVER DRIVE M/S	1	1	2L WARNER	
	67	32340-25501	ASSY-GEAR OVER DRIVE M/S	1		2L WARNER	Y
	68	32361-20100	RING-SYNCHRO	1	1	2L WARNER	
	69	32362-20100	BLOCK-THRUST	1	10	2L WARNER	
	70	32363-20100	BLOCK-ANCHOR	1	10	2L WARNER	
	71	32364-20100	BAND-BRAKE	1	5	2L WARNER	
	72	32366-20100	CIRCLIP	1	10	2L WARNER	
	73	32349-25500	BUSH-OVER DRIVE MAIN S HAFT	1	2	2L WARNER	
	74	32350-25500	BEARING-NEEDLE OVER DRIVE	1	1	2L WARNER	
	75	32245-25500	GEAR-REVERSE MAIN SHAFT	1	1	2L WARNER	
	76	32258-25500	HUB-SYNCHRO REVERSE & OVER DRIVE	1	1	2L WARNER	
	77	32263-14601	RING-SNAP SYNCHRO HUB	1	5	2L WARNER	
	78	32263-14602	RING-SNAP SYNCHRO HUB	1	10	2L WARNER	
	79	32263-14603	RING-SNAP SYNCHRO HUB	1	10	2L WARNER	
	80	32246-78000	WASHER-THRUST M/S	1	5	2L WARNER	
	81	32247-20100	BALL-THRUST WASHER M/S	1	50	2L WARNER	
	82	32352-25501	WASHER-THRUST OVER DRIVE M/S	1	5	2L WARNER	
	83	32247-20100	BALL-THRUST WASHER M/S	1	50	2L WARNER	
	84	32353-78001	PLATE-LOCK	1	10	2L WARNER	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	85	32354-25500	NUT-HEX, M27X1,0	1	10	2L WARNER	
	86	32354-25501	NUT-HEX, M27X1,0	1	10	2L WARNER	
	87	32203-14360	BEARING-OVER DRIVE MAIN SHAFT	1	1	2L WARNER	
	88	32228-20100	RING-SNAP OVER DRIVE BEARING	1	10	2L WARNER	




*Next to new cars*

*Genuine Datsun Spare Parts are most profitable.*




TRANSMISSION CONTROL (4-SPEED)

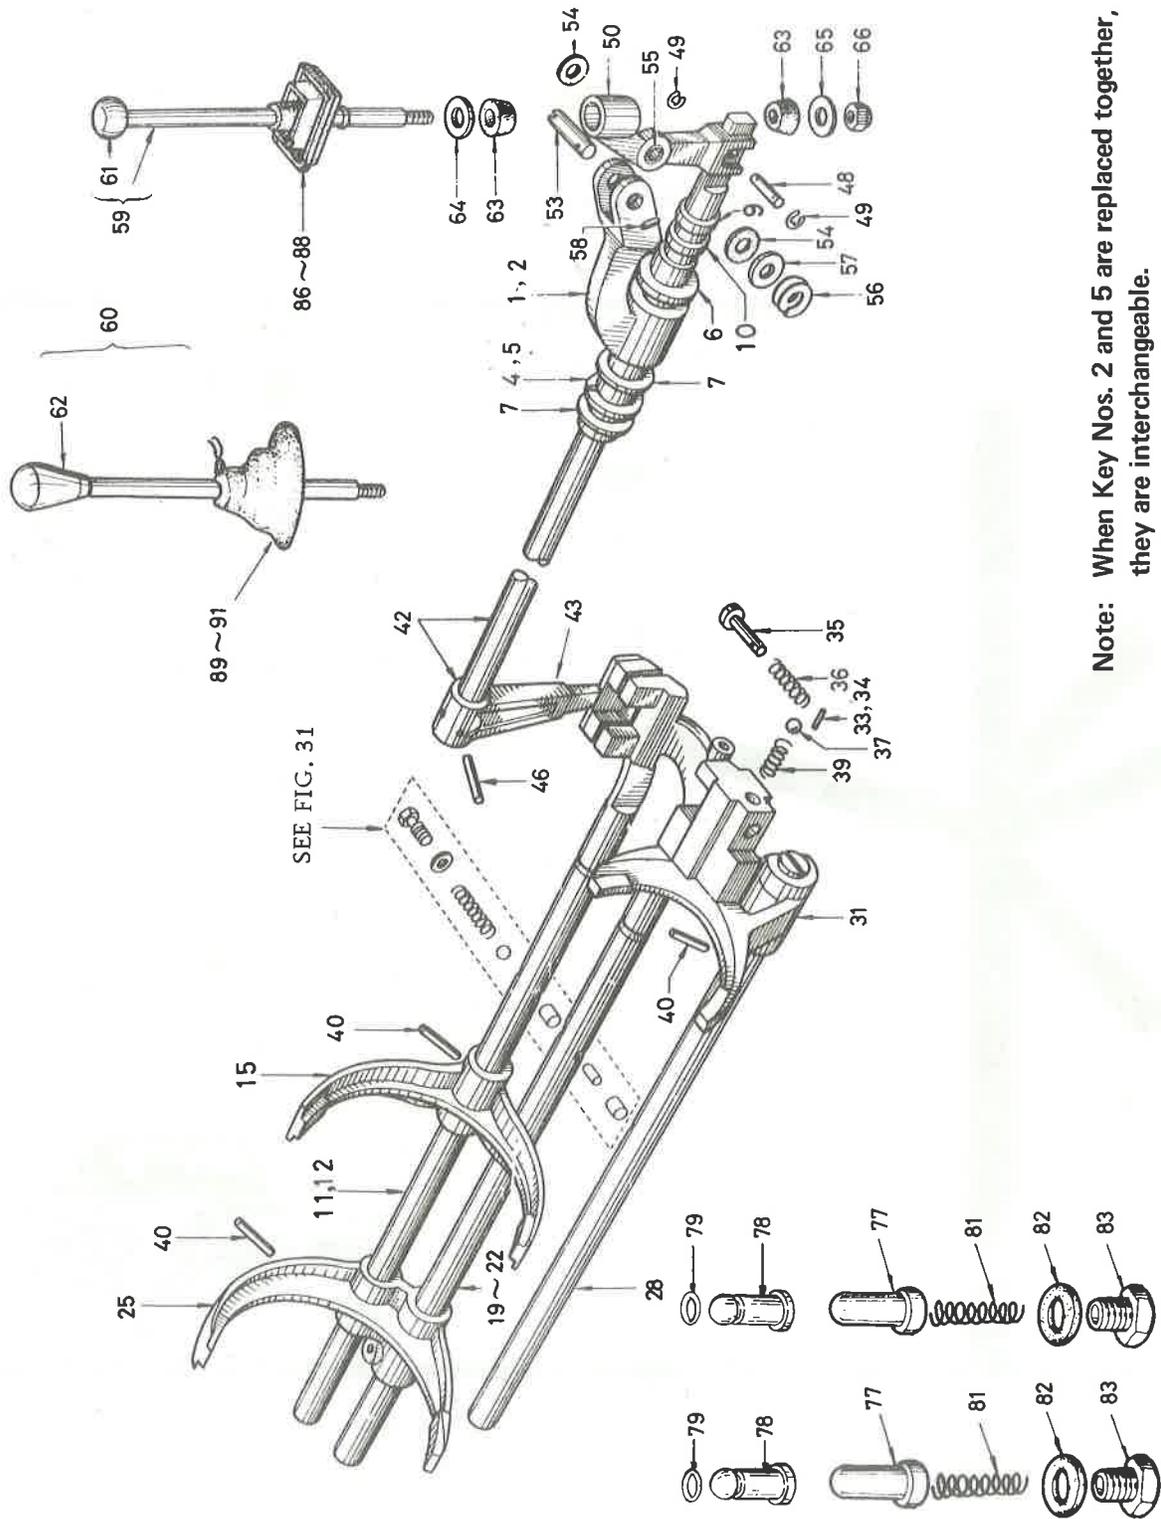

Note: When Key Nos. 2 and 5 are replaced together, they are interchangeable.

TRANSMISSION CONTROL (5-SPEED)

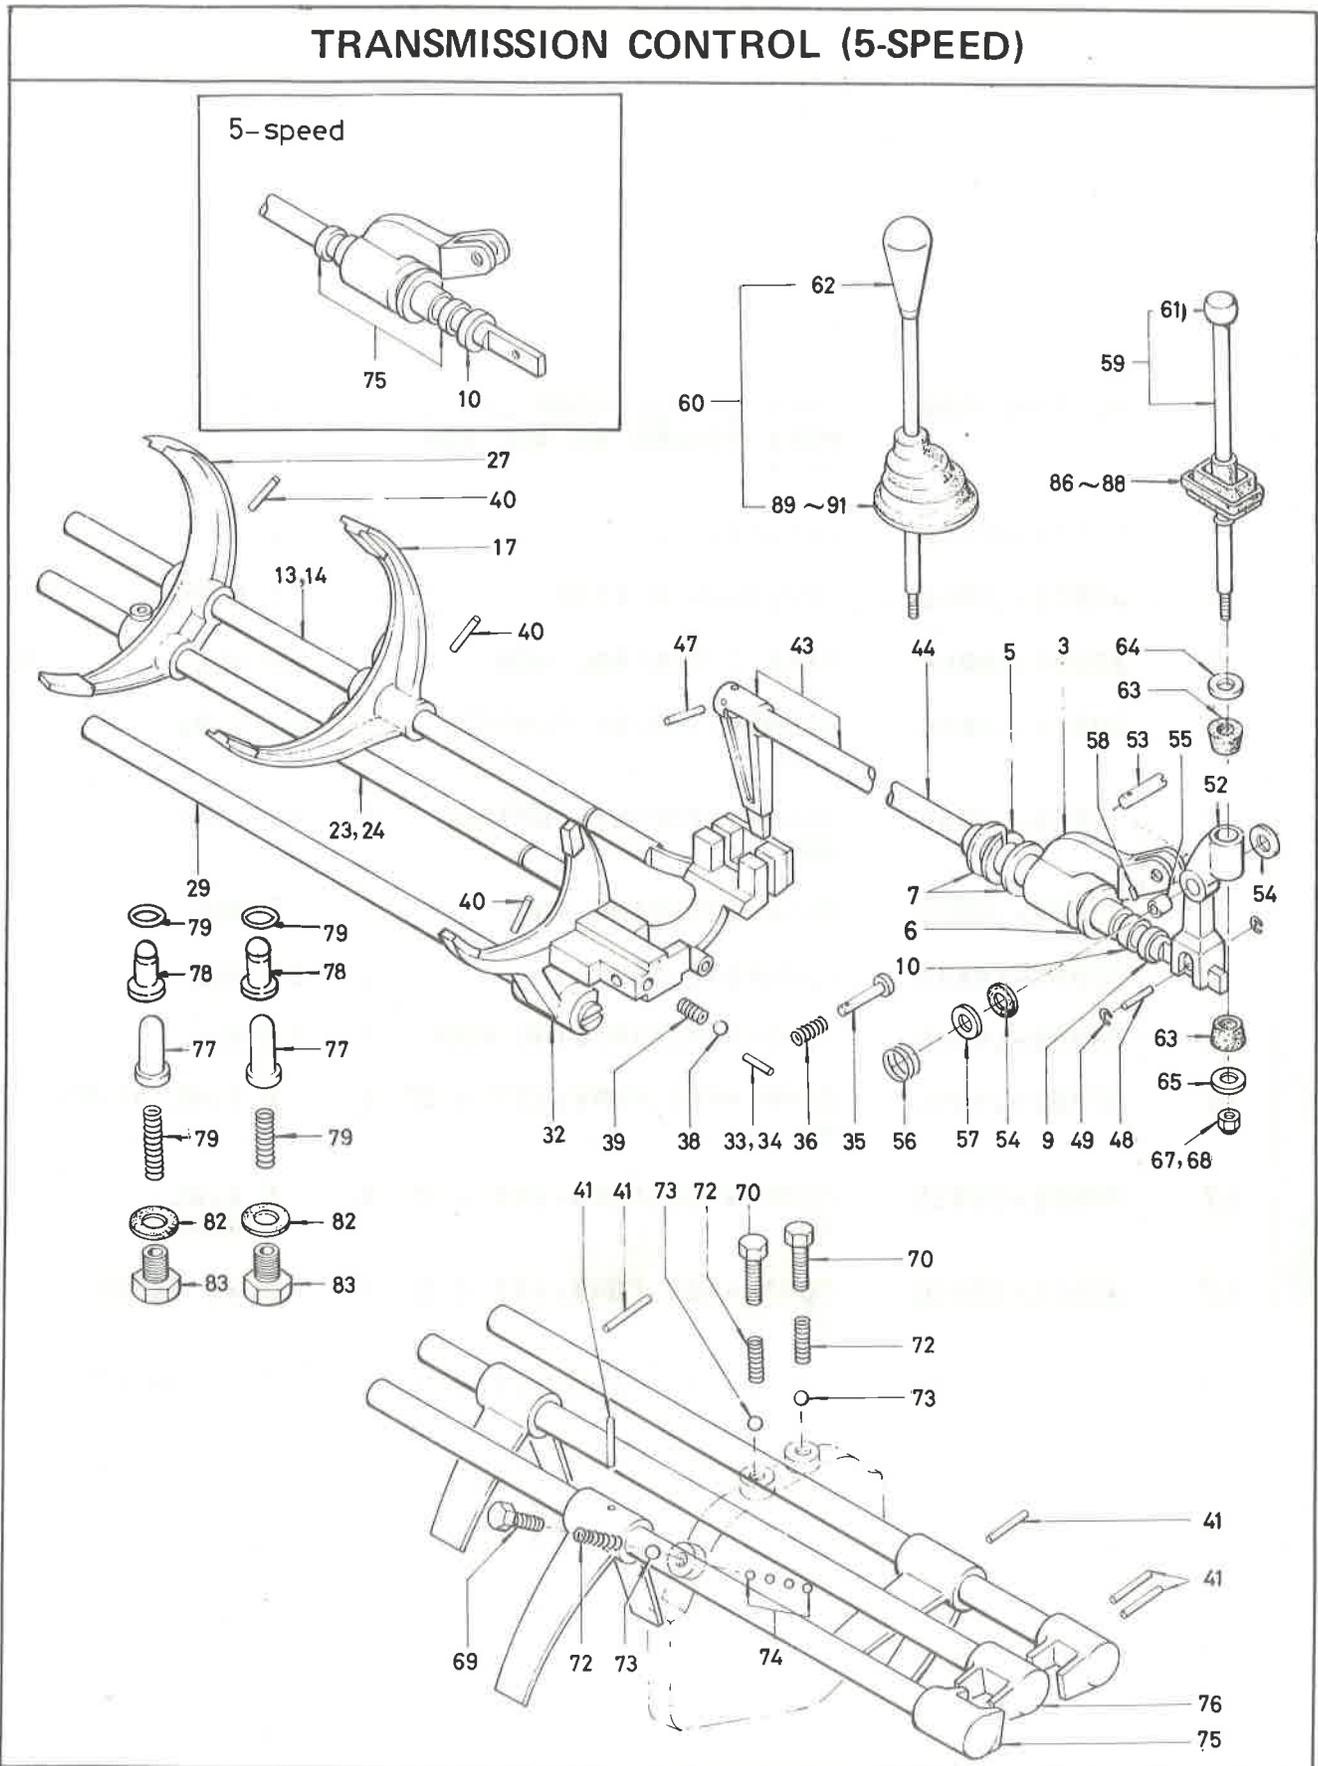

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>TRANSMISSION CONTROL</b>							
<i>EMISSION CONTROL signifies USA &amp; ONTARIO in CANADA.</i>							
*	1	32844-14600	ARM-CONTROL	1		1,6L	
	2	32844-18800	ARM-CONTROL (FROM C/# S P311 001188 SPL311 009 431)	1	1	1,6L	C
	3	32844-25500	ARM-CONTROL	1	1	2L	
	4	32852-14600	SPRING-STRIKING	1	10	1,6L	
	5	32845-18800	RING O CONTROL ARM	1	10	ALL	N
	6	32875-14600	WASHER-THRUST, CONTROL ARM	1	10	1,6L	
	7	32876-14600	WASHER-THRUST, CONTROL ARM	2	10	1,6L	
	8	32887-18800	BUSH STRIKING ROD	1	2	ALL	
	9	32857-14600	CAP-RING, "OM"	1	10	ALL	
	10	32858-14600	RING-"OM", STRIKING ROD	1	10	ALL	
	11	32801-14600	COMP, -ROD, FORK, 1ST & 2 ND	1	1	1,6L SERVO	
	12	32801-16511	COMP, -ROD, FORK, 1ST & 2 ND	1	1	1,6L WARNER	
	13	32801-25500	COMP, -ROD, FORK, 1ST & 2 ND	1	1	2L SERVO	
	14	32801-A0100	COMP, -ROD, FORK, 1ST & 2 ND	1	1	2L WARNER	
	15	32805-14600	FORK-SHIFT, 1ST & 2ND	1	1	1,6L	
*	16	32811-20101	FORK-SHIFT, 1ST & 2ND	1	1	2L	
	17	32811-78000	FORK-SHIFT, 1ST & 2ND	1	1	2L	Y
*	18	32809-14600	ROD-FORK, 3RD & 4TH	1	10	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	19	32809-22000	ROD-FORK,3RD & 4TH	1	1	1,6L SERVO EXC EMISSION CONTROL	Y
	20	32809-21100	ROD-FORK,3RD & 4TH	1	1	1,6L WARNER EXC EMISSION CONTROL	
	21	32809-A7702	FORK ROD 3RD & 4TH	1	1	1,6L SERVO EMISSION CONTROL	
	22	32809-A7700	FORK ROD 3RD & 4TH	1	1	1,6L WARNER EMISSION CONTROL	
	23	32809-25500	ROD-FORK,3RD & 4TH	1	1	2L SERVO	
	24	32809-A0100	ROD-FORK,3RD & 4TH	1	1	2L WARNER	
	25	32811-14600	FORK-SHIFT,3RD & 4TH	1	1	1,6L	
	26	32811-20101	FORK-SHIFT,3RD & 4TH	1	1	2L	
	27	32811-78000	FORK-SHIFT,3RD & 4TH	1	1	2L	Y
	28	32816-14600	ROD-FORK,REVERSE	1	2	1,6L	
	29	32816-25500	ROD-FORK,REVERSE & OVER DRIVE	1	1	2L	
	30	32819-14600	FORK-SHIFT,REVERSE	1	1	1,6L	
	31	32819-14650	FORK-SHIFT,REVERSE	1	1	1,6L	Y
	32	32819-20100	FORK-SHIFT,REVERSE & OVER DRIVE	1	1	2L	
	33	32712-61000	PIN-ROLLER,RETAINING SPEEDOMETER SLEEVE	1	10	ALL	
	34	32873-14600	PIN-ROLLER,RETAINING SPEEDOMETER SLEEVE	1		ALL	Y
	35	32823-14600	PIN-REVERSE FORK	1	10	ALL	
	36	32824-09600	SPRING-RETURN,REVERSE PIN	1	10	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	37	32827-26760	BALL-CHECK, REVERSE FOR K	1	50	1,6L	
	38	32829-26760	BALL-CHECK, REVERSE FOR K	1	50	2L	
	39	32825-14600	SPRING-CHECK, REVERSE FORK	1	10	ALL	
	40	32292-14600	PIN-RETAINING	3	10	1,6L	
	41	32292-36900	PIN-RETAINING	5	10	2L	
	42	32890-14600	ASSY-ROD, STRIKING	1	1	1,6L	
	43	32890-25500	ASSY-ROD STRIKING W/LEVER	1	1	2L	Y
	44	32892-25500	ROD-STRIKING	1	1	2L	
*	45	32896-25500	LEVER, STRIKING ROD	1	5	2L	
	46	32292-14600	PIN-RETAINING	1	10	1,6L	
	47	32292-36900	PIN-RETAINING	1	10	2L	
	48	32877-14600	PIN-STRIKING ROD	1	10	ALL	
	49	32878-14600	RING-CM-STRIKING PIN	2	10	ALL	
	50	32843-14650	BRACKET-LEVER, CONTROL	1	1	1,6L	
*	51	32843-15800	BRACKET-LEVER, CONTROL	1		2L	
	52	32843-15850	BRACKET-LEVER, CONTROL	1	1	2L	Y
	53	32849-14600	PIN-CONTROL ARM	1	5	ALL	
	54	32888-14600	WASHER-CONTROL PIN	2	10	ALL	
	55	32889-14600	BUSH-CONTROL PIN	1	10	ALL	
	56	32851-14600	SPRING-CONTROL	1	10	ALL	
	57	32879-14600	WASHER-THRUST, CONTROL PIN	1	10	ALL	
	58	32873-14600	PIN-RETAINING	1	10	ALL	
	59	32841-14652	ASSY-LEVER, CONTROL (TO E/# R-40000)	1	1	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	60	32841-25500	ASSY-LEVER, CONTROL (FROM E/# R-40001)	1	1	ALL	
	61	32865-14600	KNOB-CONTROL LEVER (TO E/# R-40000)	1	2	1,6L	
	62	32865-25500	KNOB-CONTROL LEVER (FROM E/# R-40001)	1	1	ALL	Y
	63	32853-14600	RUBBER-CONTROL LEVER	2	10	ALL	
	64	32885-14600	WASHER-CONTROL LEVER, UPPER	1	10	ALL	
	65	32886-14600	WASHER-CONTROL LEVER, LOWER	1	10	ALL	
	66	00912-54600	NUT-SELF LOCKING	1	50	1,6L	
	67	08915-54000	NUT-SELF LOCKING	1	25	2L	
	68	08915-54010	NUT SELF LOCKING	1	50	2L	Y
	69	32835-78000	PLUG-CHECK BALL 11M/M	1	10	2L	
	70	32834-78000	PLUG-CHECK BALL 17,5M/M	2	10	2L	
	71	32803-78001	RING-SNAP E TYPE	2	50	2L	
	72	32830-20100	SPRING-CHECK BALL	3	10	2L	
	73	32829-26760	BALL-CHECK	3	50	2L	
	74	32720-36900	BALL-INTER LOCK	4	20	2L	
	75	32382-20100	BRACKET-REVERSE & OVER DRIVE ROD	1	1	2L	
	76	32813-20100	BRACKET-3RD & 4TH ROD	1	1	2L	
	77	32861-20100	PIN-SELECT	2	5	2L	
	78	32861-A0100	PIN-SELECT	2	1	2L	C
	79	32864-A0100	O-RING, SELECT PIN	2	20	2L	C
*	80	32845-25500	SPRING-SELECT, 1ST & 2ND	1	5	2L	


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	81	32845-A0100	SPRING-SELECT, 1ST & 2ND	1	10	2L	Y
	82	32863-20100	GASKET-SELECT SPRING PLUG	2	10	2L	
	83	32862-25500	PLUG-SELECT SPRING	2	10	2L	
*	84	32846-25500	SPRING-SELECT, OVER DRIVE & REVERSE	1	10	2L	
	85	32846-A0100	SPRING-SELECT, OVER DRIVE & REVERSE	1	10	2L	Y
	86	32869-14602	SHIELD-DUST, CHANGE LEVER	1	1	1.6L	
	87	32869-25500	SHIELD-DUST CHANGE LEVER (FROM E/# R-40001 TO SEP-67)	1	5	ALL	Y
	88	32869-25902	SHIELD-DUST CHANGE LEVER (FROM OCT-67)	1	5	ALL	N
	89	75150-25500	BOOT-RUBBER (FROM C/#S PL311-12747, SRL311-34 TO SEP-67)	1	1	ALL	N
	90	75151-25900	BOOT-RUBBER (FROM OCT-67)	1	1	1.6L	N
	91	75151-25901	BOOT-RUBBER (FROM OCT-67)	1	1	2L	N
	92	68645-25900	RETAINER-BOOT (FROM OCT-67)	1	5	1.6L	
	93	68645-25901	RETAINER-BOOT (FROM OCT-67)	1	5	2L	

**NOTE**



A series of horizontal lines for writing, starting from the top line below the 'NOTE' header and extending to the bottom of the page. The lines are evenly spaced and cover most of the page's width.

HAND BRAKE CONTROL

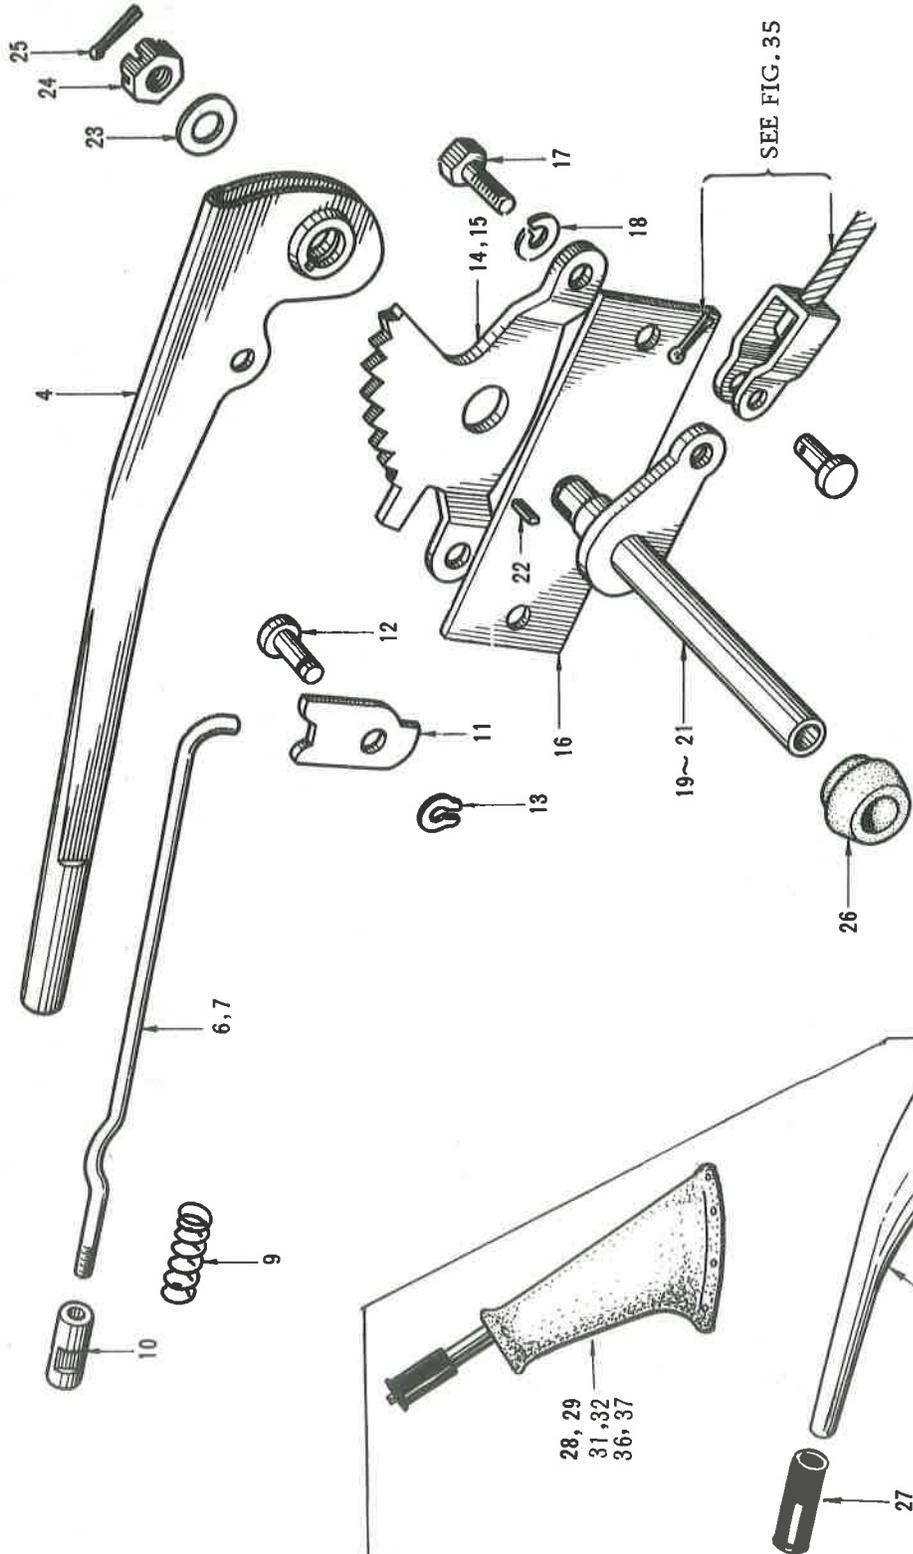

from E/# R-40001

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>HAND BRAKE CONTROL</b>							
	1	36010-10401	ASSY-CONTROL, HAND BRAKE	1	1	1.6L	
	2	36010-25500	ASSY-CONTROL, H/B (FROM E/# R-40001 TO SEP-67)	1	1	ALL	N
	3	36010-25900	ASSY-CONTROL H/B (FROM OCT-67)	1	1	ALL	N
	4	36310-10401	ASSY-LEVER, HAND BRAKE	1		1.6L	
	5	36310-25500	ASSY-LEVER, HAND BRAKE (FROM E/# R-40001)	1	1	ALL	N
	6	36327-04101	ROD-RELEASE, HAND BRAKE	1		1.6L	
	7	36327-25500	ROD-RELEASE, HAND BRAKE (FROM E/# R-40001)	1	10	ALL	N
	8	36330-04100	SPRING-RELEASE ROD	1	10	ALL	
	9	36330-25500	SPRING-RELEASE ROD	1	10	ALL	Y
	10	36329-04100	BUTTON-RELEASE, HAND BRAKE	1		ALL	
	11	36332-04100	PAWL-RATCHET	1	5	ALL	
	12	36339-04100	PIN-PAWL	1	10	ALL	
	13	41058-10360	WASHER-"C" TYPE	1	50	ALL	
	14	36320-10401	PLATE-RATCHET	1	1	1.6L	
	15	36320-25500	PLATE-RATCHET (FROM E/# R-40001)	1	10	ALL	N
	16	36343-10400	PLATE-SEAL, LEVER SHAFT	1	10	ALL	
	17	00114-51610	BOLT TO FIX HAND LEVER	2		ALL	
	18	00915-11510	WASHER-LOCK TO FIX HAND LEVER	2		ALL	


FIG. 34

NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	19	36433-10400	ASSY-SHAFT,HAND BRAKE LEVER	1	1	1.6L	
	20	36433-25500	SHAFT-H/B LEVER (FROM E/# R-40001 TO SEP-67)	1	1	ALL	N
	21	36433-25900	SHAFT-H/B LEVER (FROM OCT-67)	1	10	ALL	N
	22	00928-31600	KEY-FEATHER	1		ALL	
	23	00915-41610	WASHER-PLAIN	1		ALL	
	24	00911-94610	NUT	1	50	ALL	
	25	00921-22210	PIN-COTTER	1		ALL	
	26	36463-10400	COVER-DUST,LEVER SHAFT	1	10	ALL	
	27	36315-25500	GRIP-HAND BRAKE LEVER (FROM E/# R-40001)	1		ALL	
	28	74980-12900	ASSY-COVER,HAND BRAKE LEVER(RED)	1		1.6L	
	29	74980-25500	ASSY-COVER,HAND BRAKE LEVER(RED)(FROM E/# R-40001)	1	1	ALL	N
	30	74980-25900	COVER-H/B LEVER(RED) (FROM OCT-67)	1	1	ALL	
	31	74980-12901	ASSY-COVER,HAND BRAK LEVER(BLACK)	1	1	1.6L	
	32	74980-25501	ASSY-COVER,HAND BRAKE LEVER(BLACK)(FROM E/# R-40001)	1		ALL	N
	33	74980-25901	COVER-H/B LEVER(BLACK) (FROM OCT-67)	1		ALL	
	34	61224-35210	FASENER-MALE	4	1	ALL	
	35	00530-61310	SCREW	4	50	ALL	
	36	74980-25900	COVER-H/B LEVER (RED) (FROM OCT-67)	1	1	ALL	
	37	74980-25901	COVER-H/B LEVER (BLACK) (FROM OCT-67)	1		ALL	



# HAND BRAKE LINKAGE

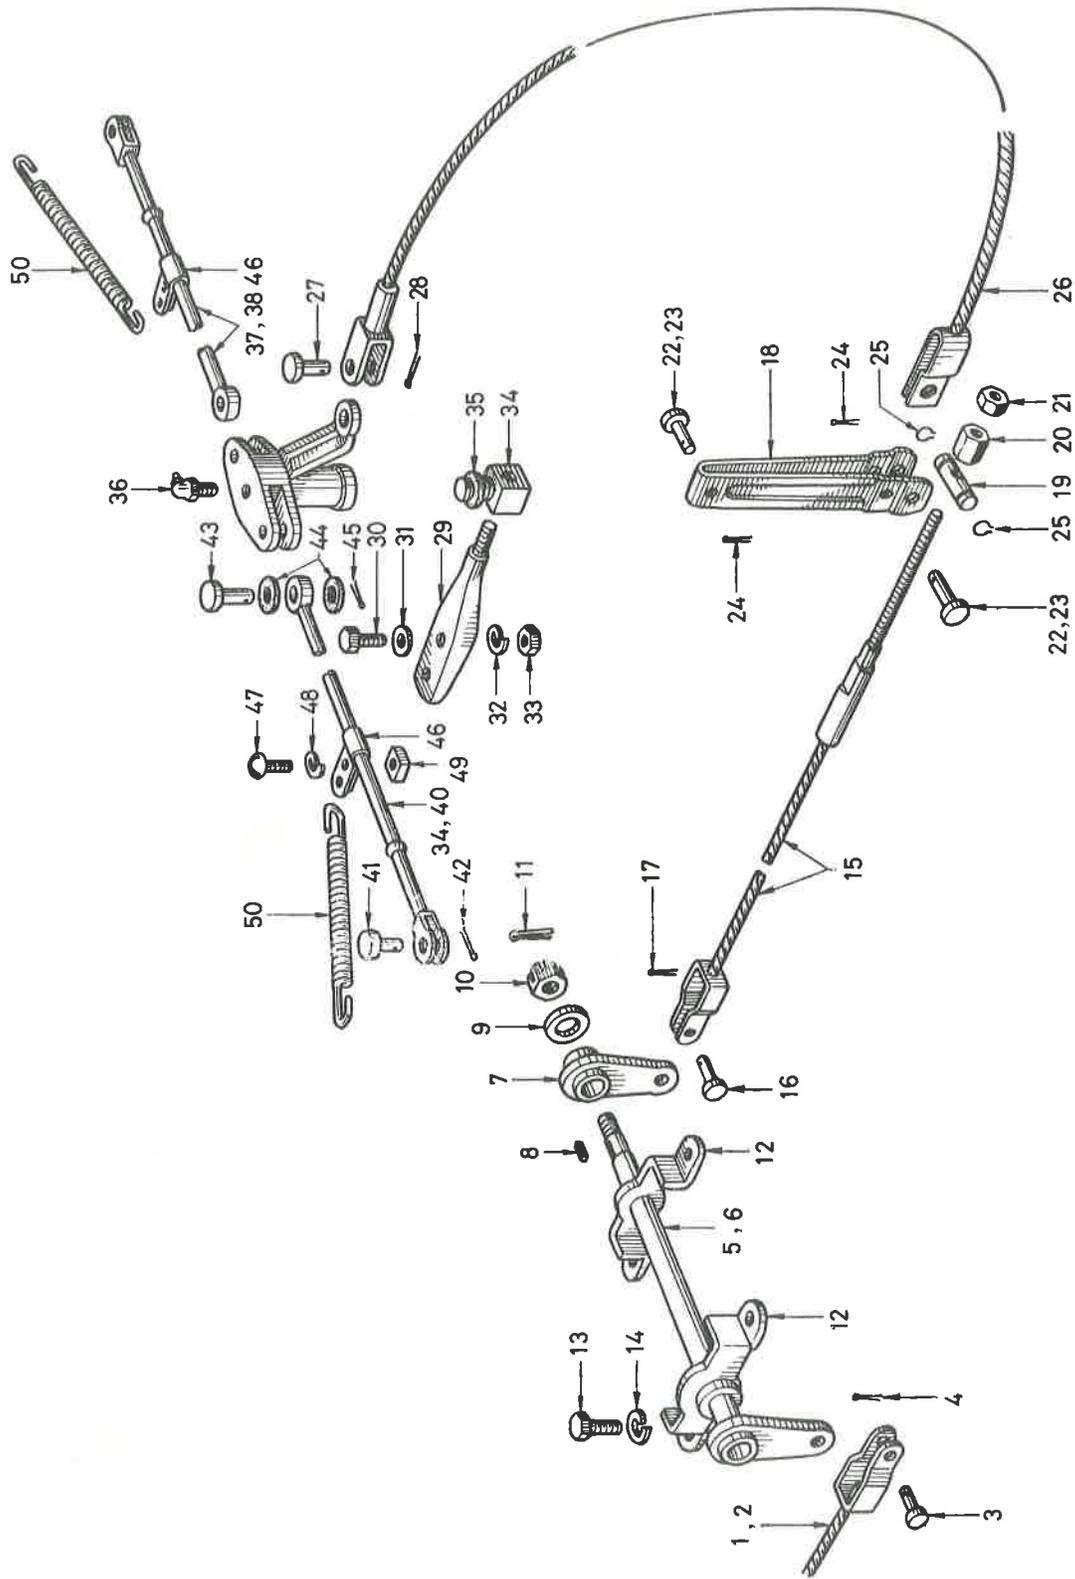

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>HAND BRAKE LINKAGE</b>							
	1	36402-10400	ASSY-CABLE, HAND BRAKE, FRONT	1	5	1,6L	
	2	36402-25500	ASSY-CABLE, HAND BRAKE, FRONT (FROM E/# R-40001)	1		ALL	N
	3	36428-04100	PIN-CLEVIS	2	10	ALL	
	4	00921-11810	PIN-COTTER	2	50	ALL	
	5	36550-10401	ASSY-SHAFT, IDLER, HAND BRAKE	1	1	1,6L	
	6	36550-25500	ASSY-SHAFT, IDLER, HAND BRAKE (FROM E/# R-40001)	1		ALL	N
	7	36555-10400	ASSY-BOSS, IDLER, HAND BRAKE	1	10	ALL	
	8	00928-31600	KEY	1	50	ALL	
	9	00915-41610	WASHER-PLAIN	1	50	ALL	
	10	00911-74610	NUT	1	100	ALL	
*	11	00921-22200	PIN-COTTER	1	100	ALL	
	12	36385-10400	BRACKET-IDLER SHAFT, HAND BRAKE	2	1	ALL	
	13	00124-51810	BOLT	4	25	ALL	
*	14	00915-11500	WASHER-LOCK	4	50	ALL	
	15	36450-12900	ASSY-CABLE, HAND BRAKE MIDDLE	1		ALL	
	16	36428-04100	PIN-CLEVIS	1	10	ALL	
	17	00921-11810	PIN-COTTER	1	50	ALL	
	18	36510-04100	ASSY-ARM, SWING, HAND BRAKE	1	1	ALL	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	19	36425-04100	PIN-SWING ARM	1	10	ALL	
	20	36437-04100	NUT-CABLE, HAND BRAKE	1	50	ALL	
	21	00911-34410	NUT-LOCK	1	50	ALL	
*	22	36541-30000	PIN-CLEVIS	2	50	ALL	
	23	36541-24000	PIN-CLEVIS	2		ALL	Y
	24	00921-01810	PIN-COTTER	2	50	ALL	
	25	36471-04100	RING-SNAP, HAND BRAKE	2	50	ALL	
	26	36451-14600	ASSY-CABLE, HAND BRAKE, REAR	1	10	ALL	
*	27	36541-30000	PIN-CLEVIS	1	50	ALL	
	28	00921-01810	PIN-COTTER	1	50	ALL	
	29	36511-15800	ASSY-SUPPORT, BRAKE BALANCE LEVER	1	1	ALL	
	30	00124-52010	BOLT	2	50	ALL	
	31	00915-41510	WASHER-PLAIN	2	50	ALL	
*	32	00915-21500	WASHER-LOCK	2	50	ALL	
	33	00911-14510	NUT	2	100		
	34	36514-14600	CARRIER-BALANCE LEVER	1	5	ALL	
	35	36523-30000	RING-FELT, BALANCE LEVER	1	10	ALL	
	36	00932-30200	NIPPLE-GREASE	1	100	ALL	
	37	36530-14600	ROD-CROSS, HAND BRAKE, SHORT	1	1	1,6L	
	38	36530-14601	ROD-CROSS, HAND BRAKE, SHORT (FROM E/# R-40001)	1	1	ALL	N
	39	36531-14600	ROD-CROSS, HAND BRAKE, LONG	1	1	1,6L	
	40	36531-14601	ROD-CROSS, HAND BRAKE, LONG (FROM E/# R-40001)	1	1	ALL	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	41	36541-30000	PIN-CLEVIS	2	50	ALL	
	42	00921-01810	PIN-COTTER	2	50	ALL	
	43	36538-30000	PIN-CLEVIS	2	60	ALL	
	44	36543-30000	RING-FELT	4	50	ALL	
	45	00921-01810	PIN-COTTER	2	50	ALL	
	46	36544-30000	BRACKET-HANGER, CROSS R OD PULL OFF SPRING	1	10	ALL	
	47	00314-01010	SCREW	2	50	ALL	
*	48	00915-11000	WASHER-LOCK	2	50	ALL	
	49	00913-14010	NUT-SQUARE	2	50	ALL	
	50	36545-30000	SPRING-PULL OFF, CROSS ROD	2	10	ALL	

**NOTE**



PROPELLER SHAFT

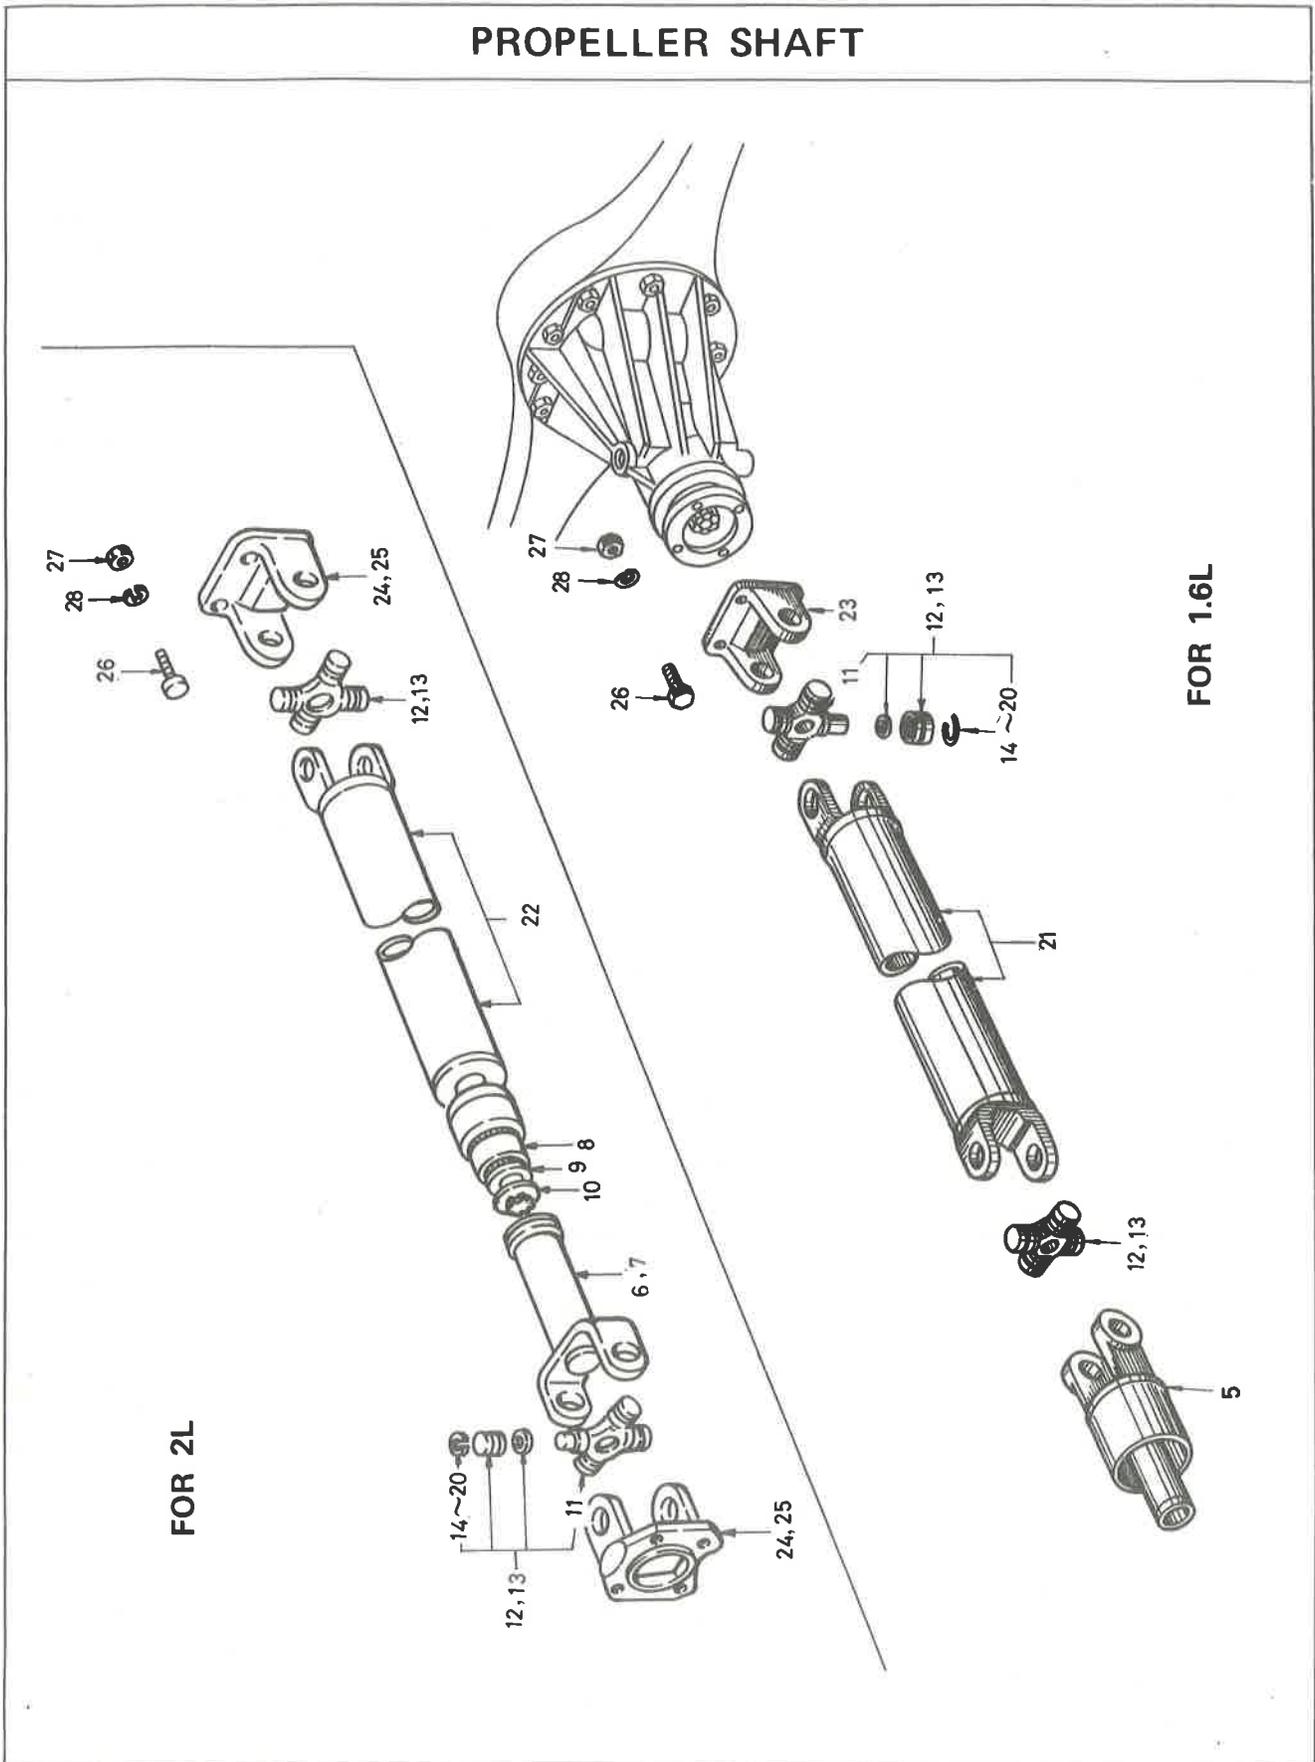

FOR 2L

FOR 1.6L


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>PROPELLER SHAFT</b>							
	1	37000-14600	ASSY-SHAFT, PROPELLER, WITH JOINT	1	1	1.6L EXC USA	
	2	37000-14601	ASSY-SHAFT, PROPELLER, WITH JOINT	1	1	1.6L USA	
	3	37000-20100	ASSY-SHAFT, PROPELLER, WITH JOINT	1	1	2L EXC USA	
	4	37000-20101	ASSY-SHAFT, PROPELLER, WITH JOINT	1	1	2L USA	
	5	37111-14600	ASSY-YOKE, SLEEVE	1	1	1.6L	
	6	37111-20100	ASSY-YOKE, SLEEVE	1		2L	
	7	37111-20101	ASSY-YOKE, SLEEVE	1	1	2L	Y
	8	37223-20100	RETAINER OIL SEAL	1		2L	
	9	37220-20100	OIL SEAL STUB SHAFT	1		2L	
	10	37224-20100	WASHER; RETAINER OIL SEAL	1		2L	
	11	37125-14600	JOURNAL	2	1	ALL	
	12	37125-14625	KIT-JOURNAL	2	10	ALL	Y
	13	37125-14627	KIT-JOURNAL	2		ALL	Y
	14	37146-14600	RING-SNAP, ADJUSTING (2.00T) (WHITE)	8	50	ALL	
	15	37147-14600	RING-SNAP, ADJUSTING (2.00T) (YELLOW)	8	50	ALL	
	16	37148-14600	RING-SNAP, ADJUSTING (2.04T) (RED)	8	50	ALL	
	17	37149-14600	RING-SNAP, ADJUSTING (2.06T) (GREEN)	8	50	ALL	
	18	37150-14600	RING-SNAP, ADJUSTING (2.08T) (BLUE)	8	10	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	19	37151-14600	RING-SNAP, ADJUSTING (2,10T) (BROWN)	8	10	ALL	
	20	37152-14600	RING-SNAP, ADJUSTING (2,12T) (NO MARK)	8	10	ALL	
	21	37210-14600	ASSY-SHAFT, PROPELLER	1	1	1,6L	
	22	37210-20100	ASSY-SHAFT, PROPELLER	1	1	2L	
*	23	37117-14600	YOKE-FLANGE	1	1	1,6L	
	24	37117-14601	YOKE-FLANGE	2	1	2L	
	25	37226-20400	COVER DUST	1		2L	
	26	00124-52510	BOLT TO FIX PROPELLER SHAFT TO COMPANION FLANGE	4	50	ALL	
	27	00911-24510	NUT TO FIX PROPELLER SHAFT TO COMPANION FLANGE	4	50	ALL	
	28	00911-21510	WASHER-LOCK TO FIX PROPELLER SHAFT TO COMPANION FLANGE	4	50	ALL	

**NOTE**



FRONT SUSPENSION (2)

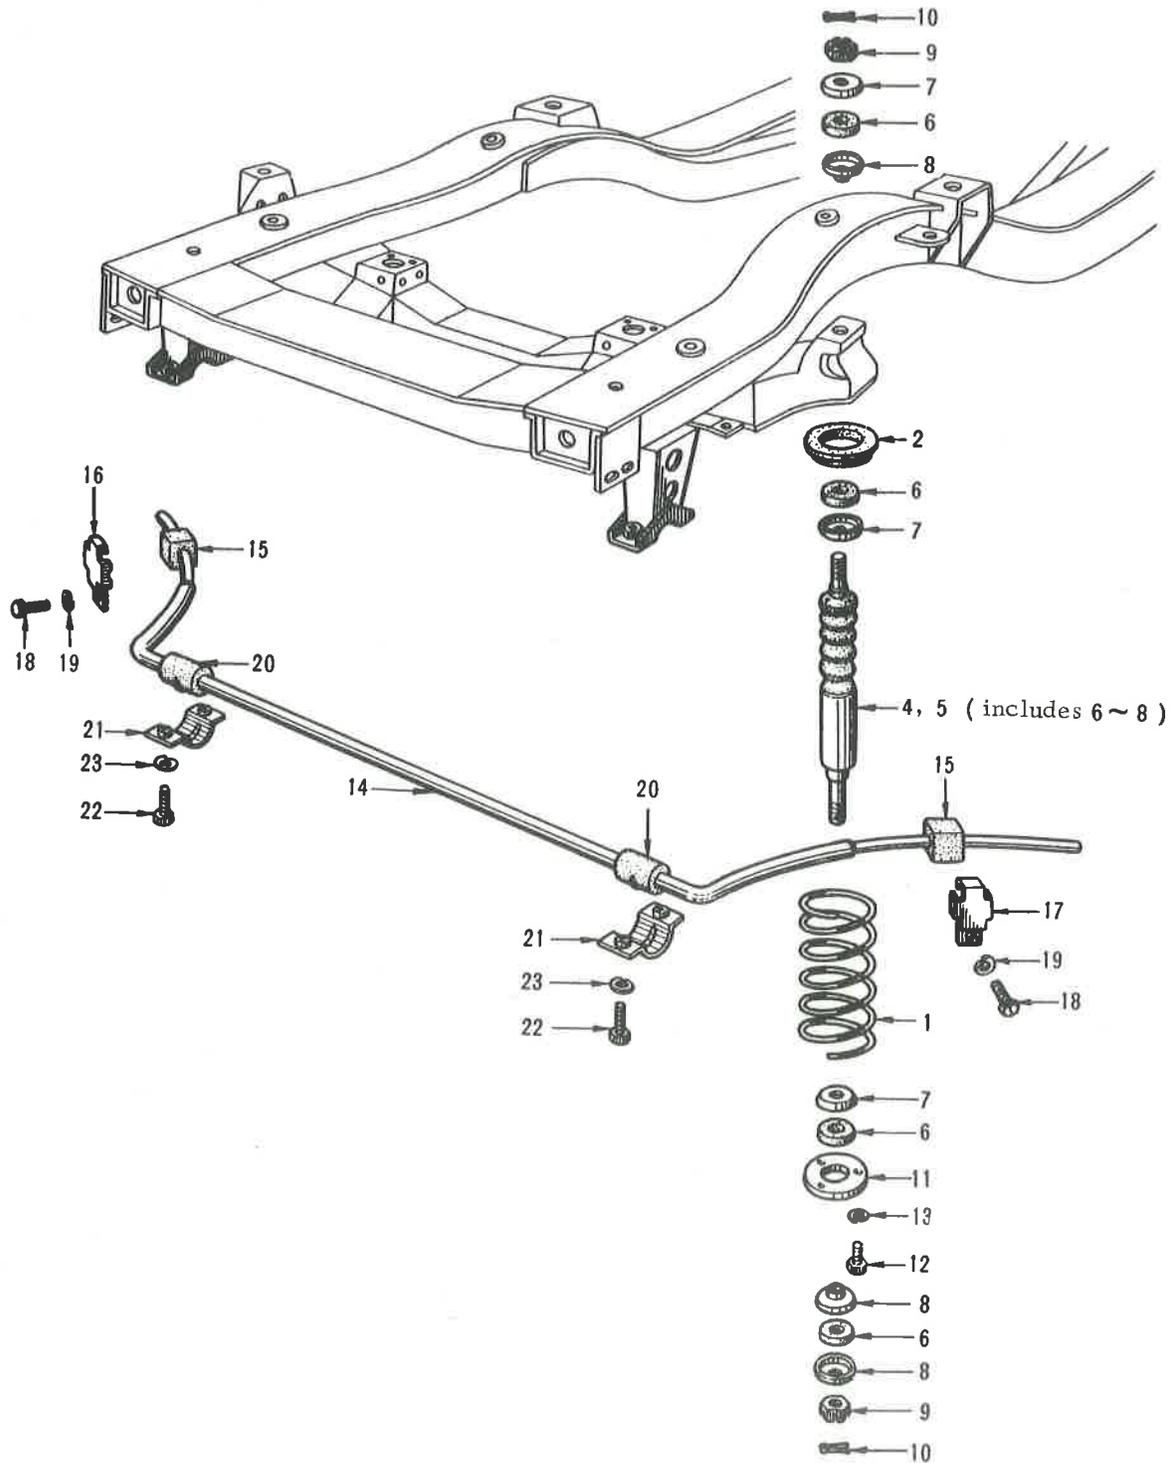

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>FRONT SUSPENSION (2)</b>				
	1	54010-10501	SPRING=FRONT	2		ALL	
	2	54036-04100	SEAT=RUBBER,FRONT SPRING	2	5	ALL	
*	3	56110-04225	KIT=ABSORBER,SHOCK,FRONT	2	1	ALL	
	4	56110-14625	KIT=ABSORBER,SHOCK,FRONT(ING,4,5,6,7)	2	1	ALL	Y
	5	56110-25525	KIT=ABSORBER,SHOCK,FRONT(FROM E/# R=40001)	2	1	ALL	N
	6	56112-09400	BUSHING=RUBBER	8	50	ALL	
	7	56113-09400	WASHER=SPECIAL	8	50	ALL	
	8	56114-09400	WASHER=SPECIAL	4	50	ALL	
	9	00911-74610	NUT	4	50	ALL	
	10	00921-22210	PIN=COTTER	4	50	ALL	
	11	56115-04100	BRACKET=MOUNTING,FRONT SHOCK ABSORBER,LOWER	2	1	ALL	
	12	00369-41610	SCREW	6	50	ALL	
	13	00915-11410	WASHER=LOCK	6	50	ALL	
	14	54611-04200	BAR=TORSION,FRONT STABILIZER	1	1	ALL	
	15	54616-04200	BUSHING=RUBBER,FRONT STABILIZER,LOWER LINK SIDE	2	10	ALL	
	16	54617-04200	CLIP=FRONT STABILIZER, LINK SIDE R.H.	1	5	ALL	
	17	54618-04200	CLIP=FRONT STABILIZER, LINK SIDE L.H.	1	10	ALL	
	18	00369-00810	SCREW	2	50	ALL	



S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	19	00915-11000	WASHER-LOCK	2		ALL	
	20	54613-04200	BUSHING-RUBBER, FRONT S TABILIZER, FRAME SIDE	2	10	ALL	
	21	54614-04200	RETAINER-BUSH, FRONT ST ABILIZER, FRAME SIDE	2	1	ALL	
	22	00114-41610	BOLT	4	50	ALL	
*	23	00915-11400	WASHER-LOCK	4		ALL	

**NOTE**




FRONT BRAKE

Note: Key No.12, 13, 18, 19  
When the dust cover and the ring are replaced together, they are interchangeable.

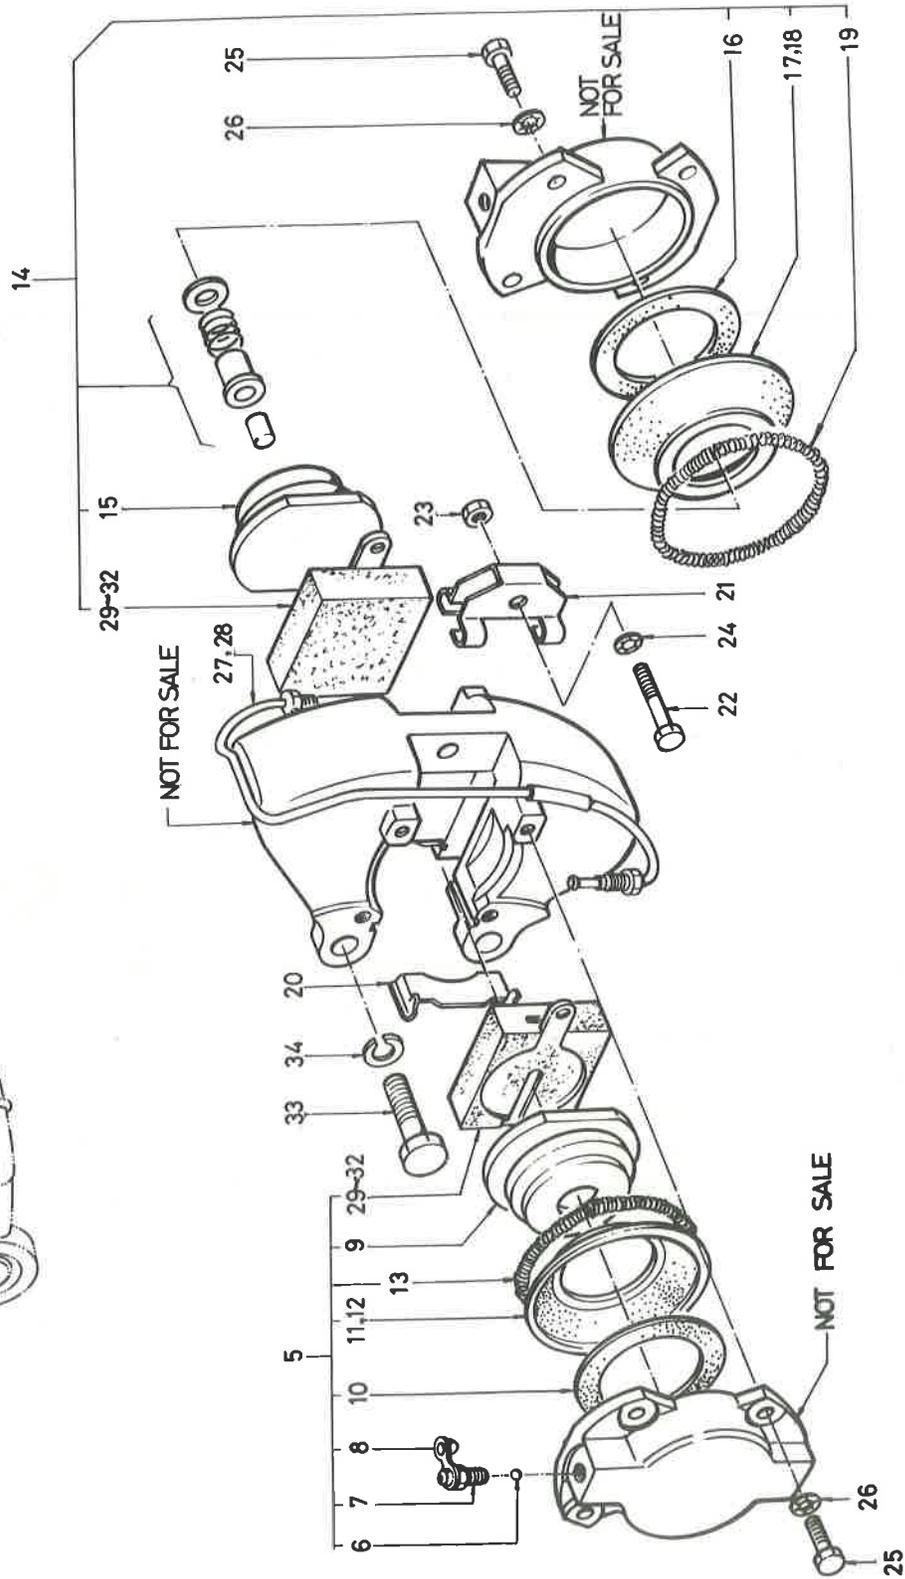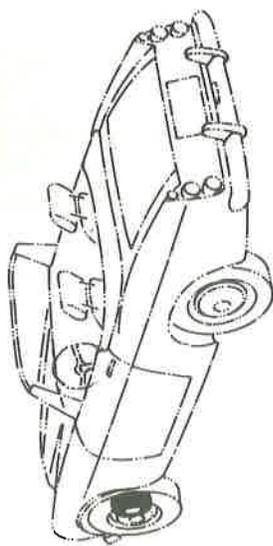


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>FRONT BRAKE</b>				
*	1	41000-73400	ASSY-CALIPER, FRONT BRAKE, R, H,	1	1	ALL	
	2	41000-65001	ASSY-CALIPER, FRONT BRAKE, R, H,	1	1	ALL	Y
*	3	41010-73400	ASSY-CALIPER, FRONT BRAKE, L, H,	1	1	ALL	
	4	41010-65001	ASSY-CALIPER, FRONT BRAKE, L, H,	1	1	ALL	Y
	5	41100-14600	ASSY-CYLINDER, INNER	2	1	ALL	
	6	41126-14600	BALL-13/16	2	10	ALL	
	7	41128-14600	SCREW-BLEEDER	2	10	ALL	
	8	41129-30001	CAP-BLEEDER	2	10	ALL	
	9	41120-14600	ASSY-PISTON	2	5	ALL	
	10	41124-14600	PACKING-PISTON	2	10	ALL	
*	11	41127-14600	COVER-DUST	2	10	ALL	
	12	41127-73400	COVER DUST	2		ALL	C
	13	41135-73400	RING	2		ALL	C
	14	41101-14600	ASSY-CYLINDER, OUTER	2	1	ALL	
	15	41120-14600	ASSY-PISTON	2	5	ALL	
	16	41124-14600	PACKING-PISTON	2	10	ALL	
*	17	41127-14600	COVER-DUST	2	10	ALL	
	18	41127-73400	COVER DUST	2		ALL	C
	19	41135-73400	RING	2		ALL	C
	20	41214-14600	PLATE-SUPPORT	4	10	ALL	
	21	41071-14600	PLATE-KEEP	2	5	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	22	41217-14600	BOLT TO FIX KEEP PLATE	2	10	ALL	
	23	41049-14600	NUT TO FIX KEEP PLATE	2	10	ALL	
	24	41057-14600	WASHER TO FIX KEEP PLATE	2	50	ALL	
	25	41218-14600	BOLT TO FIX CYLINDER	16	10	ALL	
	26	41057-14600	WASHER TO FIX CYLINDER	16	50	ALL	
	27	41142-14600	ASSY-TUBE, BRIDGE, R, H,	1	5	ALL	
	28	41143-14600	ASSY-TUBE, BRIDGE, L, H,	1	5	ALL	
*	29	41060-73400	ASSY-PAD	4	1	ALL	
*	30	<del>41060-65001</del> 41070-65002	ASSY-PAD(M33)RH/LH	4	1	ALL	Y
	31	41060-65002	ASSY-PAD(M33S)RH	2	1	ALL	Y
	32	41070-65002	ASSY-PAD(M33S)LH	2	1	ALL	
	33	41005-14600	BOLT TO FIX CALIPER	4	10	ALL	
	34	00915-11810	WASHER TO FIX CALIPER	4	100	ALL	

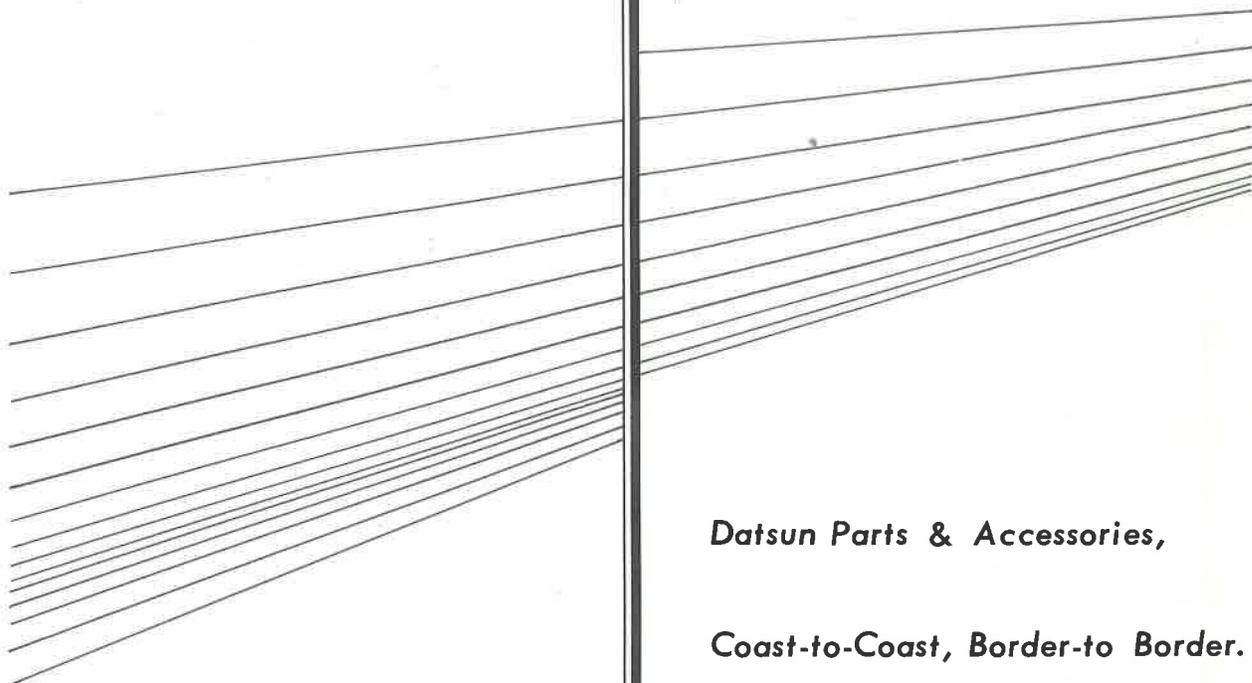


*Datsun Parts & Accessories,*

*Coast-to-Coast, Border-to Border.*

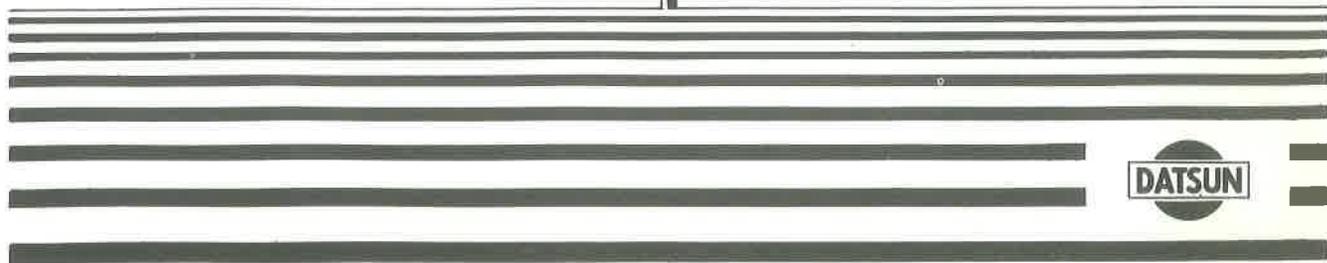

FRONT HUB & ROAD WHEEL

Note: When Key No. 18 (or 20), 41130-E0101 conn. 41140-A3200 TUBE and 46201-A3200 Hose are replaced together, they are interchangeable.

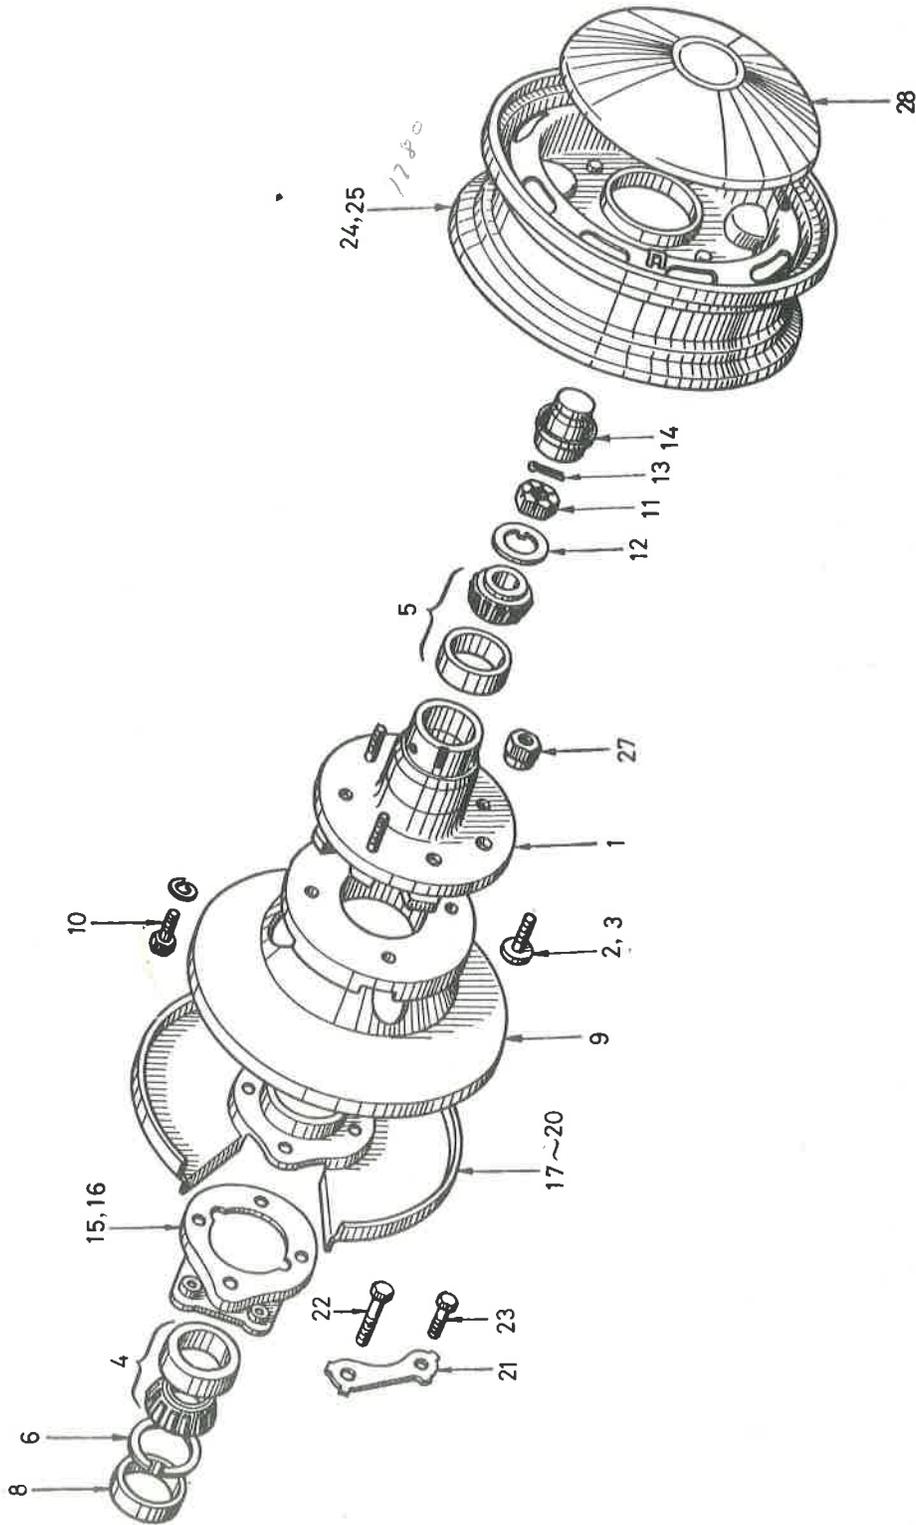

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>FRONT HUB &amp; ROAD WHEEL</b>							
	1	40202-14650	ASSY-HUB,ROAD WHEEL,FRONT	2	1	ALL	
	2	40221-14600	BOLT-HUB,ROAD WHEEL	8	10	1,6L	
	3	40221-25500	BOLT-HUB,ROAD WHEEL(FROM E/# R-40001)	8	10	ALL	N
	4	38440-14361	BEARING-FRONT WHEEL,INNER	2	1	ALL	
	5	40215-14600	BEARING-FRONT WHEEL,OUTER	2	1	ALL	
	6	40231-04100	SPACER-OIL SEAL,FRONT HUB	2	10	ALL	
*	7	40227-08000	SEAL-OIL,FRONT HUB	2		ALL	
	8	40232-16500	SEAL-OIL,FRONT HUB	2	10	ALL	Y
	9	40206-14600	ROTOR-DISC BRAKE	2	1	ALL	
	10	40225-14600	BOLT-HUB ROTOR FIX	8	10	ALL	
	11	40040-04100	NUT-KNUCKLE SPINDLE	2	10	ALL	
	12	40037-04100	WASHER-FRONT WHEEL BEARING	2	10	ALL	
	13	00921-44000	PIN-COTTER	2	50	ALL	
	14	40234-14600	CAP-HUB,FRONT WHEEL	2	5	ALL	
	15	41020-14600	ADAPTER-CALIPER,R,H.	1	10	ALL	
	16	41030-14600	ADAPTER-CALIPER,L,H.	1	10	ALL	
	17	41025-14600	PLATE-BAFFLE,R,H.	1	1	ALL	
	18	41025-A3200	PLATE-BAFFLE,R,H.(FROM JULY-69)	1		ALL	C
	19	41035-14600	PLATE-BAFFLE,L,H.	1	1	ALL	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	20	41035-A3200	PLATE=BAFFLE,L.H.(FROM JULY=69)	1		ALL	C
	21	41025-04100	PLATE=LOCK	4	10	ALL	
	22	00134-65010	BOLT	4	25	ALL	
	23	00134-63200	BOLT	4	50	ALL	
	24	40300-14600	ASSY=WHEEL ROAD (TO E/ # 40000)	5	1	1,6L	
	25	40300-14601	ASSY=WHEEL,ROAD 4 1/2 J X 14(FROM E/# R=4000 1)	5	1	OP,ALL	N
0	26	40225-04100	NUT=ROAD WHEEL	16	10	ALL	
	27	40225-28000	NUT=ROAD WHEEL	16	50	ALL	Y
	28	40315-14600	ASSY=COVER,ROAD WHEEL	4	1	ALL	

NOTE



A series of horizontal lines for writing, starting from the top line below the 'NOTE' header and ending at the bottom line of the page. The lines are evenly spaced and run across the width of the page.

REAR BRAKE

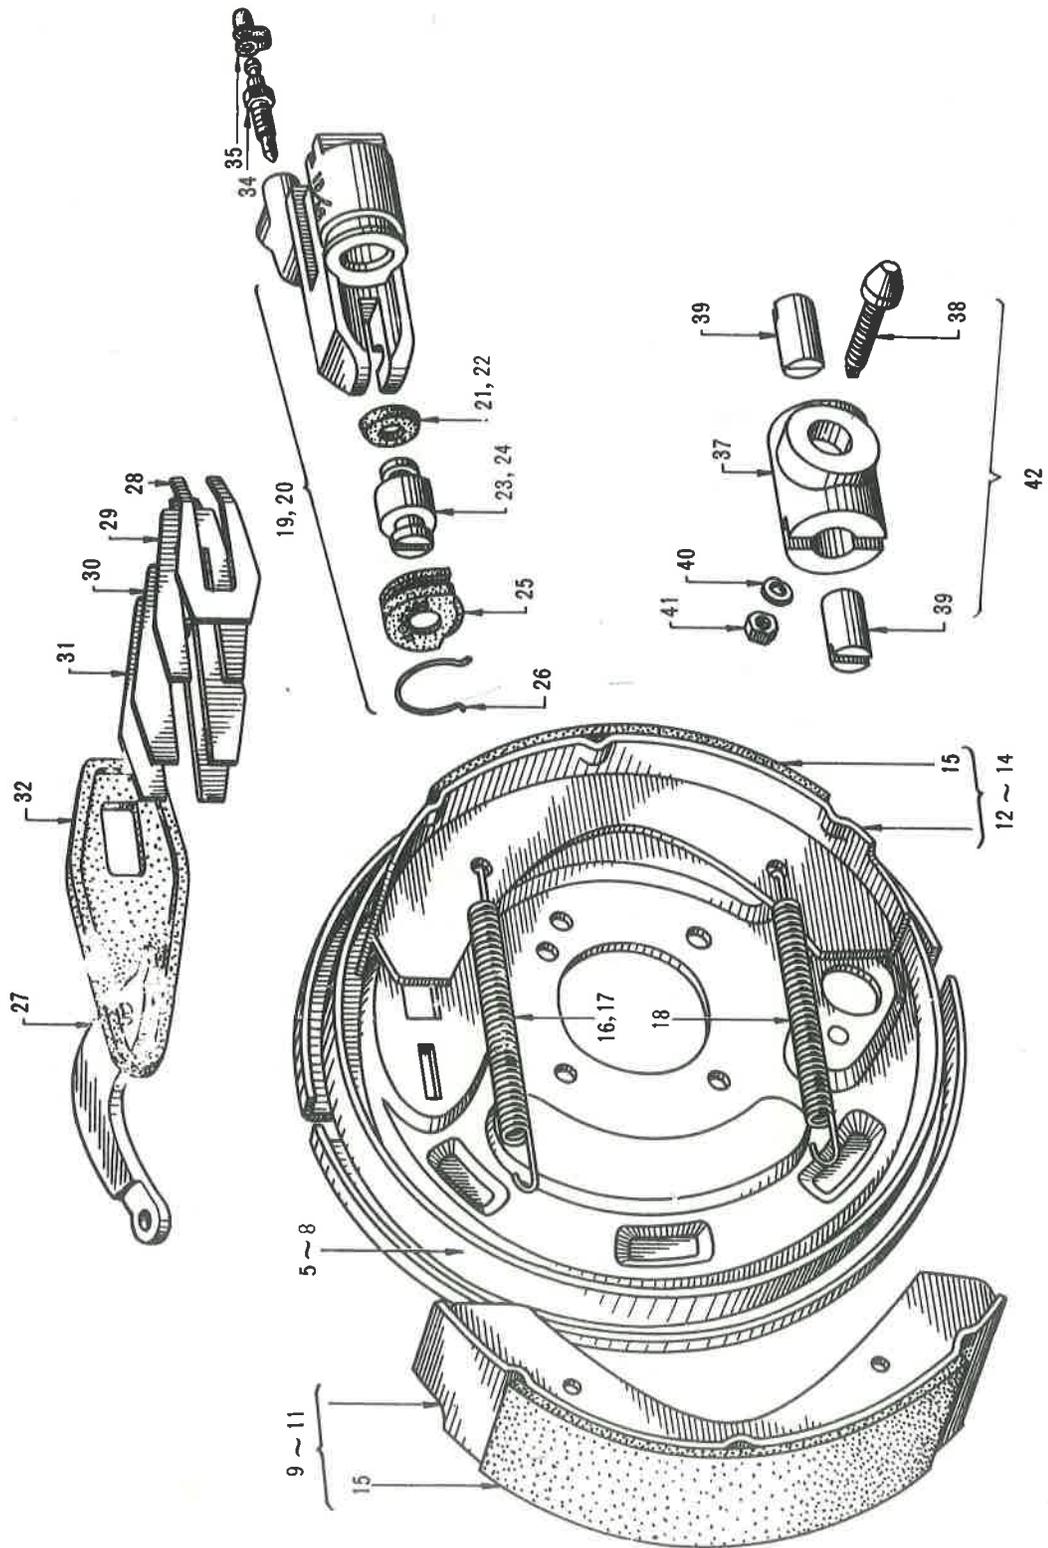

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>REAR BRAKE</b>				
	1	44000-14600	ASSY-BRAKE, REAR, R.H.	1	1	1,6L	
	2	44000-25500	ASSY-BRAKE, REAR, R.H. (FROM E/# R-40001)	1	1	ALL	N
	3	44010-14600	ASSY-BRAKE, REAR, L.H.	1	1	1,6L	
	4	44010-25500	ASSY-BRAKE, REAR, L.H. (FROM E/# R-40001)	1	1	ALL	N
	5	44020-10600	ASSY-DISC, REAR BRAKE, R.H.	1	1	1,6L	
	6	44020-25500	ASSY-DISC, REAR BRAKE, R.H. (FROM E/# R-40001)	1	1	ALL	N
	7	44030-10600	ASSY-DISC, REAR BRAKE, L.H.	1	1	1,6L	
	8	44030-25500	ASSY-DISC, REAR BRAKE, L.H. (FROM E/# R-40001)	1		ALL	N
	9	44060-10500	ASSY-SHOE, REAR BRAKE, FRONT	2	1	1,6L	
	10	44060-16500	ASSY-SHOE, REAR BRAKE, FRONT (FROM E/# R-40001)	2	4	ALL	N
	11	44060-14600	ASSY-SHOE, REAR BRAKE, FRONT (FROM E/# R-40001)	2	1	OP, ALL	
	12	44070-10500	ASSY-SHOE, REAR BRAKE, AFTER	2	1	1,6L	
	13	44070-16500	ASSY-SHOE, REAR BRAKE, AFTER (FROM E/# R-40001)	2	4	ALL	N
	14	44070-14600	ASSY-SHOE, REAR BRAKE, AFTER (FROM E/# R-40001)	2	1	OP, ALL	
	15	41066-10500	LINING-BRAKE (B40)	4	1	ALL	
	16	44070-30001	SPRING-RETURN, BRAKE SHOE, CYLINDER SIDE	2	10	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	17	44090-16505	SPRING-RETURN, BRAKE SHOE, CYLINDER SIDE (FROM E/# R-40001)	2	5	ALL	N
	18	44071-30001	SPRING-RETURN, BRAKE SHOE, ADJUSTER SIDE	2	10	1,6L	
	19	44100-14600	ASSY-CYLINDER, REAR WHEEL (13/16") (NABCO)	2	1	1,6L	
	20	44100-25500	ASSY-CYLINDER, REAR WHEEL (3/4") (NABCO) (FROM E/# R-40001)	2	1	ALL	N
	21	44112-71200	CUP-PISTON (TO E/# R-40000)	2	20	1,6L	
	22	44112-32201	CUP-PISTON (FROM E/# R-40001)	2	50	ALL	N
	23	44108-14600	PISTON-REAR WHEEL (TO E/# R-40000)	2	5	1,6L	
	24	44108-73400	PISTON-REAR WHEEL (FROM E/# R-40001)	2	5	ALL	N
	25	44124-31700	COVER-DUST, A	2	10	ALL	
	26	44113-31700	RING-SNAP	2	10	ALL	
	27	44118-30001	ASSY-LEVER	2	5	ALL	
	28	44141-31700	SHIM-ADJUSTING, A	2	10	ALL	
	29	44142-31700	SHIM-ADJUSTING, B	2	10	ALL	
	30	44149-31700	PLATE-A	2	5	ALL	
	31	44150-31700	PLATE-B	2	10	ALL	
	32	44144-31700	COVER-DUST, B	2	10	ALL	
	33	44131-14600	GASKET	2	10	ALL	
	34	41128-30001	SCREW-BLEEDER	2	10	ALL	
	35	41129-30001	CAP-BLEEDER	2	10	ALL	
*	36	44081-04100	ASSY-HOUSING, BRAKE SHOE ADJUSTER	2		1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	37	44202-18400	ASSY-HOUSING, BRAKE SHO E ADJUSTER	2	1	ALL	Y
	38	44084-30000	WEDGE-ADJUSTER	2	10	ALL	
	39	44205-10500	TAPPET-ADJUSTER	4	10	ALL	
	40	00915-11410	WASHER-LOCK	4	50	ALL	
	41	00911-14410	NUT	4	50	ALL	
	42	44200-18400	ASSY-ADJUSTER, REAR BRA KE (INC, 20, 21, 22)	2	1	ALL	
	43	44100-14625	KIT-A, REAR WHEEL CYLIN DER (TO E/# R-40000)	1	1	1,6L	
	44	44100-14626	KIT-B, REAR WHEEL CYLIN DER (TO E/# R-40000)	1	1	1,6L	

**NOTE**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---



BRAKE MASTER CYLINDER (SINGLE) (TO E/# R-40000)

Note: When using Key No. 16 (Piston cup), You need not install Fing Piston cup.

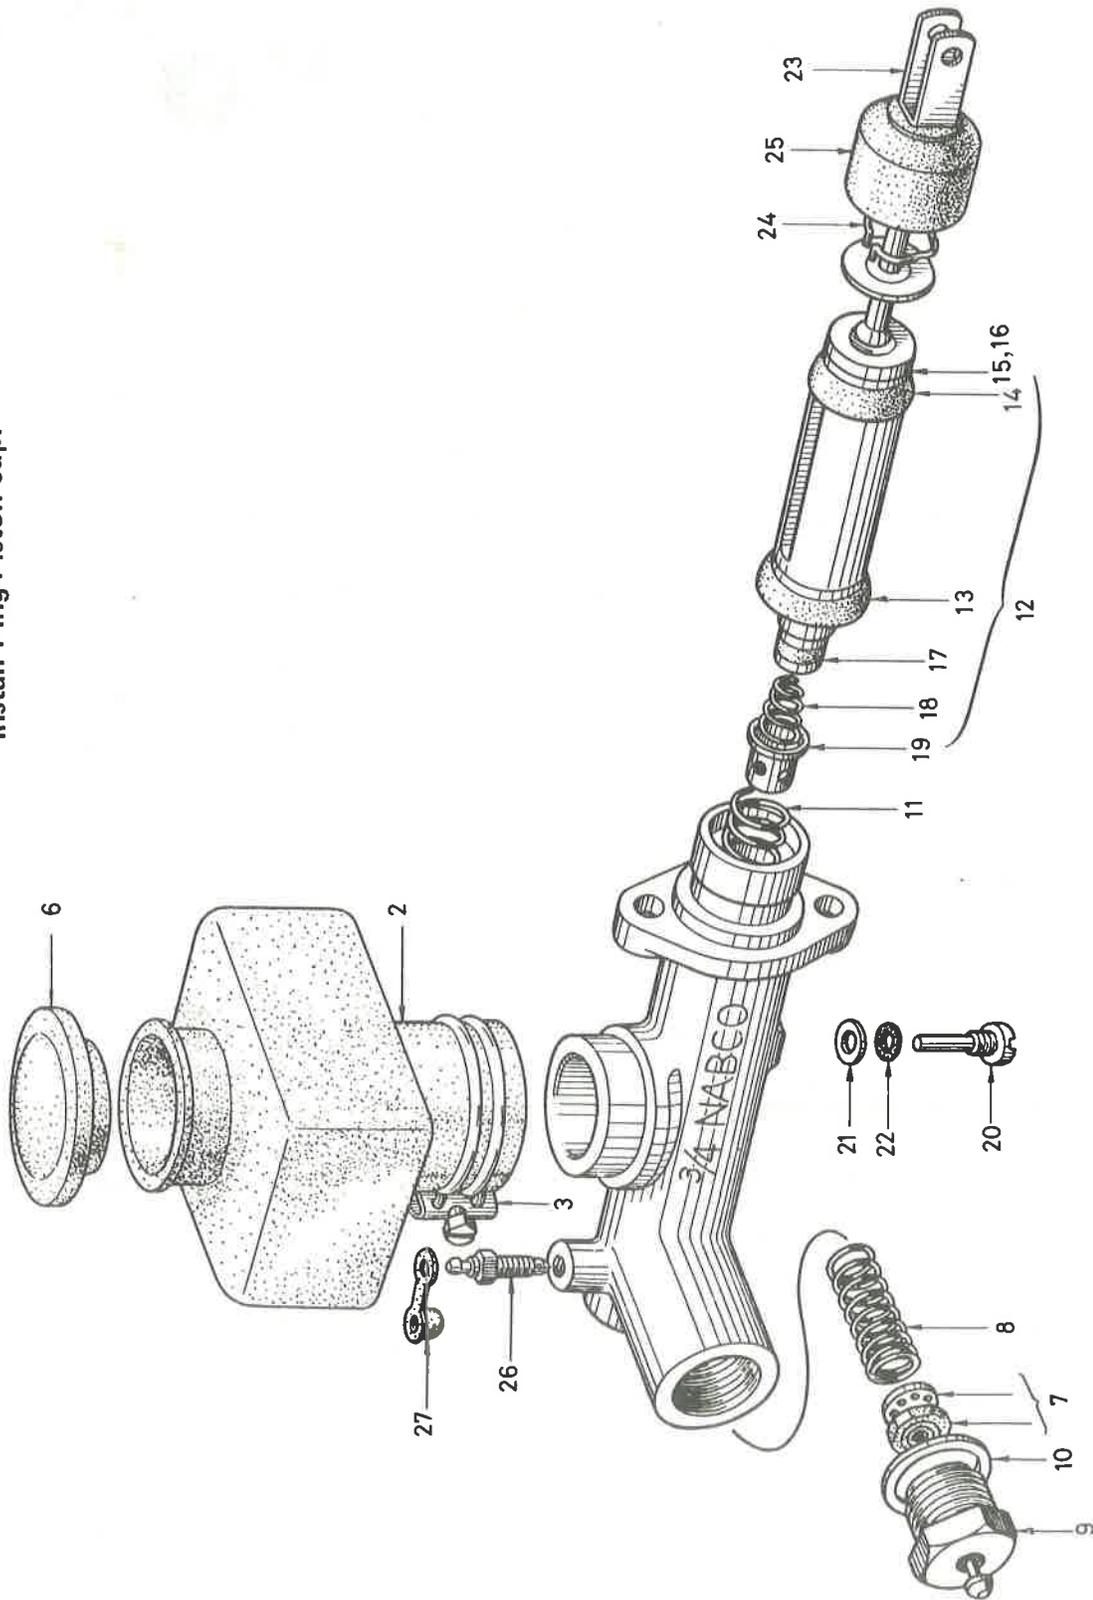


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>BRAKE MASTER CYLINDER (SINGLE) (TO E/# R-40000)</b>							
	1	46010-14602	ASSY-CYLINDER, BRAKE MASTER (3/4" NABCO)	1	1	1,6L	
	2	46091-14601	RESERVOIR-BRAKE OIL	1	1	1,6L	
	3	46016-14600	ASSY-BAND, OIL RESERVOIR	1	5	1,6L	
*	4	46020-10601	SET-CAP, OIL RESERVOIR	1	5	1,6L	
*	5	46020-18000	SET-CAP, OIL RESERVOIR	1	5	1,6L	Y
	6	46020-28600	SET-CAP, OIL RESERVOIR	1	5	1,6L	Y
	7	46050-14600	SPRING-CYL (TOKICO)	1	10	ALL	
	8	46027-10600	SPRING-VALVE	1	10	1,6L	
	9	46038-12200	CAP-VALVE	1	5	1,6L	
	10	46042-27260	GASKET-CAP VALVE	1	10	1,6L	
	11	46075-27260	SPRING-PISTON	1	5	1,6L	
*	12	46063-30001	ASSY-PISTON, BRAKE MASTER	1	1	1,6L	
	13	46078-27261	CUP-PISTON (P)	1	10	1,6L	
	14	46065-27261	CUP-PISTON (S)	1	10	1,6L	
	15	46069-27260	RING-PISTON CUP (S)	1	10	1,6L	
	16	28211-0503P	CUP-PISTON (S)	1		1,6L	N
	17	46073-30800	ASSY-VALVE, INLET	1	10	1,6L	
	18	46056-27260	SPRING-VALVE INLET	1	10	1,6L	
	19	46076-30800	RETAINER-SPRING	1	10	1,6L	
	20	46032-27260	SCREW-STOPPER	1	10	1,6L	
	21	46043-27260	PACKING	1	50	1,6L	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	22	46079-27260	RING-RON	1	10	1,6L	
	23	46081-12900	ASSY-ROD,PUSH	1	5	1,6L	
	24	46070-27260	RING-SNAP	1	50	ALL	
	25	46100-27260	COVER-DUST	1	10	ALL	
	26	41128-30001	SCREW-BLEEDER	1	10	ALL	
	27	41129-30001	CAP-BLEEDER SCREW	1	10	ALL	
•	28	46117-27260	SHIM-MASTER CYLINDER(1,6T)	AR	50	ALL	
	29	46117-25600	SHIM-MASTER CYLINDER (1,6T)	19	10	ALL	Y
•	30	46118-27260	SHIM-MASTER CYLINDER(0,8T)	AR	50	ALL	
	31	46118-25600	SHIM-MASTER CYLINDER (0,8T)	19	10	ALL	Y
•	32	46119-27260	SHIM-MASTER CYLINDER(0,5T)	AR	10	ALL	
	33	46119-25600	SHIM-MASTER CYLINDER (0,5T)	19	10	ALL	Y
	34	30614-01300	BOLT TO FIX BRAKE MASTER	2	5	ALL	
	35	00911-14510	NUT TO FIX BRAKE MASTER	2	50	ALL	
	36	00915-21510	WASHER-LOCK TO FIX BRAKE MASTER	2	50	ALL	
	37	46010-14625	KIT-A,BRAKE MASTER CYL (SINGLE)	1	1	1,6L	
	38	46010-14626	KIT-B,BRAKE MASTER CYL (SINGLE)	1	1	1,6L	

**NOTE**



BRAKE MASTER CYLINDER (TANDEM) (FROM E/# R-40001)

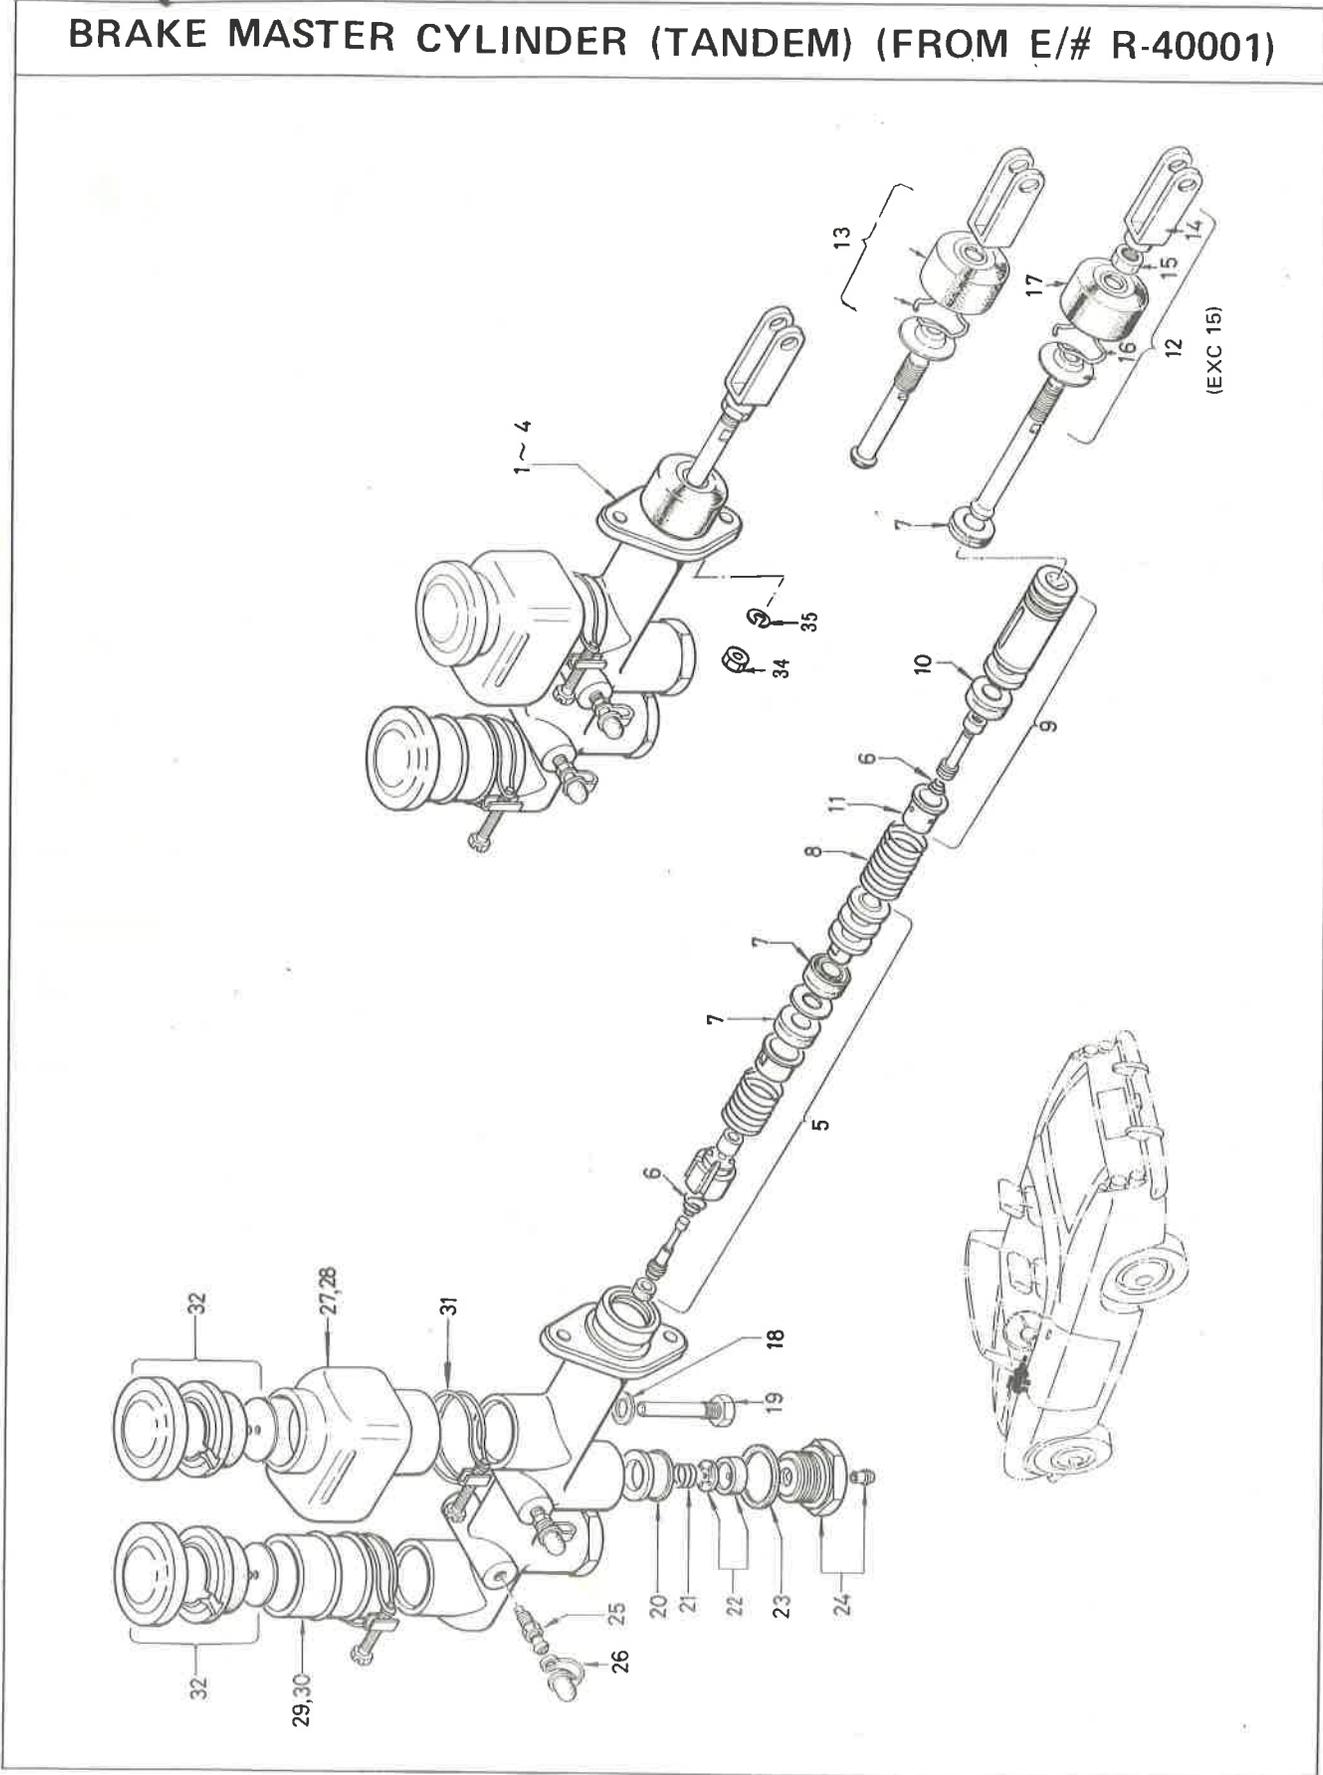

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>BRAKE MASTER CYLINDER (TANDEM) (FROM E/# R-40001)</b>							
	1	46010-25500	ASSY-CYLINDER, BRAKE MASTER, TANDEM TYPE	1	1	SP, SR	
	2	46010-A7400	ASSY-CYLINDER, B/MASTER TANDEM TYPE W/STOPPER BOLT	1		SP, SR	Y
	3	46010-25600	ASSY-CYL, B/M, TANDEM TYPE (FROM E/#R-40001, U20-00001)	1	1	SPL, SRL	
	4	46010-A7800	ASSY-CYLINDER B/MASTER TANDEM TYPE W/STOPPER BOLT	1		SPL, SRL	Y
	5	46063-25510	ASSY-PISTON (TOKICO)	1	5	ALL	
	6	46056-73010	SPRING-VALVE INLET (TOKICO)	2	10	ALL	
	7	46078-61010	CUP-PISTON (P & S) (TOKICO)	3	10	ALL	
	8	46075-23111	CUPRING-CYL (TOKICO)	1	5	SP, SR	
	9	46063-23112	ASSY-PISTON (B) (TOKICO)	1	1	ALL	
	10	46068-61010	CUP-PISTON (S) (TOKICO)	1	10	ALL	
	11	46073-10610	ASSY-VALVE INLET (TOKICO)	2	10	ALL	
	12	46080-25510	ASSY-ROD PUSH (TOKICO)	1	5	SP, SR	
	13	46080-25610	ASSY-ROD PUSH (TOKICO)	1	5	SPL, SRL	
	14	30629-73410	ASSY-HEAD PUSH ROD (TOKICO)	1	5	ALL	
	15	46103-73410	NUT (TOKICO)	1	50	ALL	
	16	46070-27260	RING-SNAP (TOKICO)	1	50	ALL	
	17	46100-27260	COVER-DUST (TOKICO)	1	10	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	18	46079-10610	PACKING (TOKICO)	1	10	ALL	
	19	46032-10610	SCREW=STOPPER (TOKICO)	1	10	ALL	
	20	46059-73010	SEAT=VALVE(TOKICO)	2	5	ALL	
	21	46027-73010	SPRING=VALVE (TOKICO)	2	10	ALL	
	22	46050-73410	ASSY=VALVE (TOKICO)	2	5	SP,SR	
	23	46036-30100	GASKET=CAP VALVE (TOKICO)	2	10	ALL	
	24	46038-73010	CAP=VALVE (TOKICO)	2	5	ALL	
	25	41128-21011	SCREW=BLEEDER (TOKICO)	2	10	ALL	
	26	41129-30001	CAP=BLEEDER SCREW (TOKICO)	2	10	ALL	
	27	46090-10610	RESERVOIR=BRAKE OIL(R) (TOKICO)	1	1	SP,SR	
	28	46090-25610	RESERVOIR OIL(R)(TOKICO)	1	1	SPL,SRL	
	29	46090-25510	RESERVOIR=BRAKE OIL(F) (TOKICO)	1	1	SP,SR	
	30	46091-25610	RESERVOIR OIL(F)(TOKICO)	1	1	SPL,SRL	
	31	46016-10610	ASSY=BAND OIL RESERVOIR (TOKICO)	2	5	ALL	
	32	46020-10611	SET=CAP OIL RESERVOIR (TOKICO)	2	5	ALL	
	33	46117-25600	SHIM=BRAKE MASTER(1,6T)	AR	10	ALL	
	34	46118-25600	SHIM=BRAKE MASTER(0,8T)	AR	10	ALL	
	35	46119-25600	SHIM=BRAKE MASTER(0,5T)	AR	10	ALL	
	36	00911-14510	NUT=HEXAGON 5/16 24 UNF	2	50	ALL	
	37	00915-21510	WASHER=LOCK 5/16	2	50	ALL	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	38	46010-23127	KIT-"A", BRAKE MASTER (FROM E/#R=40001)	1	1	ALL	
	39	46010-25528	KIT-"B", BRAKE MASTER (FROM E/#R=40001)	1	1	ALL	

**NOTE**



A series of horizontal lines for writing, starting from the top of the page and extending to the bottom. The lines are evenly spaced and cover most of the width of the page. There are approximately 20 lines in total, with the first line starting below the 'NOTE' header and the last line ending near the bottom of the page.

CLUTCH MASTER CYLINDER

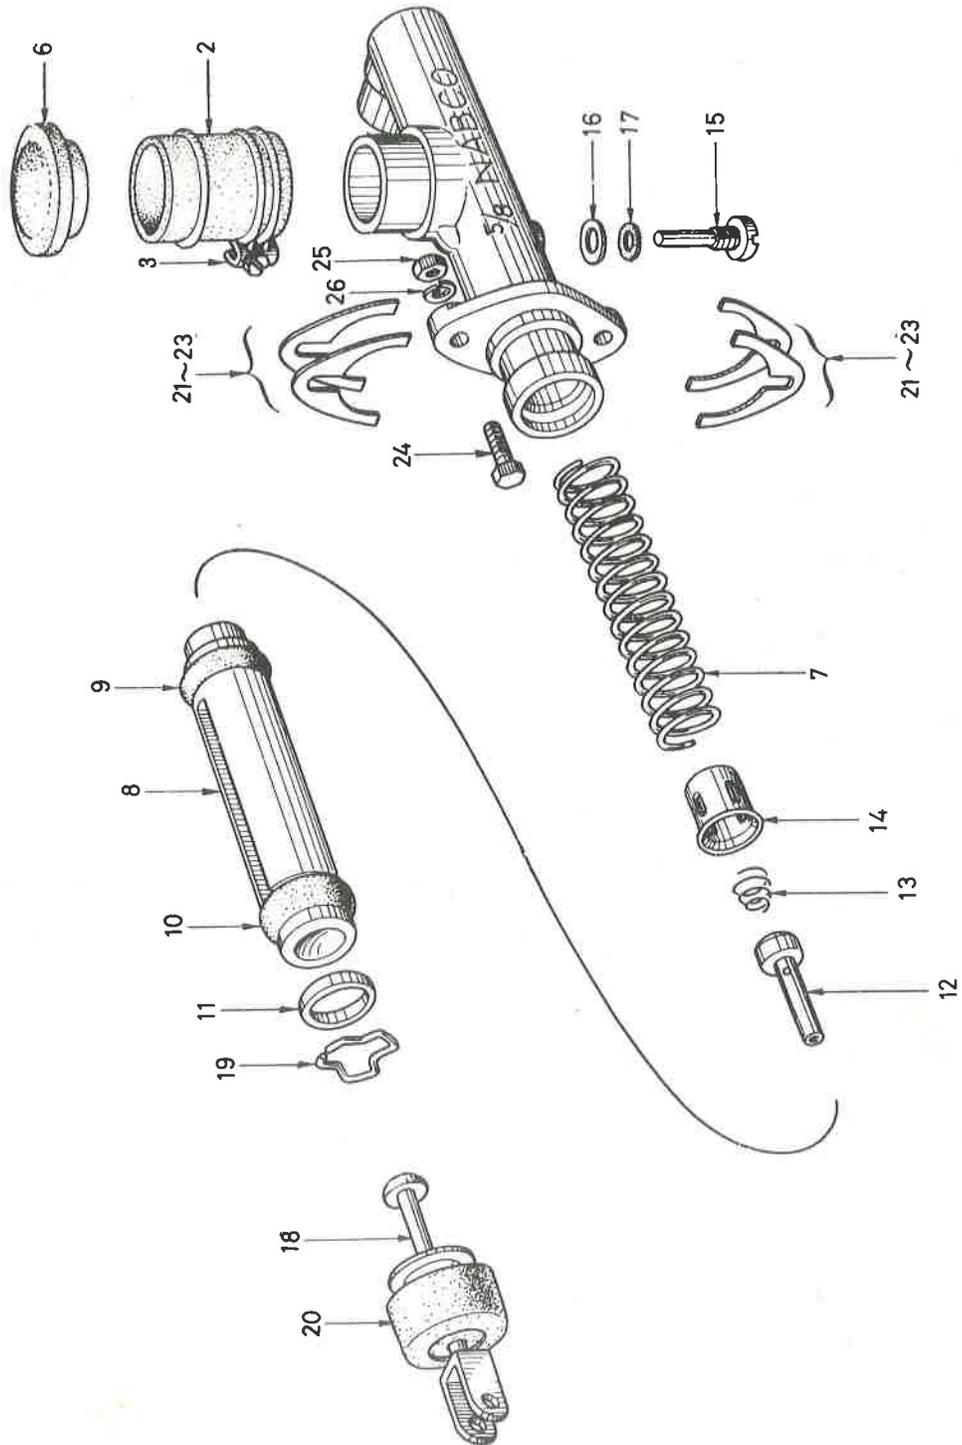

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>CLUTCH MASTER CYLINDER</b>				
	1	30610-12900	ASSY-CYLINDER, CLUTCH MASTER(5/8" NABCO)	1	1	ALL	
	2	46090-10600	RESERVOIR-BRAKE OIL	1	1	ALL	
	3	46016-12200	ASSY-BAND, OIL RESERVOIR	1	5	ALL	
*	4	46020-10601	SET-CAP, OIL RESERVOIR	1	5	ALL	
*	5	46020-18000	SET-CAP, OIL RESERVOIR	1	5	ALL	Y
	6	46020-28600	SET-CAP, OIL RESERVOIR	1		ALL	Y
	7	46061-30000	SPRING-PISTON	1	10	ALL	
	8	46076-08700	ASSY-PISTON, CLUTCH MASTER	1	1	ALL	
	9	46064-30002	CUP-PISTON(P)	1	10	ALL	
*	10	46065-30002	CUP-PISTON(S)	1		ALL	
	11	46069-30000	RING-PISTON CUP(S)	1	50	ALL	
	12	46073-30800	ASSY-VALVE, INLET	1	10	ALL	
	13	46056-27260	SPRING-VALVE, INLET	1	10	ALL	
	14	46076-30800	RETAINER-SPRING	1	10	ALL	
	15	46032-27260	SCREW-STOPPER	1	10	ALL	
	16	46043-27260	PACKING	1	50	ALL	
	17	46079-27260	RING-"O"	1	10	ALL	
	18	46081-12900	ASSY-ROD, PUSH	1	5	ALL	
	19	46070-27260	RING-SNAP	1	50	ALL	
	20	46100-27260	COVER-DUST	1	10	ALL	
	21	30611-27260	SHIM-MASTER CYLINDER(1.6T)	1 AR	50	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	22	30612-27260	SHIM-MASTER CYLINDER(O .8T)	AR	50	ALL	
	23	30613-27260	SHIM-MASTER CYLINDER(O .5T)	AR	50	ALL	
	24	30614-01300	BOLT TO FIX CLUTCH MAS TER CYLINDER	2	5	ALL	
	25	00911-14510	NUT TO FIX CLUTCH MAST ER CYLINDER	2	50	ALL	
*	26	00915-21500	WASHER-LOCK TO FIX CLU TCH MASTER CYLINDER	2		ALL	
	27	30610-10625	KIT-A, CLUTCH MASTER RE PAIR	1	1	ALL	
	28	30610-10626	KIT-B, CLUTCH MASTER RE PAIR	1	1	ALL	

**NOTE**

---

---

---



---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---

---

### CLUTCH OPERATING CYLINDER

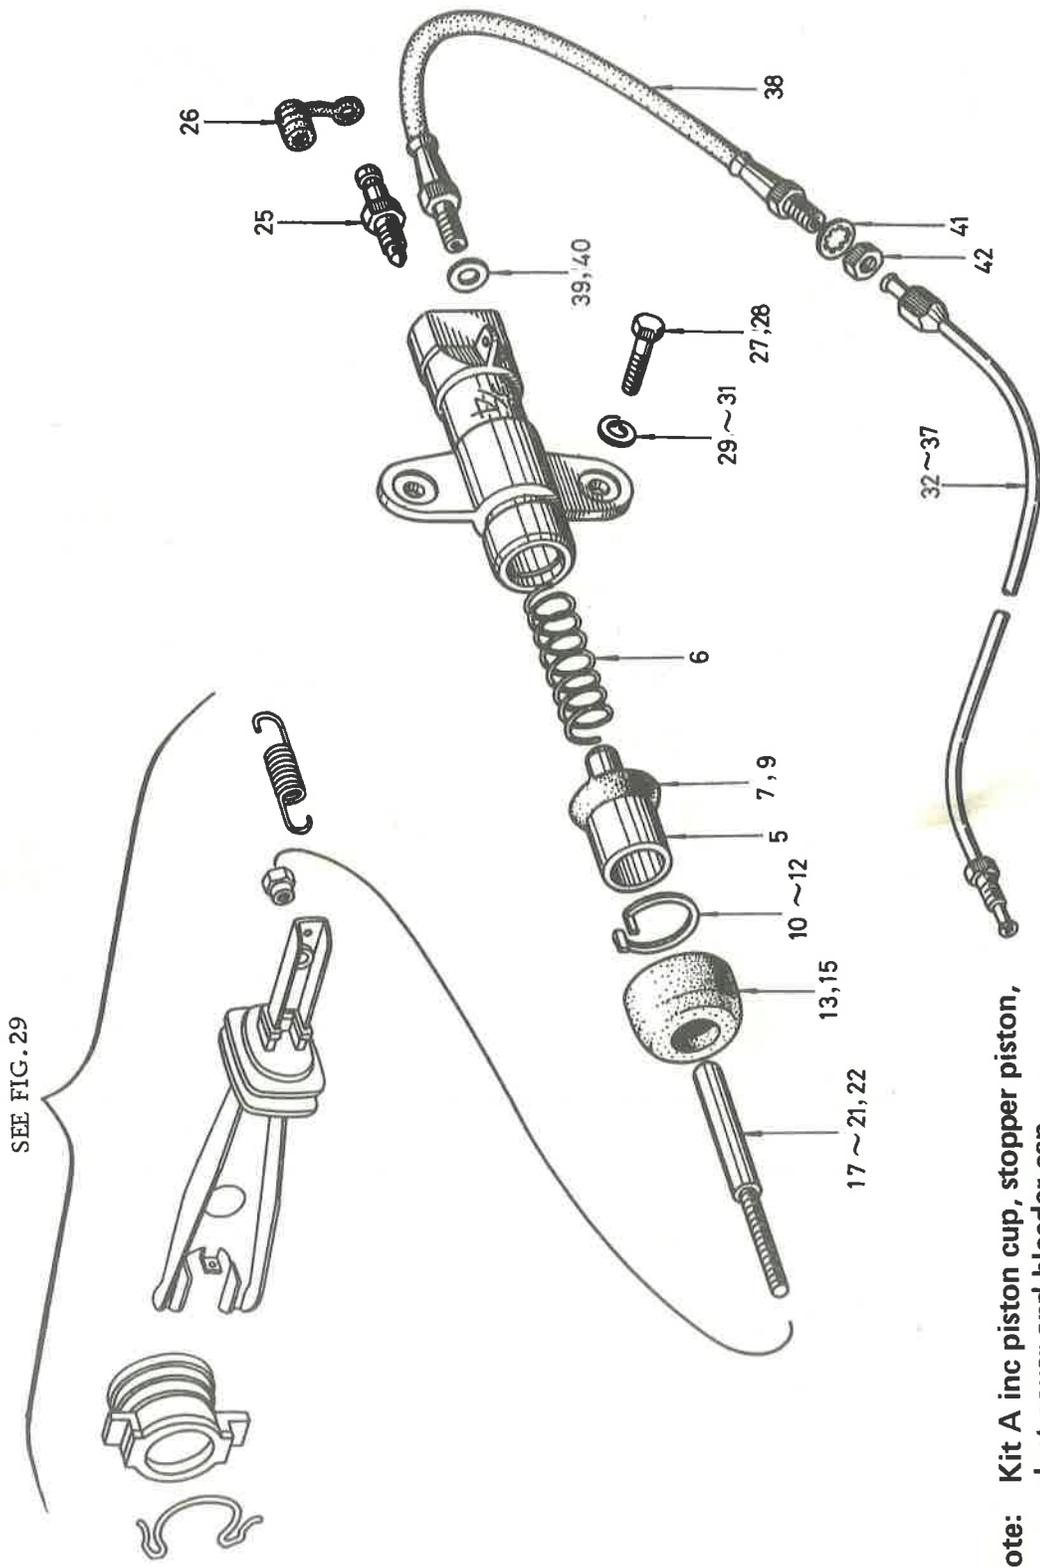


**Note:** Kit A inc piston cup, stopper piston, dust cover and bleeder cap.  
Kit B inc Kit A and piston.

CLUTCH OPERATING CYLINDER


(FROM C/# SP311-04001, SPL311-21955,  
SR311-01891, SRL311-04880)

TOKICO

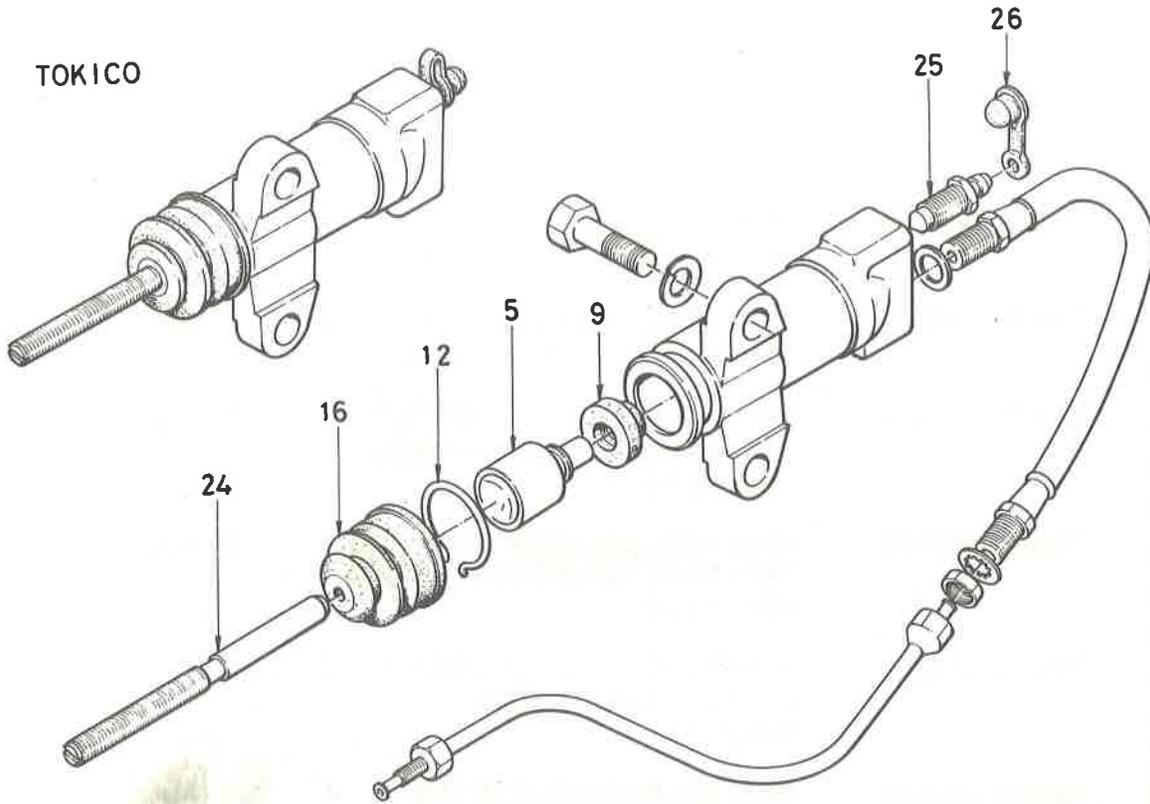

NOTE: Key No. 4, 8, 11, 14, 16, 22, 24, 44 thru 47  
FROM C/# SP311-04001 SPL311-21955  
SR311-01891 SRL311-04880

NABCO

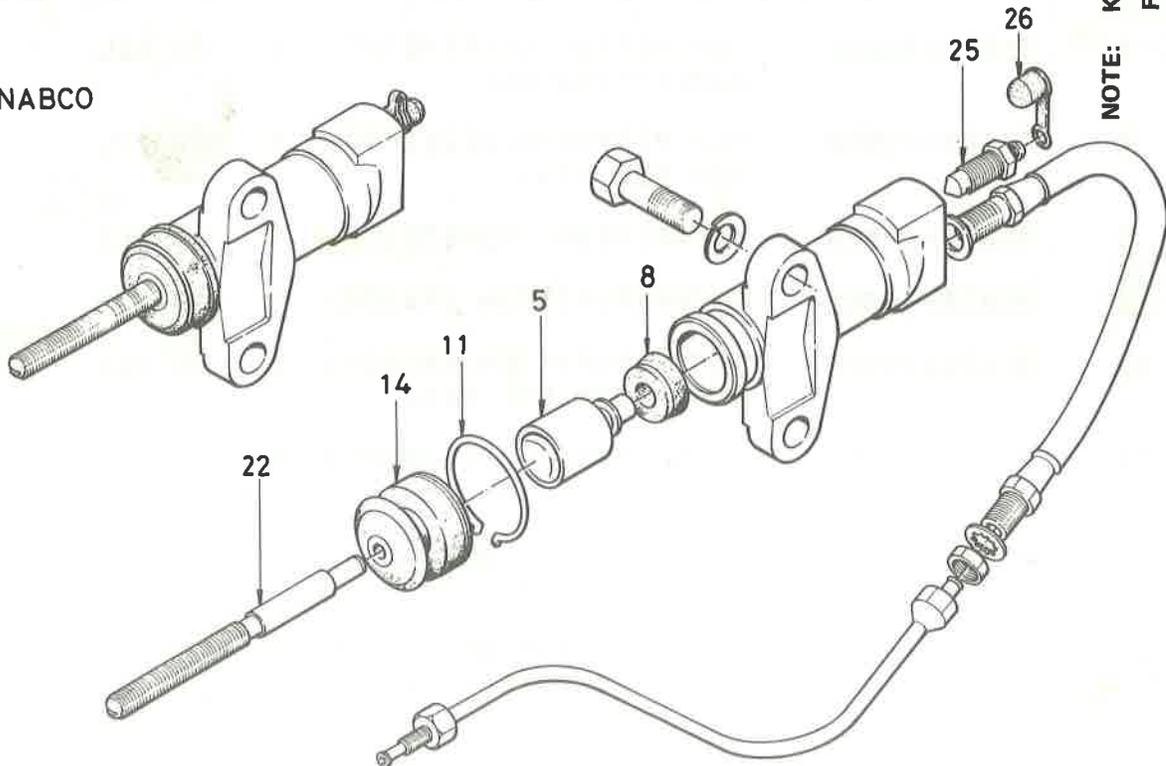

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
<b>CLUTCH OPERATING CYLINDER</b>							
	1	30620-14601	ASSY-CYLINDER, CLUTCH OPERATING (TO SEP-67)	1	1	1,6L	
*	2	30620-25500	ASSY-CYLINDER, CLUTCH OPERATING (TO SEP-67)	1	1	2L	
*	3	30620-25500	ASSY-CYL, CLUTCH OPERATING (NABCO & TOKICO) (FROM OCT-67)		1	ALL	Y
	4	30620-25501	ASSY-CYL, CLUTCH OPERATING (NABCO & TOKICO) (FROM SEE FIG)	1	1	ALL	Y
	5	30625-27260	PISTON-CLUTCH OPERATING CYLINDER (NABCO TOKICO)	1	10	ALL	
	6	30622-36900	SPRING-RETURN, PISTON (NABCO)	1	10	ALL	
	7	30624-30002	CUP-PISTON (SYNTHETIC RUBBER) (NABCO)	1	50	ALL	
	8	30624-21000	CUP-PISTON (NABCO) (FROM C/# SEE FIG)	1	20	ALL	N
	9	30624-10610	CUP-PISTON (TOKICO)	1	10	ALL	
	10	30626-30001	STOPPER-PISTON (NABCO)	1	50	ALL	
	11	30626-78000	STOPPER-PISTON (NABCO) (FROM C/# SEE FIG)	1	10	ALL	N
	12	30626-25510	STOPPER-PISTON (TOKICO) (FROM OCT-67)	1	10	ALL	
	13	30627-32200	COVER-CLUTCH OPERATING CYLINDER (NABCO)	1	10	ALL	
	14	30627-25500	COVER-CLUTCH OPERATING CYL, (NABCO) (FROM C/# SEE FIG)	1	5	ALL	N
	15	30627-10610	COVER-DUST (TOKICO)	1	10	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	16	30627-25510	COVER-CLUTCH OPERATING CYL,(TOKICO)(FROM C/# SEE FIG)	1	5	ALL	N
	17	30628-32205	ROD-PUSH,CLUTCH OPERATING CYLINDER	1	10	1,6L	
*	18	30628-38700	ROD-PUSH,CLUTCH OPERATING CYLINDER	1		1,6L	Y
*	19	30628-25500	ROD-PUSH	1	10	2L	
	20	30628-32205	ROD-PUSH (NABCO)	1	10	1,6L	Y
	21	30628-25501	ROD-PUSH (NABCO)	1	10	2L	Y
	22	30628-25502	ROD-PUSH (NABCO)(FROM C/# SEE FIG)	1	10	ALL	N
	23	30628-25510	ROD-PUSH (TOKICO)	1	10	ALL	
	24	30628-25511	ROD-PUSH (TOKICO)(FROM C/# SEE FIG)	1	10	ALL	N
	25	41128-30001	SCREW-BLEEDER (NABCO & TOKICO)	1	10	ALL	
	26	41129-30001	CAP-BLEEDER SCREW (NABCO & TOKICO)	1	10	ALL	
	27	00124-63010	BOLT TO ATTACH CLUTCH OPERATING CYLINDER	2	50	1,6L	
	28	08121-03010	BOLT TO ATTACH CLUTCH OPERATING CYLINDER	2	25	2L	
*	29	00915-21600	WASHER TO ATTACH CLUTCH OPERATING CYLINDER	2	50	1,6L	
	30	00915-21610	WASHER TO ATTACH CLUTCH OPERATING CYLINDER	2	50	1,6L	Y
	31	08915-24010	WASHER TO ATTACH CLUTCH OPERATING CYLINDER	2	50	2L	
	32	30650-14700	ASSY-TUBE,CLUTCH MASTER CYLINDER TO CLUTCH HOSE	1	1	SPL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	33	30650-25600	ASSY-TUBE, CLUTCH MASTER CYLINDER TO CLUTCH HOSE (FROM E/# R-40001)	1	1	SPL, SRL	
	34	30650-26000	TUBE-M/C TO CLUTCH HOSE (FROM E/# R-40001)	1	1	SPL, SRL	N
	35	30650-14600	ASSY-TUBE, CLUTCH MASTER CYLINDER TO CLUTCH HOSE	1	1	SP	
	36	30650-25500	ASSY-TUBE, CLUTCH MASTER CYLINDER TO CLUTCH HOSE (FROM E/# R-40001)	1	1	SP, SR	
	37	30650-25900	TUBE-M/C TO CLUTCH HOSE (FROM E/# R-40001)	1	1	SP, SR	N
	38	46212-30000	ASSY-HOSE, CLUTCH	1	2	ALL	
	39	46237-30000	GASKET-CLUTCH HOSE TO OPERATING CYLINDER	1	10	ALL	
	40	46237-F0800	GASKET-CLUTCH HOSE TO OPERATING CYLINDER	1		ALL	Y
	41	00916-11610	WASHER-LOCK, INTERNAL T OOTH	1	50	ALL	
	42	00911-34610	NUT	1	50	ALL	
	43	30620-08025	KIT-A CLUTCH OPERATING REPAIR	1	1	ALL	
	44	30620-15826	KIT-B CLUTCH OPERATING REPAIR	1	1	ALL	
	45	30620-25525	KIT-A REPAIR CLUTCH OPERATING (NABCO) (FROM SEE FIG)	1	1	ALL	
	46	21026 30620-25526	KIT-B REPAIR CLUTCH OPERATING (NABCO) (FROM SEE FIG)	1	1	ALL	
	47	30620-25527	KIT-A REPAIR CLUTCH OPERATING (TOKICO) (FROM SEE FIG)	1	1	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	48	30620-25528	KIT-B REPAIR CLUTCH OP ERATING (TOKICO)(FROM SEE FIG)	1	1	ALL	

**NOTE**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---




BRAKE PIPING (SINGLE CYLINDER)

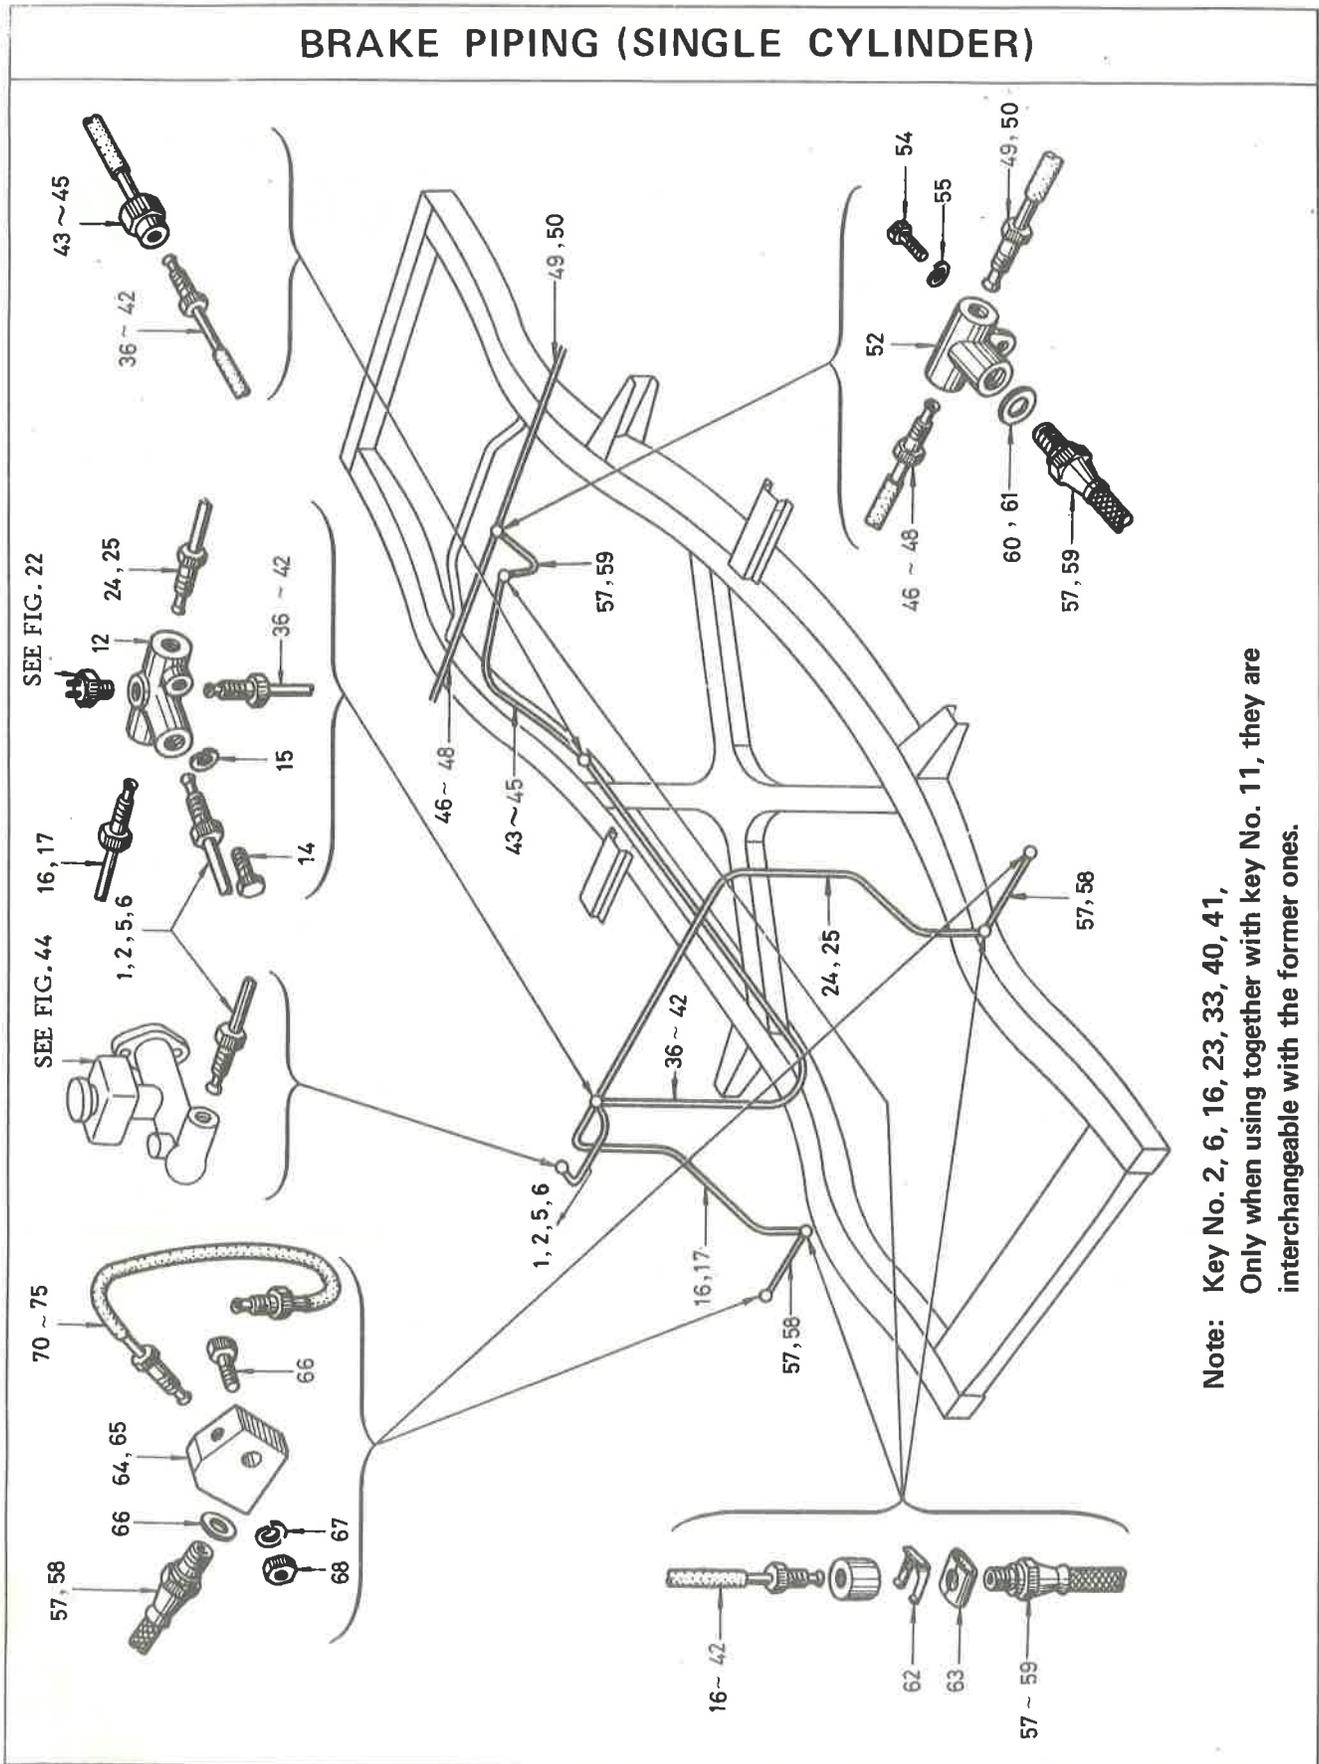

**Note:** Key No. 2, 6, 16, 23, 33, 40, 41,  
 Only when using together with key No. 11, they are  
 interchangeable with the former ones.

BRAKE PIPING (TANDEM CYLINDER)

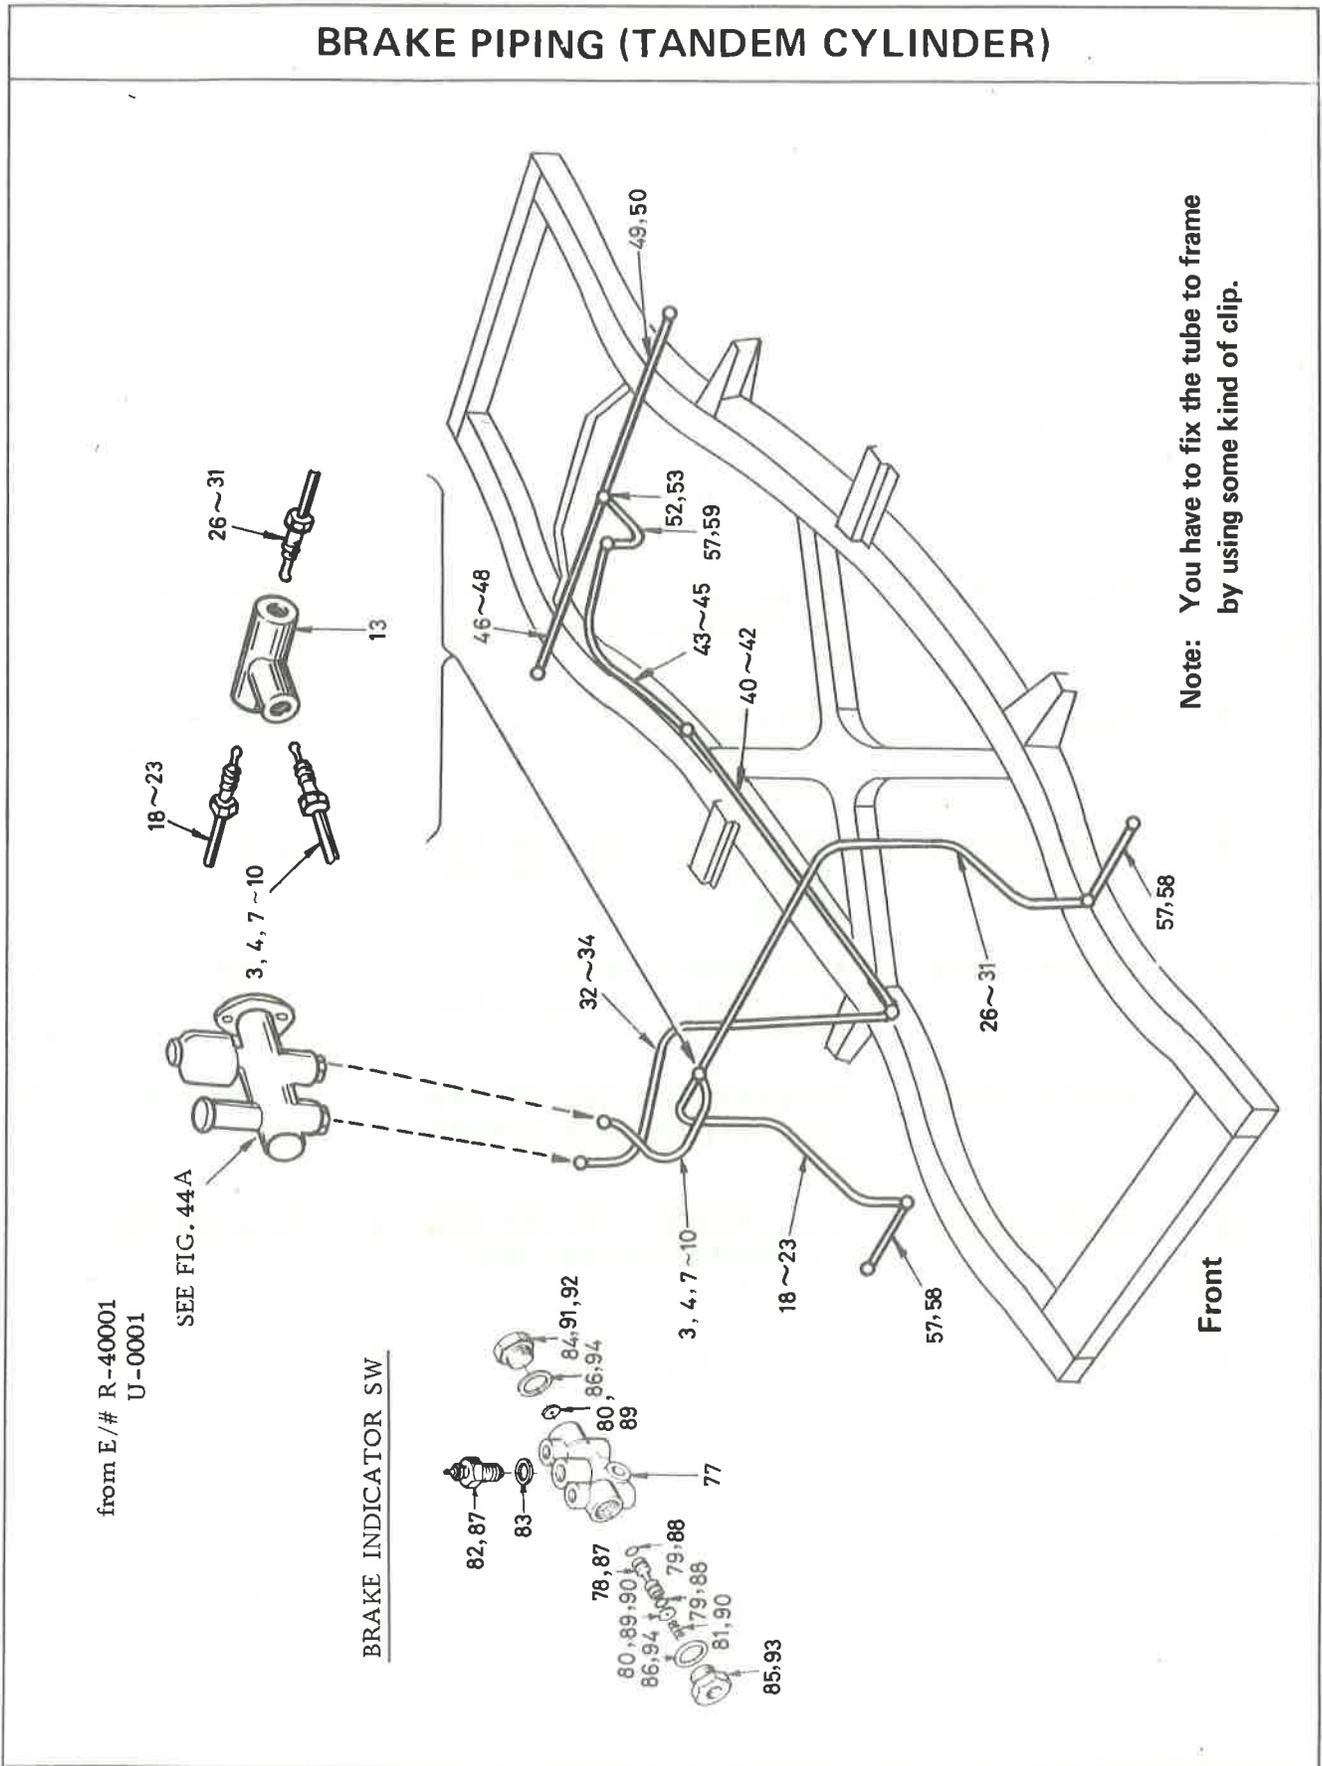

Note: You have to fix the tube to frame by using some kind of clip.

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>BRAKE PIPING</b>							
	1	46223-14600	ASSY-TUBE, BRAKE MASTER CYLINDER TO 5-WAY CONNECTOR	1	1	SP	
	2	46223-14601	ASSY-TUBE, BRAKE MASTER CYLINDER TO 5-WAY CONNECTOR	1	5	SP	C
	3	46223-25500	TUBE-MASTER CYL TO 3-WAY CON(FROM E/# R-4000 1)	1	5	SP, SR	N
	4	46223-25901	TUBE-MASTER CYL TO 3-WAY CONNECTOR FR(FROM OCT-67)	1	5	R DRIVE	N
	5	46223-14700	ASSY-TUBE, BRAKE MASTER CYLINDER TO 5-WAY CONNECTOR	1	10	SPL	
	6	46223-14701	ASSY-TUBE, BRAKE MASTER CYLINDER TO 5-WAY CONNECTOR	1	1	SPL	C
	7	46223-25600	TUBE-MASTER CYL TO 3-WAY CON(FROM E/# R-4000 1)	1	1	SPL, SRL	N
	8	46223-26001	TUBE-MASTER CYL TO 3-WAY CONNECTOR FR(FROM OCT-67)	1	1	L DRIVE	N
	9	46223-A3300	TUBE-MASTER CYL TO 3-WAY CONNECTOR FR(FROM JULY-69)	1	5	L DRIVE	N
	10	46223-A7800	TUBE-MASTER CYL TO 3-WAY CONNECTOR FR(FROM JULY-69)	1		L DRIVE	N
	11	46234-04100	CONNECTOR-5-WAY, BRAKE TUBE	1	5	1, 6L	
	12	46234-10600	CONNECTOR-5-WAY, BRAKE TUBE (TO E/# R-40000)	1	1	1, 6L	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	13	46215-30500	CONNECTOR-3-WAY, BRAKE TUBE (FROM E/# R-40001)	1	5	ALL	N
	14	00114-43010	BOLT TO ATTACH 5-WAY CONNECTOR	1	25	ALL	
	15	00915-11410	WASHER-LOCK TO ATTACH 5-WAY CONNECTOR	1	50	ALL	
	16	46240-14600	ASSY-TUBE, 5-WAY CONNECTOR TO FRONT BRAKE HOSE, R, H.	1	5	1,6L	
	17	46240-14601	ASSY-TUBE, 5-WAY CONNECTOR TO FRONT BRAKE HOSE, R, H.	1	5	1,6L	C
	18	46240-25500	TUBE 3-WAY CON TO FR BRAKE HOSE RH (FROM E/# R-40001)	1	5	ALL	N
	19	46240-25901	TUBE-CONNECTOR TO FRONT BRAKE RH (FROM OCT-67)	1	1	R DRIVE	N
	20	46240-A3200	TUBE-CONNECTOR TO FRONT BRAKE RH (FROM JULY-69)	1	5	R DRIVE	N
	21	46240-26000	TUBE-CONNECTOR TO FRONT BRAKE RH (FROM OCT-67)	1	1	L DRIVE	N
	22	46240-A3300	TUBE-CONNECTOR TO FRONT BRAKE RH (FROM JULY-69)	1	5	L DRIVE	N
	23	46240-A7800	TUBE-CONNECTOR TO FRONT BRAKE RH (FROM JULY-69)	1		L DRIVE	N
	24	46242-14700	ASSY-TUBE, 5-WAY CONNECTOR TO FRONT BRAKE HOSE, L, H.	1	1	1,6L	
	25	46242-14701	ASSY-TUBE, 5-WAY CONNECTOR TO FRONT BRAKE HOSE, L, H.	1	1	1,6L	C

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	26	46242-25500	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM E/# R-40001)	1	1	ALL	N
	27	46242-25901	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM OCT-67)	1	1	R DRIVE	N
	28	46242-A3200	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM JULY-69)	1	5	R DRIVE	
	29	46242-26000	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM OCT-67)	1	1	L DRIVE	N
	30	46242-A3300	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM JULY-69)	1	5	L DRIVE	N
	31	46242-A7800	TUBE-CONNECTOR TO FRONT BRAKE LH (FROM JULY-69)	1		L DRIVE	N
	32	46225-25901	TUBE-MASTER CYL TO 3-WAY CONNECTOR RR(FROM OCT-67)	1	1	R DRIVE	
	33	46225-26001	TUBE-MASTER CYL TO 3-WAY CONNECTOR RR(FROM OCT-67)	1	1	L DRIVE	
	34	46224-A3300	TUBE-MASTER CYL TO 3-WAY CONNECTOR RR(FROM JULY-69)	1	5	L DRIVE	N
	35	46224-A7800	TUBE-MASTER CYL TO 3-WAY CONNECTOR RR(FROM JULY-69)	1		L DRIVE	N
	36	46229-12900	ASSY-TUBE, 5-WAY CONNECTOR TO CENTER CONNECTION	1	1	1,6L	
	37	46229-14600	ASSY-TUBE, 5-WAY CONNECTOR TO CENTER CONNECTION	1	1	1,6L	C
	38	46229-25500	TUBE TO CENTER (FROM E/# R-40001)	1	2	R DRIVE	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	39	46229-25900	TUBE TO CENTER (FROM OCT-67)	1	1	R DRIVE	N
	40	46229-25601	TUBE-CENTER CON FR(FROM E/# R-40001 TO SEP-67)	1	1	SPL SRL	N
	41	46229-26000	TUBE-CENTER CONNECTOR FRONT(FROM OCT-67)	1	5	L DRIVE	N
	42	46229-A3300	TUBE CENTER CONNECTOR FRONT (FROM JULY-69)	1	5	L DRIVE	N
	43	46228-14600	ASSY-TUBE,CENTER CONNECTION TO REAR BRAKE HOSE	1	5	1,6L	
	44	46228-14601	ASSY-TUBE,CENTER CONNECTION TO REAR BRAKE HOSE	1	5	ALL	C
	45	46227-25900	ASSY-TUBE,CENTER CONNECTION TO REAR BRAKE HOSE	1		ALL	C
	46	46290-14601	ASSY-TUBE,3-WAY CONNECTOR TO REAR WHEEL CYLINDER,R,H.	1	1	1,6L	
	47	46290-14602	ASSY-TUBE,3-WAY CONNECTOR TO REAR WHEEL CYLINDER,R,H.	1		1,6L	Y
	48	46290-25500	ASSY-TUBE,3-WAY CONNECTOR TO REAR WHEEL CYLINDER,R,H.(FROM E/# R-40001)	1	1	ALL	C
	49	46310-14601	ASSY-TUBE,3-WAY CONNECTOR TO REAR WHEEL CYLINDER,L,H.	1	2	1,6L	
	50	46310-14602	ASSY-TUBE,3-WAY CONNECTOR TO REAR WHEEL CYLINDER,L,H.(FROM E/# R-40001)	1		ALL	Y
	51	46357-35000	CONNECTOR-BRAKE TUBE 3-WAY	1		1,6L	

FIG. 47


NISSAN MOTOR CO., LTD.

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	52	46357-35001	CONNECTOR-BRAKE TUBE 3 -WAY	1	2	ALL	Y
	53	46229-A7800	TUBE CENTER CONNECTOR FRONT (FROM JULY-69)	1		L DRIVE	N
	54	00111-51610	BOLT	1	50	ALL	
	55	00915-11510	WASHER-LOCK	1	50	ALL	
*	56	46201-10600	ASSY-HOSE, HYDRAULIC BR AKE	3	2	ALL	
	57	46201-25900	ASSY-HOSE, HYDRAULIC BRAKE FRONT & REAR	3	2	ALL	Y
	58	46201-A3200	ASSY-HOSE, HYDRAULIC BRAKE FRONT	2	2	ALL	Y
	59	46201-A3201	ASSY-HOSE, HYDRAULIC BRAKE REAR	1	2	ALL	
*	60	46237-30000	GASKET-3-WAY CONNECTIO N & BRAKE HOSE TO CYLI NDER	3	10	ALL	
	61	46237-F0800	GASKET-3-WAY CONNECTIO N & BRAKE HOSE TO CYLI NDER	3		ALL	Y
	62	46206-61000	SPRING-LOCK, BRAKE HOSE	3	5	ALL	
	63	46205-61000	PLATE-LOCK, BRAKE HOSE	3	10	ALL	
	64	41130-61001	CONNECTOR-FRONT BRAKE HOSE TO TUBE	2	1	ALL	
	65	41130-E0101	CONNECTO-FRONT BRAKE HOSE TO TUBE (FROM JUL Y-69)	2	1	ALL	N
	66	00111-52510	BOLT TO FIX CONNECTOR	2	50	ALL	
	67	00915-21510	WASHER-LOCK TO FIX CON NECTOR	2	50	ALL	
	68	00911-11510	NUT TO FIX CONNECTOR	2	50	ALL	
*	69	41029-14600	ASSY-TUBE, FRONT BRAKE, R.H.	1		ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	70	41140-14600	ASSY-TUBE,FRONT BRAKE, RH	1	1	ALL	Y
	71	41140-A3200	ASSY-TUBE,FRONT BRAKE, RH (FROM JULY-69)	1	1	ALL	N
	72	41140-A7400	ASSY-TUBE,FRONT BRAKE, RH	1		ALL	Y
*	73	41039-14600	ASSY-TUBE,FRONT BRAKE, L.H.	1		ALL	
	74	41141-14600	ASSY-TUBE,FRONT BRAKE LH	1	5	ALL	Y
	75	41141-A3200	ASSY-TUBE,FRONT BRAKE LH (FROM JULY-69)	1	1	ALL	N
	76	41141-A7400	ASSY-TUBE,FRONT BRAKE LH	1		ALL	Y
	77	46100-26001	SWITCH-BRAKE INDICATOR (TOKICO)(FROM OCT-67)	1	1	ALL	
	78	46136-26110	PISTON (TOKICO)	1	10	ALL	
	79	46137-26110	RING-O (TOKICO)	2	10	ALL	
	80	46138-26110	PLATE (TOKICO)	2	10	ALL	
	81	46139-26110	SPRING (TOKICO)	2	10	ALL	
	82	46140-26110	TERMINAL (TOKICO)	1	5	ALL	
	83	41131-85060	PACKING(TOKICO)	1	10	ALL	
	84	46141-26110	PLUG-CYLINDER (TOKICO)	1	10	ALL	
	85	46142-26111	PLUG-CYLINDER (TOKICO)	1	10	ALL	
	86	46143-26110	PACKING (TOKICO)	2	10	ALL	
	87	46136-26100	PISTON(NABCO)(FROM OCT -67)	1	10	ALL	
	88	46137-26100	RING-O(NABCO)(FROM OCT -67)	2	10	ALL	
	89	46138-26100	PLATE(NABCO)(FROM OCT -67)	2	10	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	90	46139-26100	SPRING(NABCO)(FROM OCT-67)	2	10	ALL	
	91	46146-26000	PLUG-CYLINDER"A"(NABCO)(FROM OCT-67)	1	10	ALL	
	92	46146-26001	PLUG-CYLINDER"A"(NABCO)	1	10	ALL	N
	93	46142-26100	PLUG-CYLINDER"B"(NABCO)(FROM OCT-67)	1	10	ALL	
	94	46143-26100	PACKING(NABCO)(FROM OCT-67)	2	10	ALL	
	95	46140-26100	TERMINAL(NABCO)(FROM OCT-67)	1	1	ALL	
	96	46227-26000	CLIP-BRAKE TUBE (FROM OCT-67)	1	10	ALL	
	97	46226-A3300	CLIP-BRAKE TUBE (FROM JULY-69)	1		L DRIVE	
	98	46228-26000	RUBBER-CLIP (FROM OCT-67)	1	10	ALL	
	99	46228-A3300	RUBBER-CLIP	1	10	ALL	Y
	100	00310-80810	SCREW (FROM OCT-67)	1	50	ALL	
	101	00915-10810	WASHER (FROM OCT-67)	1	50	ALL	

**B O D Y**

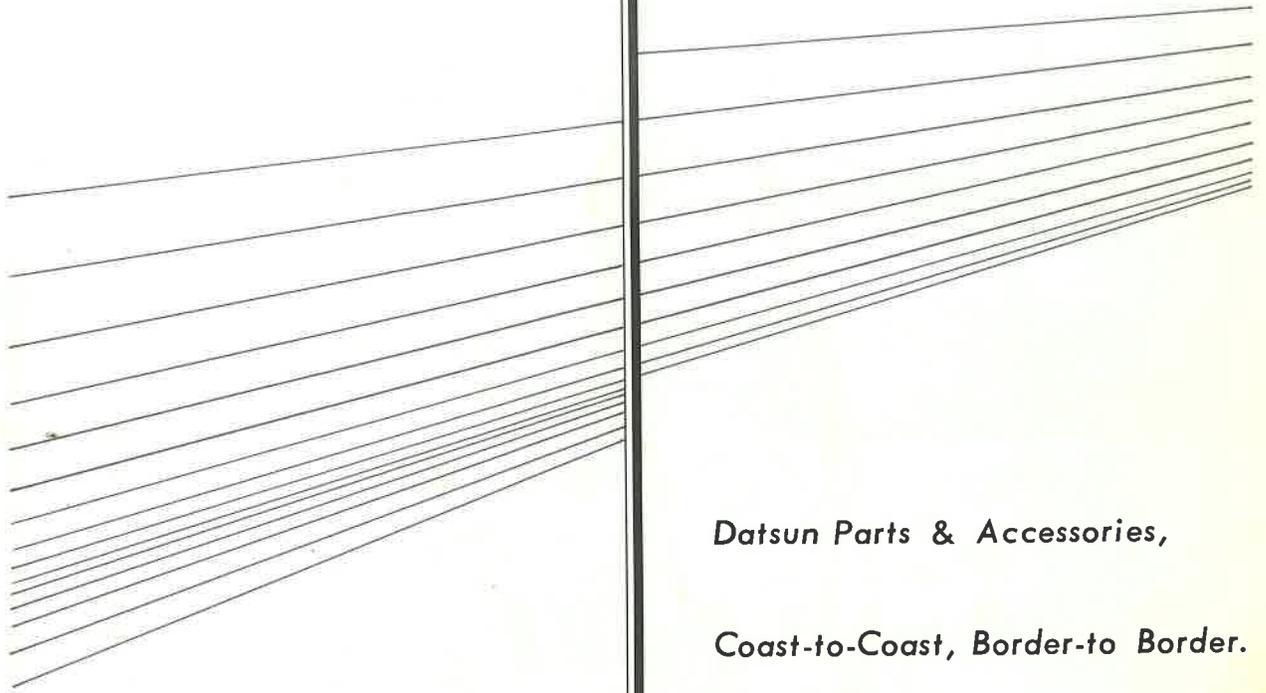


*Datsun Parts & Accessories,*

*Coast-to-Coast, Border-to Border.*




INSTRUMENT & CONSOLE FITTING (TO SEP.-'67)

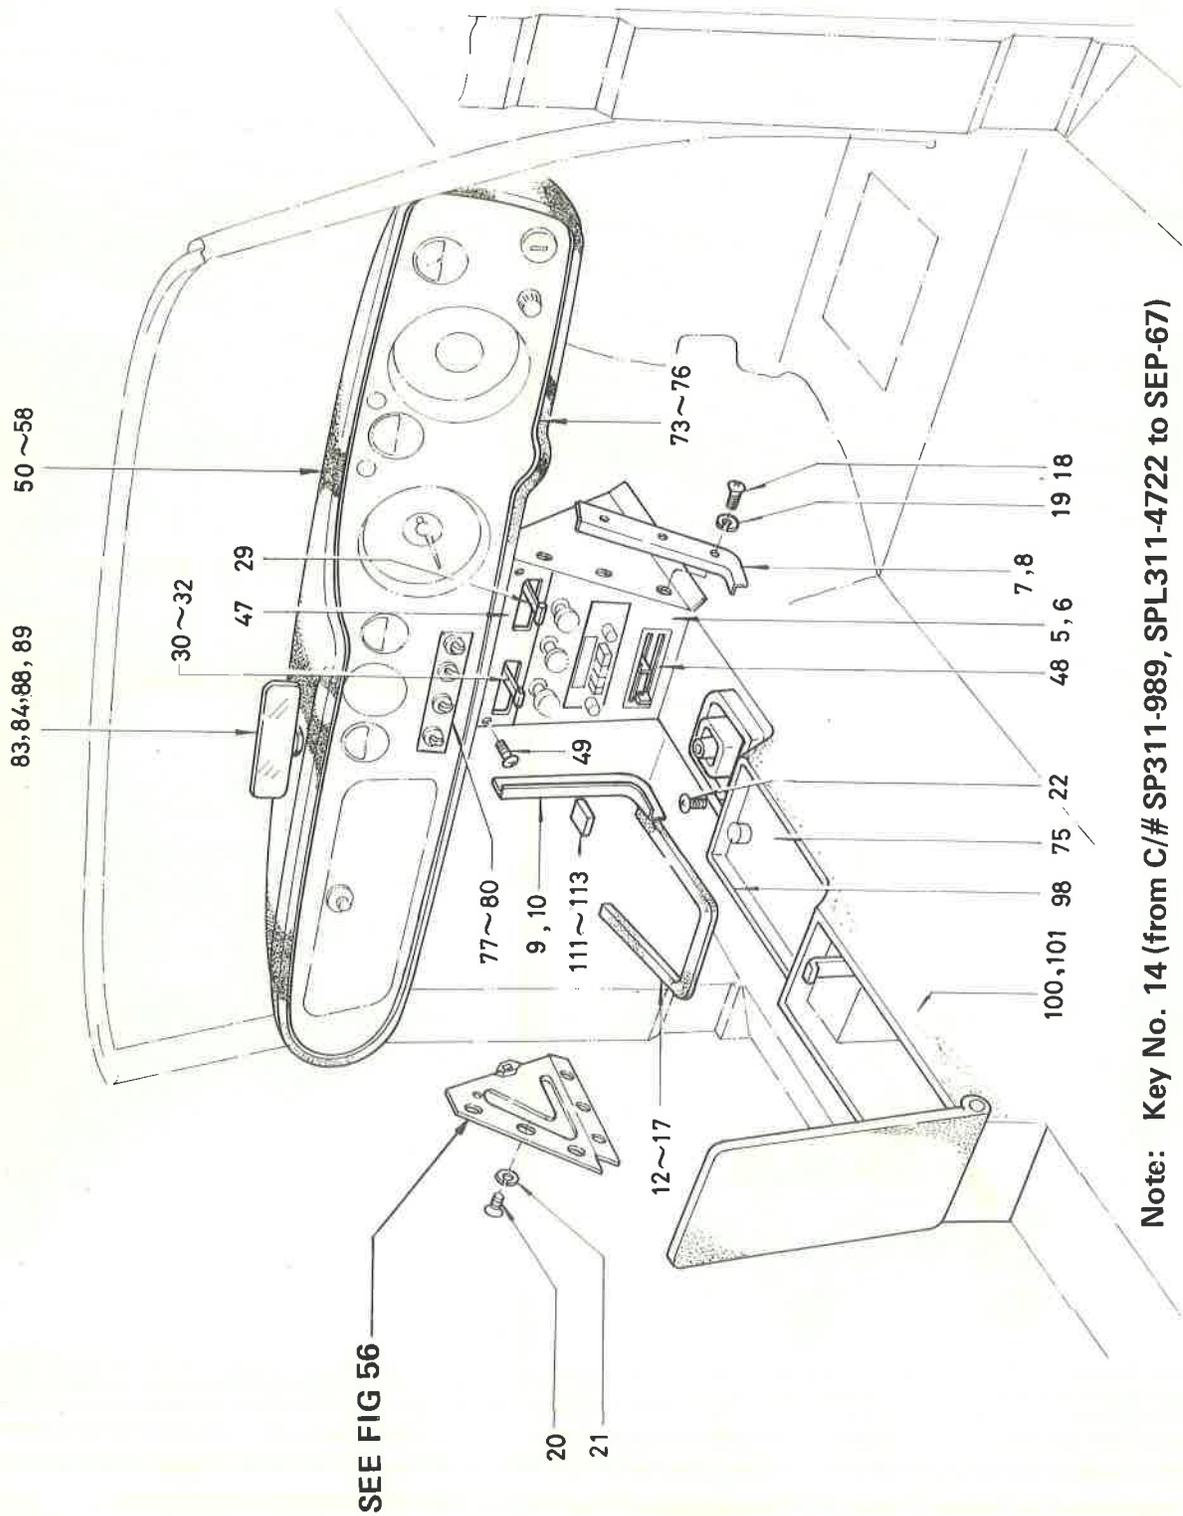

SEE FIG 56

INSTRUMENT & CONSOLE FITTING (FROM OCT. '67)

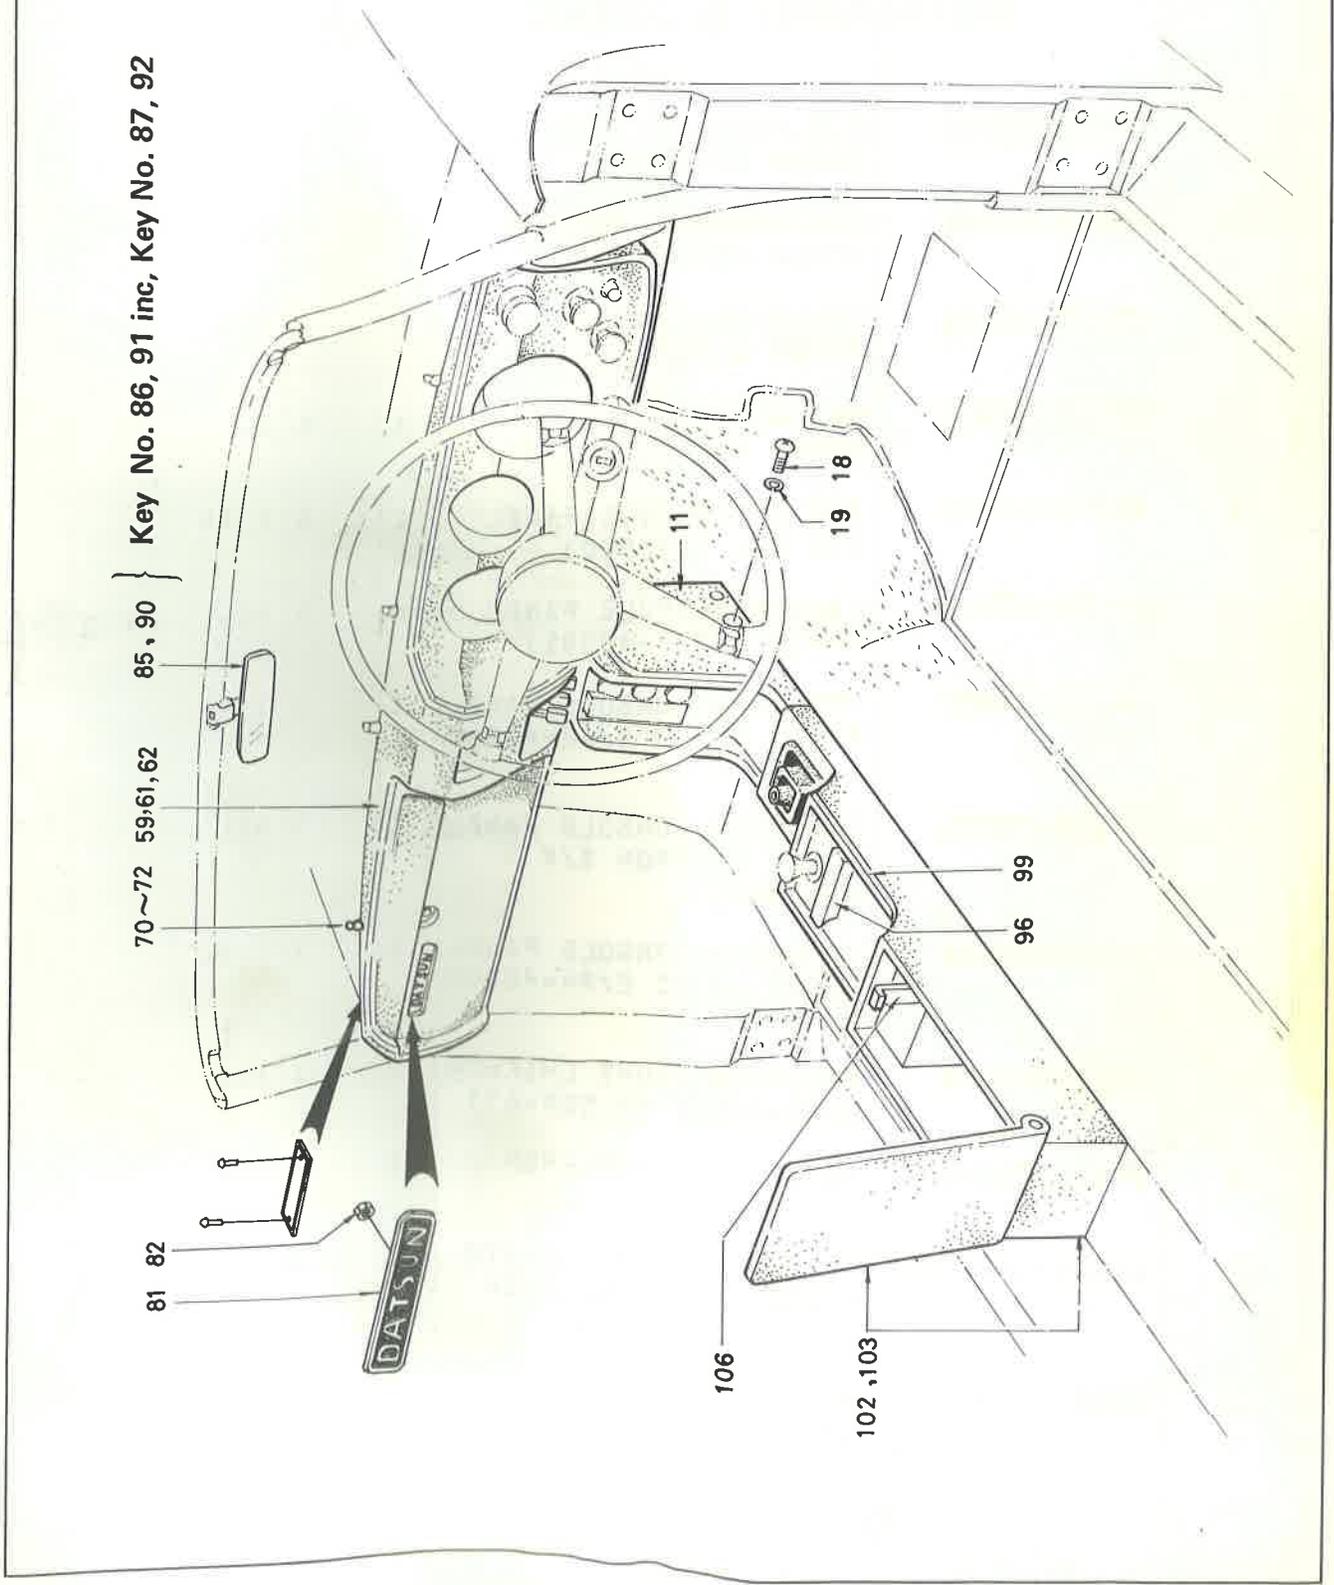

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
<b>INSTRUMENT &amp; CONSOLE FITTING</b>							
	1	68710-25900	FINISHER-DEF NOZZLE RH (FROM OCT-67)	1	1	ALL	
	2	68711-25900	FINISHER-DEF NOZZLE LH (FROM OCT-67)	1	1	ALL	
	3	68137-14600	MOULDING-CONSOLE REAR (FROM C/#SPL311-12747)	1	1	1,6L	
	4	68137-25500	MOULDING-CONSOLE REAR (FROM C/# SRL311-34)	1	1	2L	
	5	68131-14600	FINISH-CONSOLE PANEL (TO E/# R-40000)	1	1	1,6L	
	6	68131-25500	FINISH-CONSOLE PANEL (FROM E/# R-40001)	1	1	ALL	N
	7	68132-14600	MOULDING-CONSOLE PANEL FRONT RH(TO E/#R-40000 )	1	1	1,6L	
	8	68132-25500	MOULDING-CONSOLE PANEL FRONT RH(FROM E/# R-40001)	1	1	ALL	N
	9	68133-14600	MOULDING-CONSOLE PANEL FRONT LH(TO E/#R-40000 )	1	1	1,6L	
	10	68133-25500	MOULDING FRONT LH(FROM E/#R-40001 TO SEP-67)	1	1	ALL	N
	11	68132-25901	MOULDING FRONT(FROM OCT-67)	1	1	ALL	N
*	12	68134-14650	MOULDING REAR GRAY(TO C/#SP311-988 SPL311- 4721)	1	1	1,6L	
	13	68134-14600	MOULDING REAR GRAY(TO C/#SP311-988 SPL311-47 21	1	1	1,6L	Y

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
*	14	68134-14610	MOULDING REAR BLACK (FROM C/# SEE FIG 56)	1	5	1.6L	N
	15	68133-14602	MOULDING REAR BLACK (FROM OCT-67)	1	1	1.6L	N
*	16	68134-25500	MOULDING-CONSOLE PANEL REAR BLACK(TO SEP-67)	1	1	2L	
	17	68133-25901	MOULDING-CONSOLE PANEL REAR BLACK (FROM OCT- 67)	1	1	1.6L	N
	18	00510-61010	SCREW TO FIX FRONT MOULDING RH	3	50	ALL	
	19	00915-10610	WASHER-LOCK TO FIX FRO NT MOULDING RH	3	50	ALL	
	20	00340-61210	SCREW TO FIX MOULDING LH	3	50	ALL	
	21	00915-10610	WASHER-LOCK TO FIX MOULDING LH	3	50	ALL	
	22	00320-61210	SCREW TO FIX REAR MOUL DING	4	50	ALL	
	23	68702-12900	TRIMMING-CONSOLE SIDE RH(BLACK)	1	1	ALL	
	24	68702-12901	TRIMMING-CONSOLE SIDE RH(RED)	1	1	ALL	
	25	68701-12900	TRIMMING-CONSOLE SIDE LH(BLACK)	1	1	ALL	
	26	68701-12901	TRIMMING-CONSOLE SIDE LH(RED)	1	1	ALL	
	27	68152-12900	LEVER-VENT CONTROL RH (TO C/#SP311-988, SPL31 1-4721)	1	1	1.6L	
	28	68152-14600	LEVER-VENT RH (FROM C/ #SP311-989, SPL311-4722 TO SEP67	1	1	ALL	N
	29	00516-25901	LEVER-VENT RH (FROM OCT-67)	1	5	ALL	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	30	68151-12900	LEVER-VENT CONTROL LH (TO C/#SP311-988,SPL311-4721)	1	5	1.6L	
	31	68153-14600	LEVER-VENT LH (FROM C/ #SP311-989,SPL311-4722 TO SEP67)	1	1	ALL	N
	32	66517-25901	LEVER-VENT LH (FROM OCT-67)	1	5	ALL	N
	33	68147-12900	SPRING-CONTROL	2	10	ALL	
	34	00114-42210	BOLT TO FIX CONTROL LEVER	2	50	ALL	
	35	00915-41410	WASHER-PLAIN TO FIX CONTROL LEVER	2	50	ALL	
	36	00915-11410	WASHER-LOCK TO FIX CONTROL LEVER	2	50	ALL	
	37	00911-14410	NUT TO FIX CONTROL LEVER	2	50	ALL	
	38	66570-12900	ASSY-CABLE,VENTILATOR CONTROL (TO SEP-67)	2	2	ALL	
	39	66570-25900	ASSY-CABLE,VENTILATOR (FROM OCT-67)	2	5	SPL,SRL	Y
	40	66570-25900	ASSY-CABLE,VENTILATOR (FROM OCT-67)	1	5	SP,SR	Y
	41	66570-25901	ASSY-CABLE,VENTILATOR (FROM OCT-67)	1	5	SP,SR	Y
	42	00314-01210	SCREW TO FIX WIRE CONTROL	2	50	ALL	
	43	00911-14010	NUT TO FIX WIRE CONTROL	2	50	ALL	
	44	00915-11010	WASHER-LOCK TO FIX WIRE CONTROL	2	50	ALL	
	45	68148-12900	PLATE-CABLE CLAMP	2	10	ALL	
	46	00310-80810	SCREW	2	50	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	47	68135-12900	ESCUTCHEON-VENTILATOR CONTROL	1	1	ALL	
	48	68136-12900	ESCUTCHEON-HEATER CONTROL	1	1	ALL	
	49	00510-81010	SCREW	2	50	ALL	
	50	68300-12900	PAD-INSTRUMENT(BLACK) (TO E/#R-40000)	1	1	SP	
*	51	68300-25500	PAD-INST(BLACK)(FROM E/#R-40001 TO SEP-67)	1	1	SP,SR	N
	52	F8300-25501	ASSY-PAD,INST(BLACK) (TO SEP-67)	1	1	SP,SR	Y
*	53	68101-25900	PAD-INSTRUMENT(BLACK) (FROM OCT-67)	1	1	SP SR	N
*	54	68100-25950	PAD-INSTRUMENT(BLACK) (FROM OCT-67)	1	1	SP SR	Y
*	55	68300-13000	PAD-INSTRUMENT(BLACK) (TO E/# R-40000)	1		SPL	
*	56	68300-13001	PAD-INSTRUMENT(RED) (TO E/# R-40000)	1		SPL	
*	57	68300-25600	ASSY-PAD,INST(BLACK) (FROM E/#R-40001 TO SEP-67)	1	1	SPL,SRL	N
	58	F8300-25601	ASSY-PAD,INSTRUMENT (BLACK)(TO SEP-67)	1	1	SPL,SRL	Y
*	59	68101-26000	PAD-INSTRUMENT (BLACK) (FROM OCT-67 TO SEP-68 )	1	1	SPL SPLU SRL SRLU	N
*	60	68101-26000	PAD INSTRUMENT (BLACK) (FROM OCT-68) (NOT FO R SALE)	1	1	SPL,SRL	Y
*	61	68100-26050	PAD INST WITH PANEL (BLACK)	1	1	SPL,SRL	Y
*	62	68101-A3301	PAD INSTRUMENT(BLACK) (FROM OCT-68)(NOT FOR SALE)	1		SPLU,SRLU	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	63	00334-01220	SCREW TO FIX INSTRUMENT PAD	7		ALL	
	64	00334-01210	SCREW TO FIX INSTRUMENT PAD	7	50	ALL	Y
	65	00915-81020	WASHER-FINISH TO FIX INSTRUMENT PAD	7	50	ALL	
	66	00314-01410	SCREW TO FIX INSTRUMENT PAD	7	50	ALL	
	67	00915-41010	WASHER-PLAIN TO FIX INSTRUMENT PAD	7	50	ALL	
	68	00314-01410	SCREW TO FIX INSTRUMENT PAD	6	50	ALL	
	69	00915-41010	WASHER-PLAIN TO FIX INSTRUMENT PAD	6	50	ALL	
	70	97754-12900	HOOK-MALE*8"	4	10	ALL	
	71	97757-25900	HOOK-MALE(FROM OCT-67)	4	1	SP SR	
	72	97758-25900	HOOK-MALE(FROM OCT-67)	4	10	SPL SPLU SRL SRLU	
	73	68860-12900	MOULDING-INSTRUMENT (TO E/# R-40000)	1	1	SP	
	74	68860-25500	MOULDING-INSTRUMENT (FROM E/# R-40001)	1	1	SP, SR	N
	75	68860-13000	MOULDING-INSTRUMENT (TO E/# R-40000)	1	1	SPL	
	76	68860-25600	MOULDING-INSTRUMENT (FROM E/# R-40001)	1	1	SPL, SRL	N
	77	68149-14600	FINISHER-SWITCH(TO E/# R-40000)	1	20	SP	
	78	68149-25500	FINISHER-SWITCH(FROM E/# R-40001)	1	2	SP, SR	N
	79	68149-14700	FINISHER-SWITCH(TO E/# R-40000)	1	20	SPL	
	80	68149-25600	FINISHER-SWITCH(FROM E/# R-40001)	1	2	SPL, SRL	N


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	81	68850-25900	EMBLEM-INSTRUMENT(FROM OCT-67)	1	1	ALL	
	82	68603-25900	NUT-PUSH ON(FROM OCT-67)	2	10	ALL	
	83	96321-14600	ASSY-BACKMIRROR INSIDE (TO E/# R-40000)	1	1	1.6L	
	84	96321-25500	ASSY-BACKMIRROR INSIDE (FROM E/# R-40001 TO SEP-67)	1	1	ALL	N
	85	96321-25900	ASSY-BACKMIRROR INSIDE (FROM OCT-67)	1	1	ALL	N
	86	96322-25900	SET-BACKMIRROR INSIDE (FROM OCT-67)	1		ALL	
	87	96323-25900	BASE-BACKMIRROR INSIDE (FROM OCT-67)	1	1	ALL	
	88	96321-14700	ASSY-BACKMIRROR INSIDE (TO E/# R-40000)	1	1	1.6L	
	89	96321-25501	ASSY-BACKMIRROR INSIDE (FROM E/# R-40001 TO SEP-67)	1	1	OP,ALL	N
	90	96321-25901	ASSY-BACKMIRROR INSIDE (FROM OCT-67)	1	1	OP ALL	N
	91	96322-25901	SET-BACKMIRROR INSIDE (FROM OCT-67)	1	1	OP,ALL	
	92	96323-25900	BASE-BACKMIRROR INSIDE (FROM OCT-67)	1	1	OP,ALL	
	93	00524-41620	SCREW-MAIN	1	10	SP	
	94	00324-52010	SCREW-MAIN	1	50	SPL	
	95	96500-14601	ASSY-ASH TRAY(TO SEP-67)	1	1	ALL	
	96	96500-25900	ASSY-ASH TRAY(FROM OCT-67)	1	1	ALL	N
	97	74347-25900	PACKING-RUBBER FLOOR ASH TRAY (FROM OCT-67)	1	5	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	98	74813-14601	MOULDING-ASH TRAY(TO SEP-67)	1	1	ALL	
	99	74813-25901	MOULDING-ASH TRAY(FROM OCT-67)	1	1	ALL	N
	100	74801-14602	ASSY-BOX GLOVE FLOOR (RED)(TO SEP-67)	1	1	ALL	
	101	74801-14603	ASSY-BOX GLOVE FLOOR (BLACK)(TO SEP-67)	1	1	ALL	
•	102	74801-25900	ASSY-BOX GLOVE FLOOR (BLACK)(FROM OCT-67)	1		ALL	N
	103	74801-25950	ASSY-BOX GLOVE FLOOR W/LOCK(BLACK)	1	1	ALL	Y
	104	74815-14600	ASSY-LOCK CYLINDER (TO E/# R-40000)	1	1	1.6L	
	105	74815-25500	ASSY-LOCK CYLINDER (FROM E/#R-40001 TO SEP-67)	1	1	ALL	Y
	106	74815-25900	ASSY-LOCK CYLINDER (FROM OCT-67)	1	1	ALL	N
	107	00314-41210	SCREW TO FIX CYLINDER LOCK	2	50	ALL	
	108	00915-11410	WASHER-LOCK TO FIX CYLINDER LOCK	2	50	ALL	
	109	00334-01420	SCREW	4	50	ALL	
	110	00916-41010	WASHER-LOCK	4	50	ALL	
	111	67145-14700	PAD-FOOT REST DRIVER (TO E/# R-40000)	1	5	SPL	
	112	67145-25500	PAD-FOOT REST, DRIVER (FROM E/# R-40001)	1	5	ALL	N
	113	74340-25550	ASSY-FOOT REST, ASSIST (FROM E/# R-40001)	1	1	OP, ALL	
	114	74342-25500	PAD-ASSIST(FROM E/# R-40001)	1	1	OP ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	115	68158-25900	GROMMET-SW HOLE(FROM OCT-67)	1	10	ALL	



REAR OUTSIDE

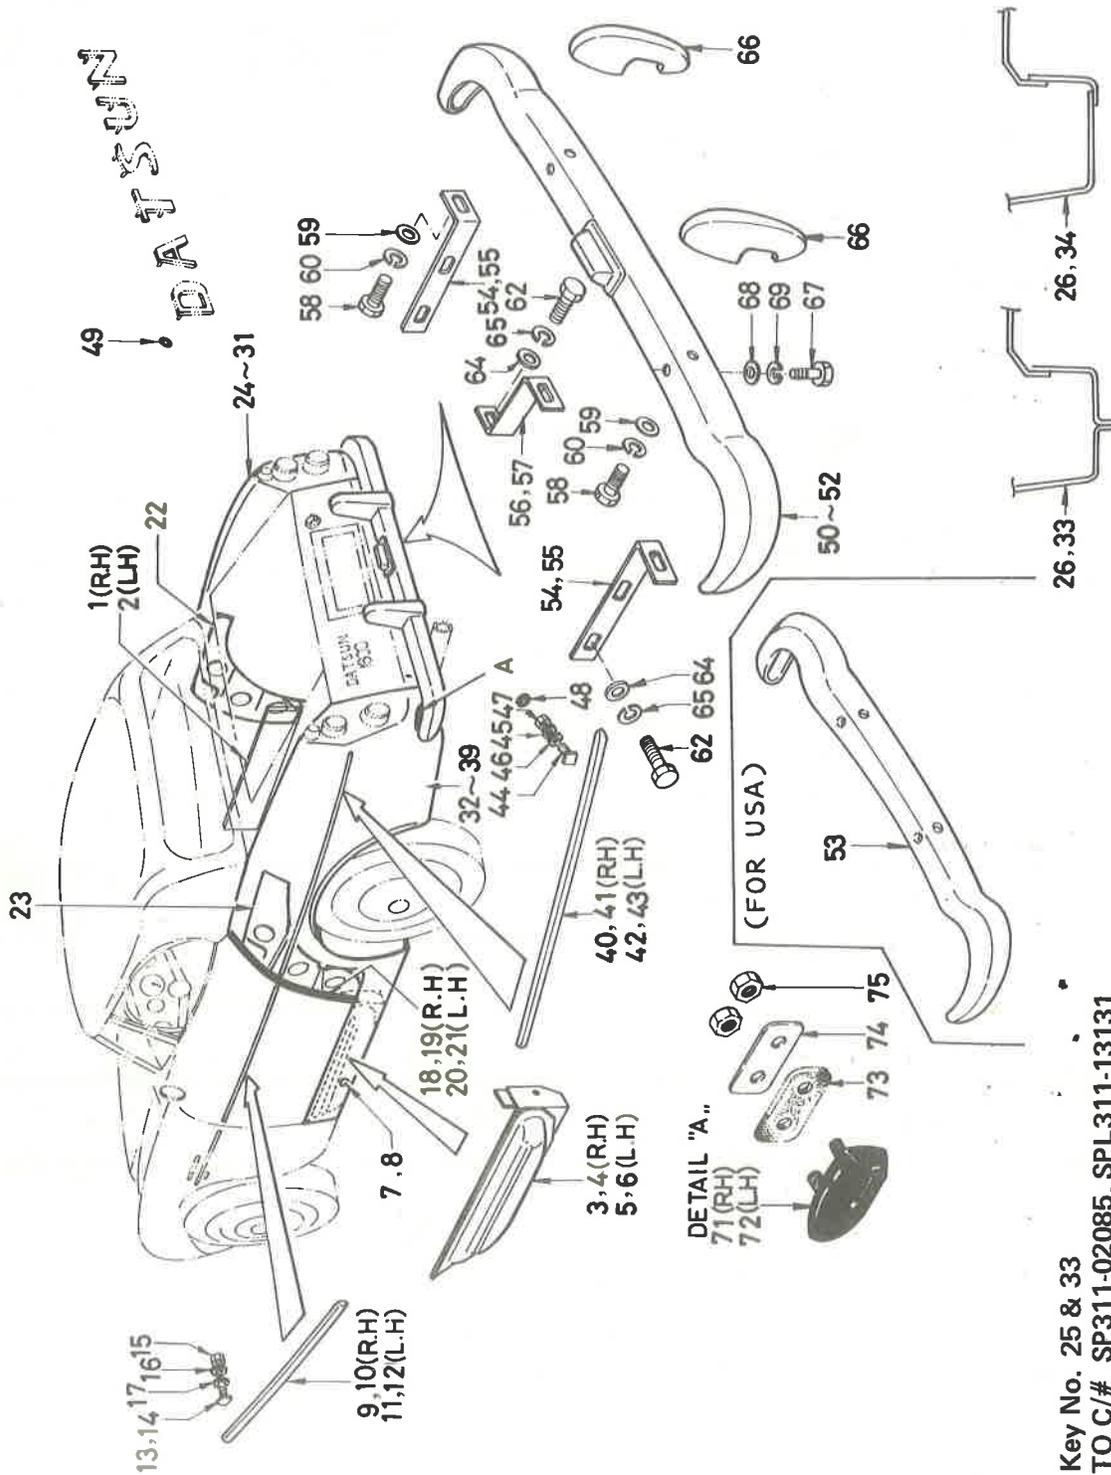

Note: Key No. 25 & 33  
 TO C/# SP311-02085, SPL311-13131  
 SR(L)311-00201  
 Key No. 26 & 32  
 FROM C/# SP311-02086, SPL311-13132, SR(L)311-00202 11-00202

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>REAR OUTSIDE</b>				
	1	76420-25900	ASSY-SILL INNER RH (FROM OCT-67)	1	1	ALL	
	2	76421-25900	ASSY-SILL INNER LH (FROM OCT-67)	1	1	ALL	
	3	76400-12930	ASSY-SIDE SILL OUTER RH(TO E/# R-40000)	1	1	1,6L	
	4	76400-25500	ASSY-SIDE SILL OUTER RH(FROM E/# R-40001)	1	1	ALL	N
*	5	76401-12930	ASSY-SIDE SILL OUTER LH(TO E/# R-40000)	1	1	1,6L	
	6	76401-25500	ASSY-SIDE SILL OUTER LH(FROM E/# R-40001)	1	1	ALL	Y
*	7	76419-10400	COVER-JACK HOLE	2		ALL	
	8	76419-04100	COVER-JACK HOLE	2	5	ALL	Y
	9	80801-14600	MOULDING-DOOR OUTSIDE RH	1	1	1,6L	
	10	80801-25500	MOULDING-DOOR OUTSIDE RH(FROM E/# R-40001)	1	1	ALL	N
	11	80802-14600	MOULDING-DOOR OUTSIDE LH	1	1	1,6L	
	12	80802-25500	MOULDING-DOOR OUTSIDE LH(FROM E/# R-40001)	1	1	ALL	N
*	13	63803-08000	RETAINER-OUTSIDE MOULD ING	10	10	ALL	
	14	63804-25500	RETAINER-OUTSIDE MOULD ING	10	1	ALL	Y
	15	00911-10810	NUT TO FIX OUTSIDE MOU LDING	10	50	ALL	
	16	00915-10810	WASHER-LOCK TO FIX OUT SIDE MOULDING	10	50	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	17	00915-40810	WASHER-PLAIN TO FIX OUTSIDE MOULDING	10	50	ALL	
	18	76600-25500	ASSY-PILLAR LOCK RH	1	1	ALL	
	19	76600-25900	ASSY-PILLAR LOCK RH (FROM OCT-67)	1	1	ALL	N
	20	76601-25500	ASSY-PILLAR LOCK LH	1	1	ALL	
	21	76601-25900	ASSY-PILLAR LOCK LH (FROM OCT-67)	1	1	ALL	N
	22	76650-A3200	PANEL-QUATER INNER RH	1		ALL	
	23	76651-A3200	PANEL-QUATER INNER LH	1		ALL	
	24	78100-14600	ASSY-FENDER, REAR RH (TO E/# R-40000)	1	1	1,6L	
	25	78100-25525	ASSY-FENDER, RR RH (FROM E/# R-40001 TO C/# SEE FIG 57A)	1	1	ALL	N
	26	78100-25550	ASSY-FENDER, RR RH (FROM C/# SEE FIG 57A TO SEP-67)	1	1	ALL	N
	27	78100-25950	ASSY-FENDER, REAR RH (FROM OCT-67 TO SEP-68)	1	1	ALL	N
	28	78100-25950	ASSY-FENDER, REAR RH (FROM OCT-68)	1	1	ALL EXC USA & CANADA	Y
	29	78100-26050	ASSY-FENDER RR RH FOR SIDE LAMP (FROM OCT-67 TO SEP-68)	1		USA	N
	30	78100-A3350	ASSY FENDER, RR RH FOR S/LAMP (FROM OCT-68 TO JUNE-69)	1	1	USA & CANADA	N
	31	78100-A7850	ASSY-FENDER, REAR RH FOR SIDE LAMP (FROM JULY-69)	1	1	USA & CANADA	N
	32	78101-14600	ASSY-FENDER, REAR LH (TO E/# R-40000)	1	1	1,6L	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIF	MODEL	ICA
	33	78101-25525	ASSY-FENDER,RR LH(FROM E/# R-40001 TO C/# SEE FIG 57A)	1	1	ALL	N
	34	78101-25550	ASSY-FENDER,RR LH(FROM C/# SEE FIG 57A TO SEP-67)	1	1	ALL	N
	35	78101-25950	ASSY-FENDER,REAR LH (FROM OCT-67 TO SEP-68)	1	1	ALL EXC USA	N
	36	78101-25950	ASSY-FENDER,REAR LH (FROM OCT-68)	1	1	ALL EXC US A & CANADA	Y
	37	78101-26050	FENDER,REAR LH FOR SIDE LAMP (FROM OCT-67 TO SEP-68)	1		USA	N
	38	78101-A3350	ASSY FENDER,REAR LH FOR SIDE LAMP (FROM OCT-68)	1	1	USA & CANA DA	N
	39	78101-A7850	ASSY FENDER,REAR LH FOR SIDE LAMP (FROM JULY-69)	1	1	USA & CANA DA	N
	40	78201-14600	MOULDING-REAR FENDER RH	1	1	1.6L	
	41	78201-25500	MOULDING-REAR FENDER RH(FROM E/# R-40001)	1	1	ALL	N
	42	78201-14600	MOULDING-REAR FENDER LH	1	1	1.6L	
	43	78202-25500	MOULDING-REAR FENDER LH(FROM E/# R-40001)	1	1	ALL	N
	44	63803-10400	RETAINER-MOULDING	14	10	ALL	
	45	00915-10810	WASHER-LOCK TO FIX MOULDING	14	50	ALL	
	46	00915-40810	WASHER-PLAIN TO FIX MOULDING	14	50	ALL	
	47	00911-10810	NUT TO FIX MOULDING	14	50	ALL	
	48	97331-04100	WASHER-RUBBER TO FIX MOULDING	14	50	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	49	97331-25900	WASHER-SPONGE, EMBLEM	17	10	ALL	Y
	50	85002-10401	ASSY-BUMPER, REAR (TO SEP-67)	1	1	ALL	
	51	85002-26000	ASSY-BUMPER, REAR (FROM OCT-67)	1	1	ALL	N
	52	85002-26000	ASSY BUMPER REAR (FROM OCT-68)	1	1	ALL EXC USA & CANA DA	Y
	53	85002-A3300	ASSY BUMPER REAR (FROM OCT-68)	1	1	USA & CANA DA	N
	54	85200-10400	STAY-REAR BUMPER, SIDE (TO SEP-67)	2	1	ALL	
	55	85200-12200	STAY-REAR BUMPER, SIDE (FROM OCT-67)	2	1	ALL	N
	56	85201-10400	STAY-REAR BUMPER, CENTE R (TO SEP-67)	1	1	ALL	
	57	85201-25900	STAY-REAR BUMPER CENTE R (FROM OCT-67 TO SEP- 68)	1	1	ALL	N
	58	00114-62010	BOLT TO FIX BUMPER TO STAY	3	50	ALL	
	59	00915-41610	WASHER-PLAIN TO FIX BUMPER TO STAY	3	50	ALL	
*	60	00915-11600	WASHER-LOCK TO FIX BUMPER TO STAY	3		ALL	
	61	00915-11610	WASHER-LOCK TO FIX BUM PER TO STAY	3	50	ALL	Y
	62	00114-62510	BOLT TO FIX STAY TO FRAME	5	50	ALL	
*	63	00915-41600	WASHER-PLAIN TO FIX STAY TO FRAME	5		ALL	
	64	00915-41610	WASHER-PLAIN TO FIX STAY TO FRAME	5	50	ALL	Y
	65	00915-11610	WASHER-LOCK TO FIX STAY TO FRAME	5	50	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	66	62663-10401	ASSY-OVERRIDER	2	1	ALL	
	67	00114-51610	BOLT TO FIX OVERRIDER	4	50	ALL	
	68	00915-41510	WASHER-PLAIN TO FIX OVERRIDER	4	50	ALL	
	69	00915-11500	WASHER-LOCK TO FIX OVERRIDER	4		ALL	
	70	00915-11510	WASHER-LOCK TO FIX OVERRIDER	4	50	ALL	Y
	71	78204-A3200	RUBBER BUMPER REAR RH (FROM OCT-68)	1	5	ALL	
	72	78205-A3200	RUBBER BUMPER REAR LH (FROM OCT-68)	1	5	ALL	
	73	78206-A3200	PLAIN WASHER SPONGE (FROM OCT-68)	2	10	ALL	
	74	78207-A3200	PLAIN WASHER (FROM OCT-68)	2	10	ALL	
	75	00911-14010	NUT HEX (FROM OCT-68)	4	50	ALL	
	76	79111-12930	ASSY-PANEL WAIST (TO SEP-68)	1	1	ALL	
	77	79111-14600	ASSY-PANEL WAIST (FROM OCT-68)	1	1	ALL	Y






S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
			<b>TRUNK LID</b>				
*	1	84300-14600	ASSY-PANEL, TRUNK LID	1	1,6L		
	2	84300-25500	ASSY-PANEL, TRUNK LID (FROM E/# R-40001)	1	1 ALL		Y
	3	84430-12900	ASSY-LOCK, TRUNK LID	1	1,6L		
	4	84430-25500	ASSY-LOCK, TRUNK LID (FROM E/# R-40001)	1	1 ALL		N
	5	00314-01610	SCREW TO FIX TRUNK LID LOCK	4	50 ALL		
	6	00915-41010	WASHER-PLAIN TO FIX TRUNK LID LOCK	4	50 ALL		
	7	00915-11010	WASHER-LOCK TO FIX TRUNK LID LOCK	4	50 ALL		
	8	84420-12900	ASSY-STRIKER, TRUNK LID LOCK	1	2 ALL		
	9	00314-41610	SCREW TO FIX STRIKER	2	50 ALL		
	10	00915-41410	WASHER-PLAIN TO FIX STRIKER	2	50 ALL		
	11	00915-11410	WASHER-LOCK TO FIX STRIKER	2	50 ALL		
	12	57210-14600	ASSY-HANDLE, SPARE TIRE	1	1 ALL		
	13	57216-10600	ASSY-CLAMP, SPARE TIRE	1	1 ALL		
*	14	84120-12900	COVER-INSPECTION HOLE	1	1,6L		
	15	84120-25530	COVER-INSPECTION HOLE (FROM E/# R-40001)	1	1 ALL		Y
	16	84451-12900	HANDLE-TRUNK LID	1	1 ALL		
	17	00314-00610	SCREW	3	50 ALL		
	18	00915-11010	WASHER-LOCK	3	50 ALL		


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	19	84403-14601	ASSY-HINGE, TRUNK LID(R, H.)	1	1	ALL	
	20	84404-14601	ASSY-HINGE, TRUNK LID(L, H.)	1	1	ALL	
	21	84408-14602	BUMPER-HINGE, TRUNK LID	2	10	ALL	
	22	00114-51810	BOLT	4	50	ALL	
	23	00915-11510	WASHER-SPRING	4	50	ALL	
	24	00915-41510	WASHER-PLAIN	4	50	ALL	
	25	84409-14601	PIN-HINGE, TRUNK LID	2	5	ALL	
	26	00915-41610	WASHER-PLAIN	2	50	ALL	
	27	00921-21800	PIN-COTTER	2	50	ALL	
	28	84530-14600	ASSY-BAR, TORSION, TRUNK LID(R, H.)	1	10	1.6L	
	29	84530-25500	ASSY-BAR, TORSION, TRUNK LID(R, H.)(FROM E/# R-40001)	1	1	ALL	N
	30	84533-14601	BAR-TORSION, TRUNK LID(L, H.)	1	10	1.6L	
	31	84533-25500	BAR-TORSION, TRUNK LID(L, H.)(FROM E/# R-40001)	1	1	ALL	N
	32	84806-10400	WEATHERSTRIP-TRUNK LID	1	1	ALL	
	33	84901-14600	ASSY-TRIMMING, TRUNK FLOOR	1	10	1.6L	
	34	84901-14601	ASSY-TRIMMING, TRUNK FLOOR	1	1	ALL EXC EVAPO	N
	35	84901-A7800	ASSY-TRIMMING, TRUNK FLOOR(FROM JULY-69)	1		EVAPO	
	36	84901-25900	MAT-TRUNK ROOM(FROM OCT-67)	1	1	ALL	
	37	57901-14600	COVER-SPARE TIRE(VINYL)	1	1	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	38	79810-14600	EMBLEM-REAR PANEL (FAIR LADY)	1	2	ALL	
	39	79811-14600	EMBLEM-REAR PANEL (DATS UN 1600)	1	2	1,6L	
	40	62800-25500	EMBLEM-REAR PANEL (DAT SUN)	1	2	ALL	N
	41	79811-14601	MARK (1600) (FROM E/# R-40001)	1	2	ALL	N
	42	79811-25501	MARK (2000) (FROM E/# R-40001)	1	2	ALL	N
	43	00918-10500	NUT-STEERING	3		ALL	
	44	00918-10540	NUT-STEERING	3	50	ALL	Y
	45	97331-32200	WASHER-VINYL	3	50	ALL	
	46	97331-25900	WASHER-SPONGE, EMBLEM	3	10	ALL	Y
	47	99565-14600	ASSY-BRACKET, JACK, FRONT	1	1	ALL	
	48	79100-12930	ASSY-PANEL, REAR (TO E/# R-40000)	1	1	1,6L	
	49	79100-25500	ASSY-PANEL, REAR (FROM E/# R-40001 TO SEP-67)	1	1	ALL	N
	50	79100-26000	ASSY-PANEL, REAR (FROM OCT-67 TO SEP-68)	1	1	ALL	N
	51	79100-26000	ASSY-PANEL, REAR (FROM OCT-68)	1	1	ALL EXC USA & CANADA	Y
	52	79100-A3300 <sup>69</sup>	ASSY-PANEL, REAR (FROM OCT-68)	1	1	USA & CANADA	N
	53	79820-25600	MOULDING-LICENCE, REAR	1	1	2L	

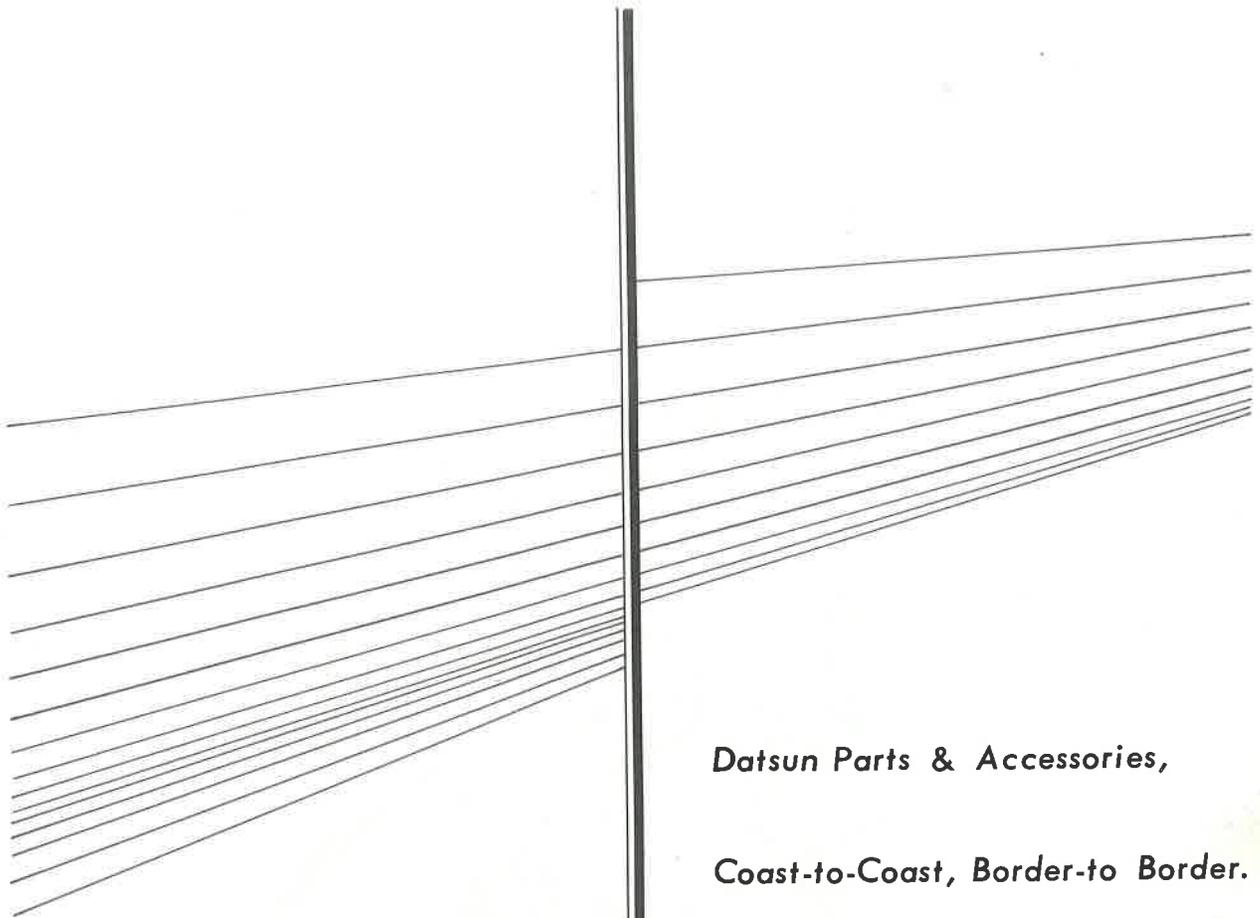


*Datsun Parts & Accessories,*

*Coast-to-Coast, Border-to Border.*

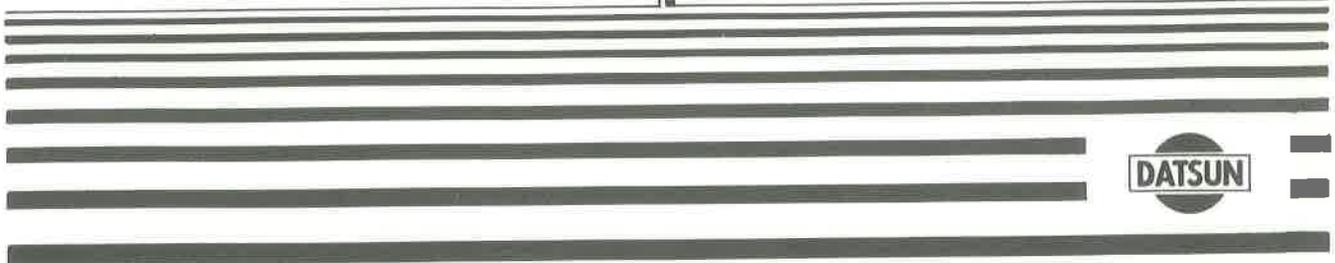


**DATSUN**


SOFT TOP

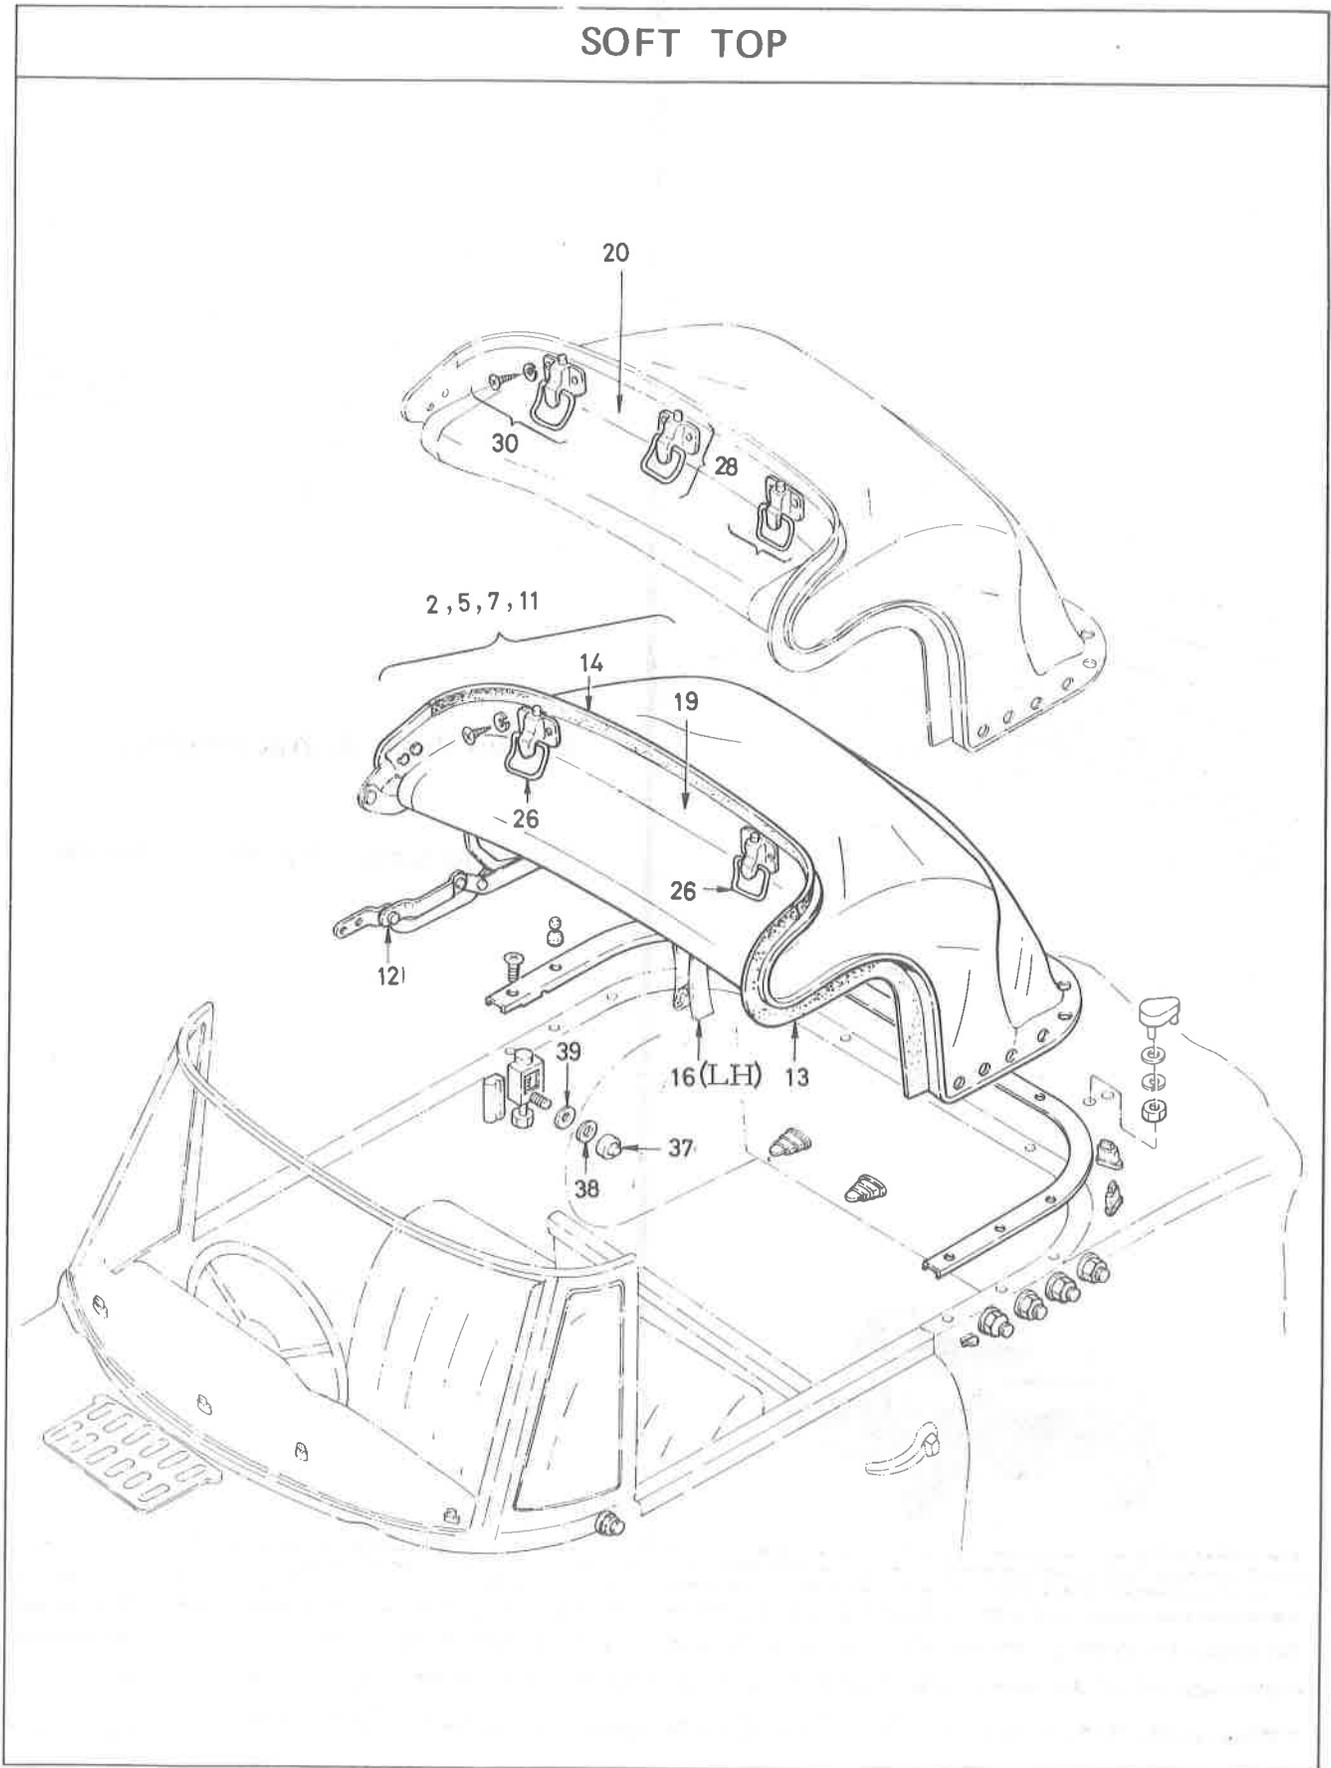

ROOM BACK SIDE VIEW

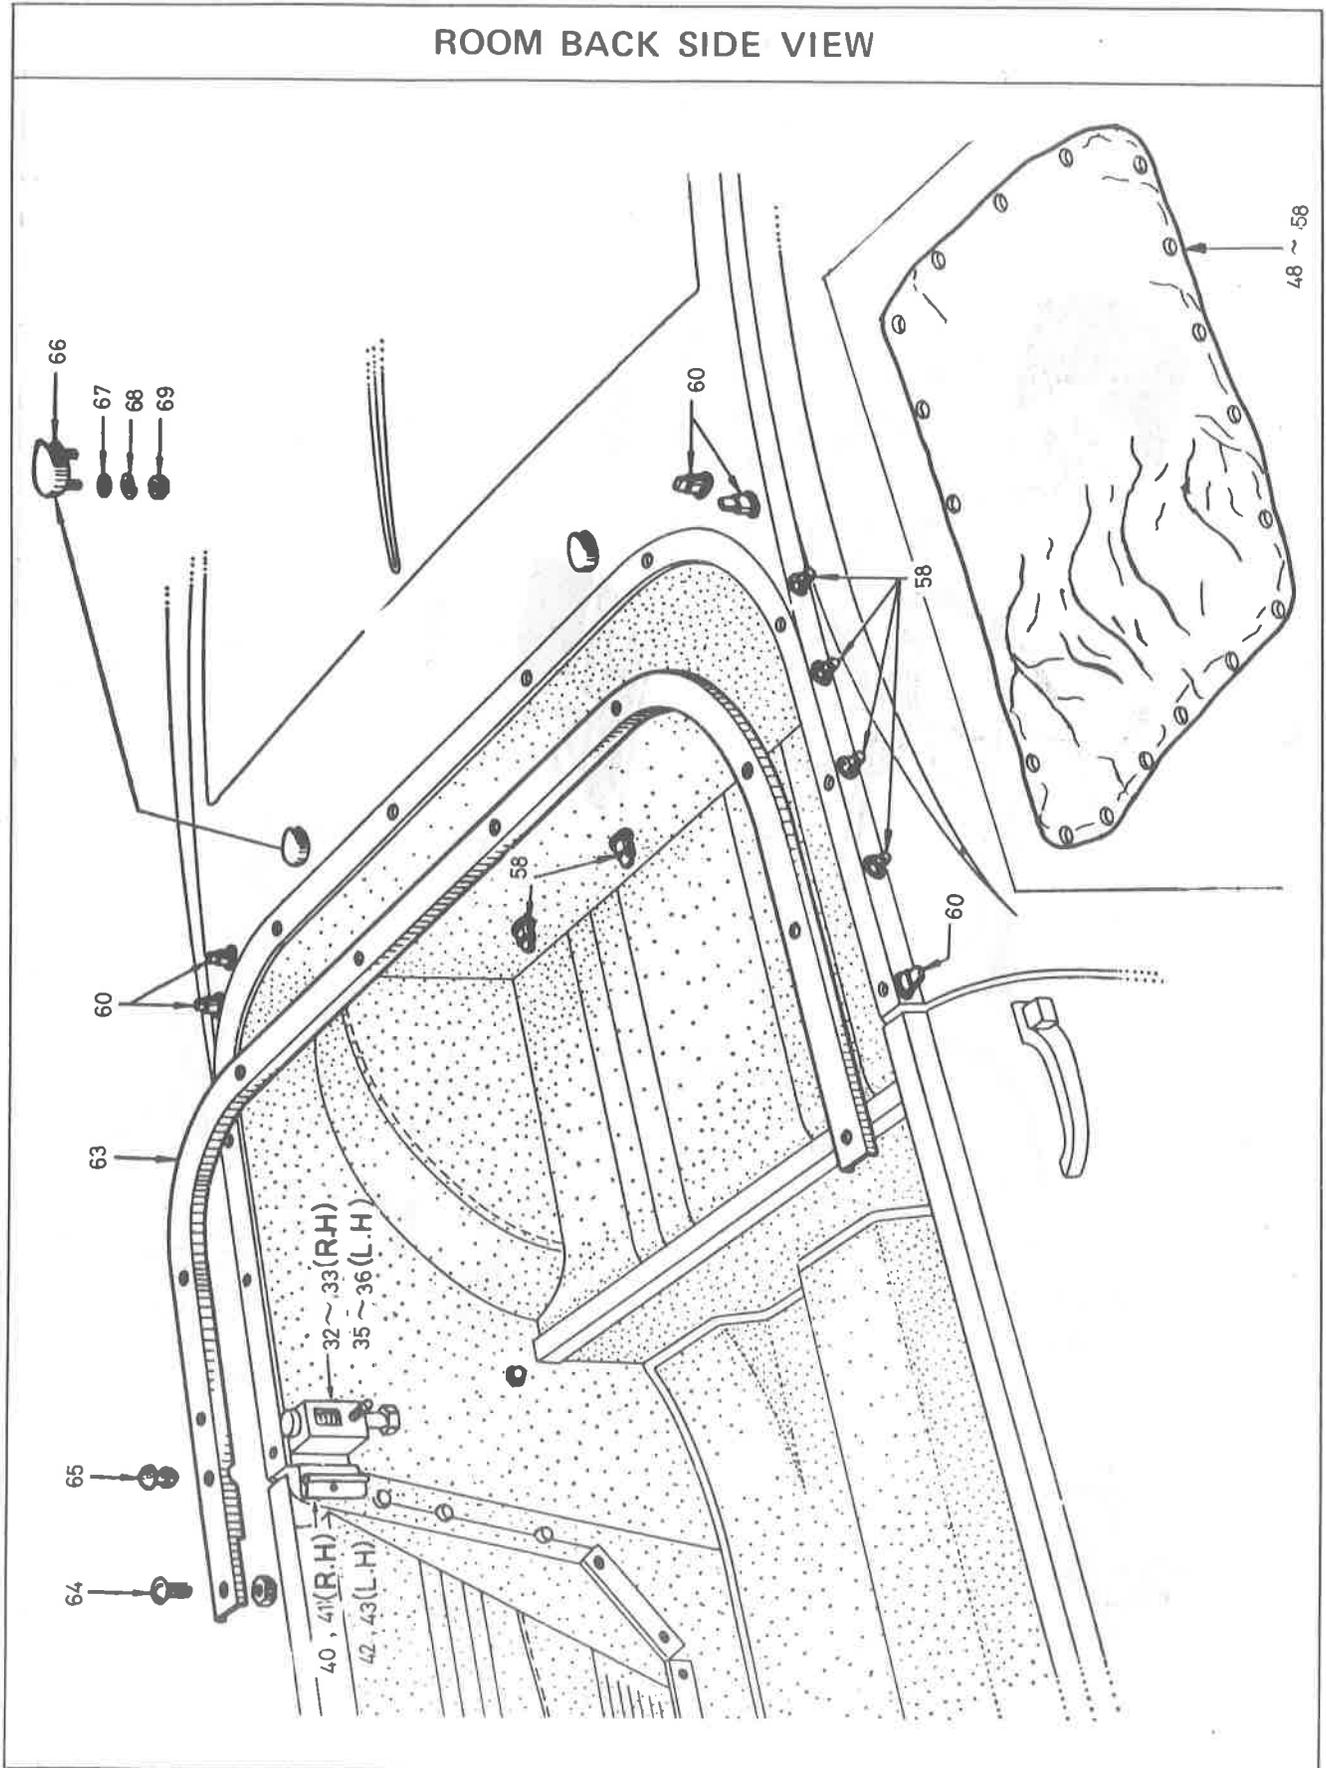

HARD TOP

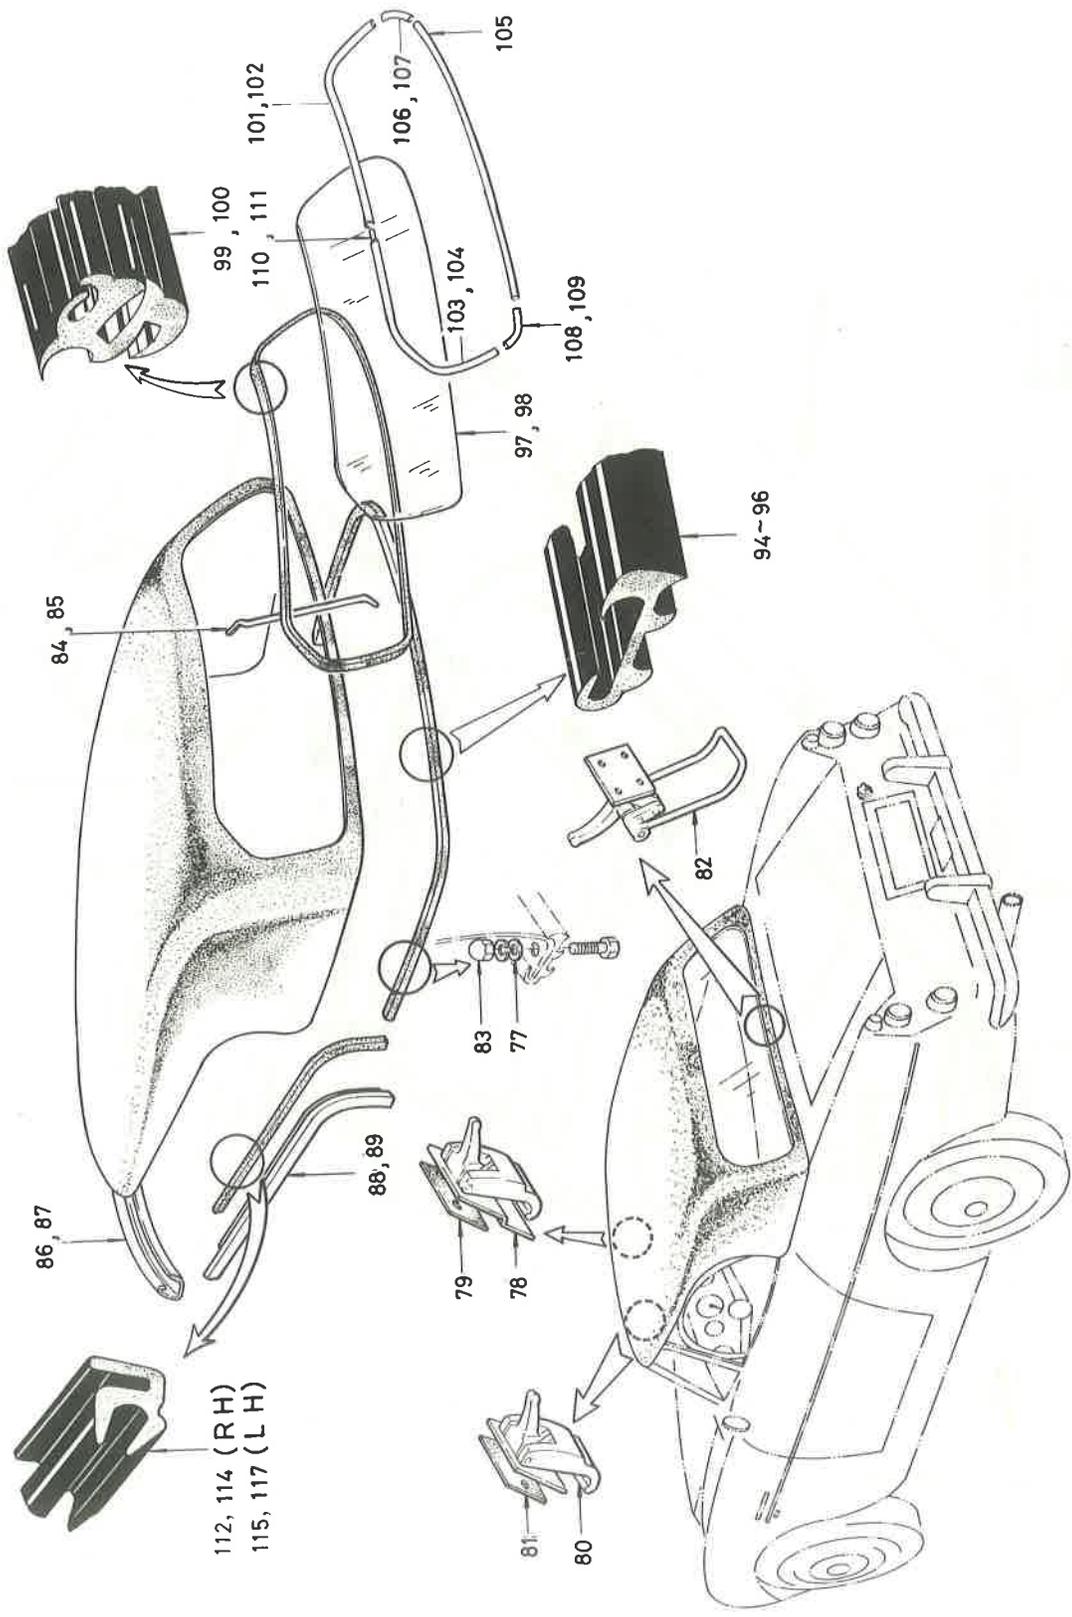

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>SOFT &amp; HARD TOP</b>				
*	1	97800-14651	ASSY-SOFT TOP, WITH FRAME	1	1,6L		
	2	97800-25551	ASSY-SOFT TOP, WITH FRAME (FROM E/# R-40001 )	1	1	ALL	Y
*	3	97800-25951	ASSY-SOFT TOP W/FRAME (FROM OCT-67)	1	1	ALL	Y
*	4	97800-A3251	ASSY-SOFT TOP W/FRAME (FROM OCT-68 TO JUNE -69)	1		ALL	Y
	5	97800-A7851	ASSY-SOFT TOP W/FRAME (FROM JULY-69)	1	1	ALL	Y
*	6	97700-14600	COMP-SOFT TOP W/O FRAME	1	1,6L		
	7	97700-25500	COMP-SOFT TOP W/O FRAME (FROM E/# R-40001 TO SEP-67)	1	1	ALL	Y
*	8	97700-25900	COMP-SOFT TOP W/O FRAME (FROM OCT-67)	1	1	ALL	N
*	9	97700-A3200	COMP-SOFT TOP W/O FRAME (FROM OCT-68)	1	1	ALL	Y
*	10	97700-A3201	COMP-SOFT TOP W/O FRAME (TO JUNE-69)	1		ALL	Y
	11	97700-A7800	COMP-SOFT TOP W/O FRAME (FROM JULY-69)	1	1	ALL	Y
	12	97800-A3250	ASSY-FRAME (FROM OCT-68)	1	1	ALL	
	13	97780-12900	WEATHERSTRIP-SOFT TOP, SIDE	2	2	ALL	
	14	97785-12900	WEATHERSTRIP-SOFT TOP, FRONT	1	1	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	15	97708-14600	PLATE-PUSHING(R,H,)	1	5	ALL	
	16	97709-14600	PLATE-PUSHING(L,H,)	1	5	ALL	
	17	00660-41010	RIVET TO FIX PLATE TO BRACKET	2	50	ALL	
	18	97798-25900	WASHER-RUBBER (FROM OCT-67)	2	10	ALL	
	19	97720-12900	SET FRAME SOFT TOP WITH FASTENER (TO SEP-67)	1	1	ALL	
	20	97720-25900	SET FRAME SOFT TOP #1 WITH FASTENER (FROM OCT-67)	1	1	ALL	N
*	21	97721-A7800	ASSY-FRAME SOFT TOP NO.1(FROM OCT-69)(NOT ADOPTED)	1	1	ALL	
	22	97721-A3250	ASSY-FRAME SOFT TOP NO.1(FROM OCT-69)	1	1	ALL	Y
	23	97790-A7800	ASSY-TRIM SOFT TOP FOR NO.1 FRAME (FROM JULY-69)	1	1	ALL	
	24	97791-A7800	WELT-SOFT TOP FOR NO.1 FRAME (FROM JULY-69)	1	1	ALL	
*	25	97730-12900	SET-FASTENER, ROOF	2	1.6L		
	26	97730-25500	SET-FASTENER, ROOF (FROM E/# R-40001 TO SEP-67)	2	1	ALL	Y
*	27	97730-25901	SET-FASTENER, ROOF CENTER (FROM OCT-67 TO JUNE-69)	1	1	ALL	N
	28	97730-A4500 4.95	SET-FASTENER, ROOF CENTER (FROM JULY-69)	1	1	ALL	Y
*	29	97740-25901	ASSY FASTENER SIDE (FROM OCT-67 TO JUNE-69)	2	1	ALL	N
	30	97740-A4500	ASSY FASTENER SIDE (FROM JULY-69)	2	1	ALL	Y


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
•	31	97740-12950	SET-BRACKET, FRAME, SOFT TOP(R, H, )	1	1	ALL	
	32	97740-14650	SET-BRACKET, FRAME SOFT TOP RH	1	1	ALL	Y
	33	97741-25900	SET-BRACKET, FRAME SOFT TOP RH(FROM OCT-67)	1	1	ALL	N
•	34	97742-12950	SET-BRACKET, FRAME, SOFT TOP(L, H, )	1	1	ALL	
	35	97742-14650	SET-BRACKET, FRAME SOFT TOP LH	1	1	ALL	Y
	36	97743-25900	SET-BRACKET, FRAME SOFT TOP LH(FROM OCT-67)	1	1	ALL	N
	37	97743-12900	NUT-CAP	2	10	ALL	
	38	00915-41510	WASHER-PLAIN	2	50	ALL	
	39	88841-09101	WASHER-PLAIN	2	10	ALL	
	40	97701-14600	ASSY-BRACKET, PUSHING PLATE(R, H, )(TO SEP-67)	1	5	ALL	
	41	97701-25900	ASSY-BRACKET, PUSHING PLATE(RH)(FROM OCT-67)	1	5	ALL	N
	42	97702-14600	ASSY-BRACKET, PUSHING PLATE(LH)(TO SEP-67)	1	5	ALL	
	43	97702-25900	ASSY-BRACKET, PUSHING PLATE(LH)(FROM OCT-67)	1	5	ALL	N
	44	00314-01210	SCREW TO FIX BRACKET	4	50	ALL	
	45	00915-11010	WASHER-LOCK TO FIX BRACKET	4	50	ALL	
	46	97760-14600	COMP.-COVER, COMPARTMENT	1	1	ALL	
	47	97760-25900	COMP-COVER, COMPARTMENT (VINYL) (FROM OCT-67)	1	1	ALL	N
	48	97770-12900	COMP.-COVER, TONNEAU	1		OP, SP	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	49	97770-25500	ASSY-TONNEAU COVER FOR HEAD SUPPORT(TO SEP-67)	1	1	SP,SR	
	50	97770-25901	ASSY-COVER,TONNEAU (FROM OCT-67)	1	1	SP,SR	Y
	51	97770-25900	ASSY COVER TONNEAU FOR SAFETY BAR	1	1	OP,SP,SR	
	52	97770-25902	ASSY COVER TONNEAU FOR SAFETY BAR	1	1	OP,SP,SR	Y
	53	97770-13000	COMP,-COVER,TONNEAU	1	1	SPL	
	54	97770-25600	ASSY-TONNEAU COVER FOR HEAD SUPPORT(TO SEP-67)	1	1	SPL,SRL	
	55	97770-26001	ASSY-COVER,TONNEAU (FROM OCT-67)	1	1	SPL,SRL	Y
	56	97770-A3300	ASSY COVER TONNEAU	1		SPLU,SRLU	
	57	97770-26000	ASSY COVER TONNEAU FOR SAFETY BAR	1	1	OP,SPL,SPL SPLU,SRLU	
	58	97751-12900	HOOK-MALE"A"(20MM)	10	5	ALL	
	59	97753-12900	HOOK-MALE"A"(7MM)	2	5	ALL	
	60	97754-12900	HOOK-MALE "B" (8MM)	6	10	ALL	
	61	97754-12900	HOOK-MALE "B" (8MM)	2	10	ALL	Y
	62	97754-A3200	HOOK-MALE "B"(4MM)	4	10	ALL	Y
	63	79850-12900	MOULDING-WAIST	1	1	ALL	
	64	00530-61010	SCREW	12	50	ALL	
	65	79853-12900	PLUG	2	10	ALL	
	66	97738-12900	FASTNER-SKIRT,SOFT TOP,REAR	3	5	ALL	
	67	00915-40810	WASHER-PLAIN	6	50	ALL	
	68	00915-10810	WASHER-LOCK	6	50	ALL	
	69	00911-10810	NUT	6	50	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	70	97775-25950	JAW-FASTENER SIDE RH	1	1	ALL	
	71	97776-25950	JAW-FASTENER SIDE LH	1	1	ALL	
	72	73832-12900	JAW-FASTENER REAR	1	1	ALL	
•	73	73010-12925	ASSY-ROOF, HARD TOP	1	1	OP, ALL	
	74	73010-14625	ASSY-ROOF, HARD TOP (TO SEP-67)	1	1	OP, ALL	Y
	75	73010-25950	ASSY-ROOF, HARD TOP (BLACK) (FROM OCT-67)	1	1	OP, ALL	N
•	76	73816-14600	WASHER-HARD TOP	2	1	ALL	
	77	73861-14600	WASHER-HARD TOP	2	10	ALL	Y
	78	73870-25900	ASSY FASTENER CENTER FOR 73010-25950	1	1	OP ALL	
	79	73878-25900	SHIM FASTENER CENTER FOR 73010-25950	1	10	OP ALL	
	80	73871-25900	ASSY FASTENER SIDE FOR 73010-25950	2	1	OP ALL	
	81	73879-25900	SHIM FASTENER SIDE FOR 73010-25950	1	10	OP ALL	
	82	73830-25900	SET FASTENER ROOF REAR FOR 73010-25950	1	1	OP ALL	
	83	73820-12900	NUT CAP	4	10	OP ALL	
	84	73859-12900	WIRE-TENSION BACK WINDOW FOR 73010-14625	1	1	OP ALL	
	85	73859-25900	WIRE-TENSION BACK WINDOW FOR 73010-25950	1	1	OP ALL	
	86	73810-12900	MOULDING-ROOF DRIP FRONT FOR 73010-14625	1	1	OP ALL	
	87	73810-25900	MOULDING-ROOF DRIP FRONT FOR 73010-25950	1	1	OP ALL	
	88	73812-25900	MOULDING ROOF DRIP SIDE RH FOR 73010-25950	1	1	OP ALL	


S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	89	73813-25900	MOULDING ROOF DRIP SIDE LH FOR 73010-25950	1	1	OP ALL	
	90	73814-12900	CLIP-MOULDING ROOF DRI P FOR 73010-14625	1	10	OP ALL	
	91	73814-25900	CLIP-MOULDING-ROOF DRIP FOR 73010-25950	1	1	OP ALL	
	92	73911-25900	WEATHERSTRIP ROOF FRONT FOR 73010-25950	1	1	OP ALL	
	93	73919-25901	WEATHERSTRIP DOOR ROOF SIDE FOR 73010-25950	2	5	OP, ALL	
	94	73917-14600	WEATHERSTRIP-ROOF LOWE R FOR 73010-14625	1	1	OP ALL	
	95	73917-25900	WEATHERSTRIP-ROOF LOWE R FOR 73010-25950	1	1	OP ALL	
	96	73917-A3200	WEATHERSTRIP-ROOF LOWE R FOR 73010-25950	1	1	OP, ALL	Y
	97	79739-10400	GLASS-BACK WINDOW FOR 73010-14625	1	1	OP ALL	
	98	79739-25900	GLASS-BACK WINDOW FOR 73010-25950	1	1	OP ALL	
	99	79716-10400	WEATHERSTRIP-BACK WIND OW FOR 73010-14625	1	1	OP ALL	
	100	79716-25900	WEATHERSTRIP-BACK WINDOW FOR 73010-25950	1	1	OP, ALL	
	101	72823-10400	MOULDING-BACK WINDOW RH FOR 73010-14625	1	1	OP ALL	
	102	72823-25900	MOULDING-BACK WINDOW RH FOR 73010-25950	1	1	OP ALL	
	103	72824-10400	MOULDING-BACK WINDOW LH FOR 73010-14625	1	1	OP ALL	
	104	72824-25900	MOULDING-BACK WINDOW LH FOR 73010-25950	1	1	OP, ALL	
	105	72825-25900	MOULDING BACK WINDOW LOWER FOR 73010-25950	1	1	OP, ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	106	72826-10400	CONNECTOR-MOULDING BACK WINDOW RH FOR 73010-14625	1	1	OP ALL	
	107	72826-25900	CONNECTOR-MOULDING BACK WINDOW RH FOR 73010-25950	1	1	OP ALL	
	108	72827-10400	CONNECTOR-MOULDING BACK WINDOW LH FOR 73010-14625	1	1	OP ALL	
	109	72827-25900	CONNECTOR-MOULDING BACK WINDOW LH FOR 73010-25950	1	1	OP ALL	
	110	72805-12900	CLIP-MOULDING WINDSHIELD FOR 73010-14625	1	10	OP ALL	
	111	72805-25900	CLIP-MOULDING WINDSHIELD FOR 73010-25950	1	5	OP ALL	
	112	73913-14600	ASSY-WEATHERSTRIP, DOOR UPPER RH FOR 73010-14625	1	1	OP ALL	
•	113	73915-25900	ASSY-WEATHERSTRIP, DOOR UPPER RH FOR 73010-25950	1	1	OP ALL	
	114	73915-25901	ASSY-WEATHERSTRIP DOOR UPPER RH FOR 73010-25950	1	1	OP, ALL	Y
	115	73914-14600	ASSY-WEATHERSTRIP, DOOR UPPER LH FOR 73010-14625	1	1	OP ALL	
•	116	73916-25900	ASSY-WEATHERSTRIP DOOR UPPER LH FOR 73010-25950	1	1	OP ALL	
	117	73916-25901	ASSY-WEATHERSTRIP DOOR UPPER LH FOR 73010-25950	1	1	OP, ALL	Y

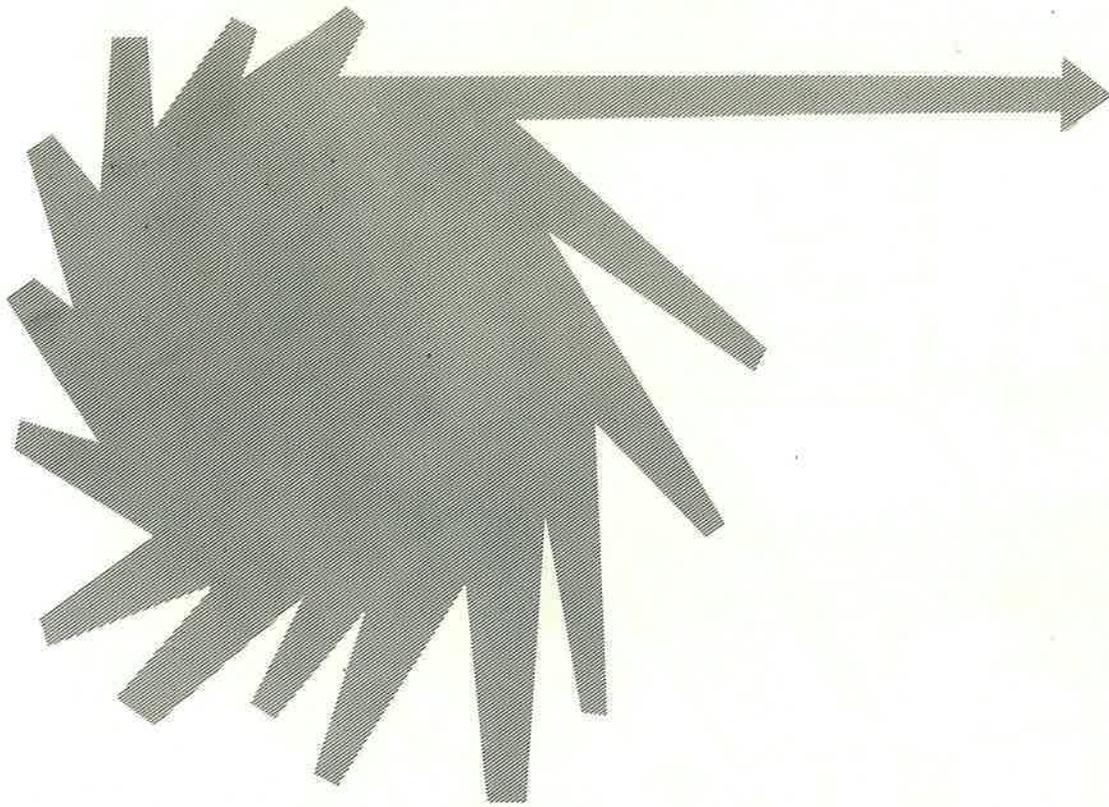

*Datsun Original Factory Parts Perform Better.*



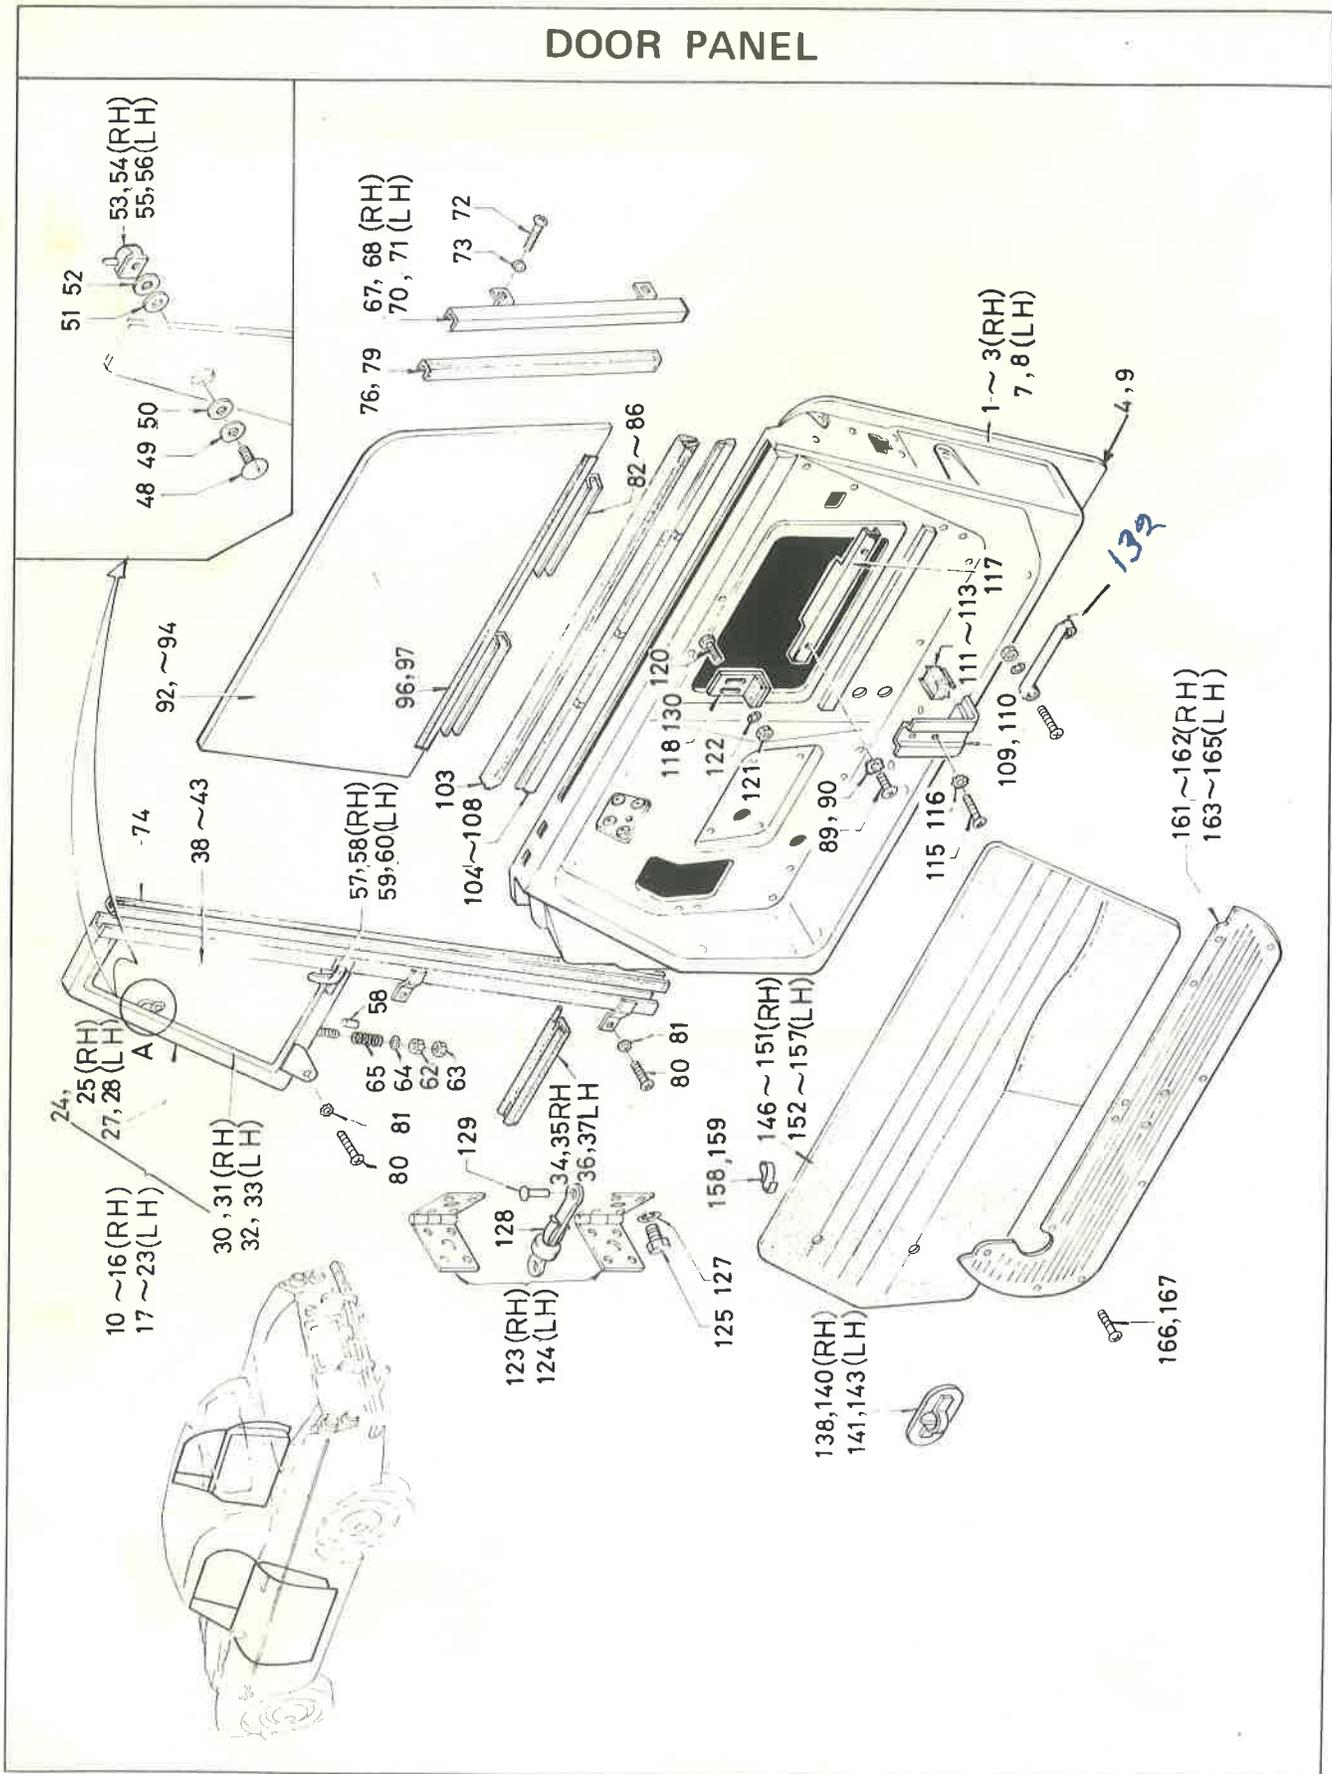

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>DOOR PANEL</b>				
	1	80100-14600	ASSY-PANEL, DOOR RH (TO E/# R=40000)	1	1	1,6L	
	2	80100-25550	ASSY-PANEL, DOOR(RH)(FR OM E/# R=40001 TO SEP- 67)	1	1	ALL	N
	3	80100-25950	ASSY-PANEL, DOOR(RH)(FR OM E/# R=40001 FROM OC T=67)	1	1	ALL	N
	4	80152-25900	PANEL=DOOR OUTER RH	1	1	ALL	
	5	80101-14600	ASSY-PANEL, DOOR LH (TO E/# R=40000)	1	1	1,6L	
*	6	80101-25550	ASSY-PANEL, DOOR(L.H.)( FROM E/# R=40001)	1		ALL	N
	7	80101-25551	ASSY-PANEL, DOOR(L.H.)( FROM E/# R=40001)	1	1	ALL EXC US A & CANADA	Y
	8	80101-25950	ASSY-PANEL, DOOR LH (FROM OCT=67)	1	1	USA & CANA DA	N
	9	80153-25900	PANEL DOOR OUTER LH	1	1	ALL	
*	10	80200-13000	ASSY-VENTILATOR, DOOR W INDOW(R,H.)	1		1,6L	
*	11	80200-13002	ASSY-VENTILATOR, DOOR WINDOW (R,H.) (MVSS)	1	1	1,6L	Y
*	12	80200-14700	ASSY VENTILATOR, DOOR WINDOW RH (TO E/#R= 40000)	1	1	1,6L	N
	13	80200-14702	ASSY-VENTILATOR, DOOR WINDOW RH (MVSS)	1	1	1,6L	Y
	14	80200-25550	ASSY-VENT DOOR WINDOW RH (FROM E/# R=40001 TO SEP67)	1	1	ALL	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	15	80200-25601	ASSY-VENT D/W RH(FROM E/#R-40001 TO SEP-67) (MVSS)	1	1	ALL	Y
	16	80200-25900	ASSY-VENTILATOR, DOOR WINDOW RH(FROM OCT-67)	1	1	ALL	N
*	17	80201-13000	ASSY-VENTILATOR, DOOR WINDOW(L,H,)	1		1,6L	
*	18	80201-13002	ASSY-VENTILATOR, DOOR WINDOW (L,H,) (MVSS)	1	1	1,6L	Y
*	19	80201-14700	ASSY VENTILATOR, DOOR WINDOW LH (TO E/# R-40000)	1	1	1,6L	N
	20	80201-14702	ASSY VENTILATOR, DOOR WINDOW LH (MVSS)	1	1	1,6L	Y
	21	80201-25550	ASSY-VENT, DOOR WINDOW LH(FROM E/#R-40001 TO SEP-67)	1	1	ALL	N
	22	80201-25601	ASSY-VENT D/W LH(FROM E/#R-40001 TO SEP-67) (MVSS)	1	1	ALL	Y
	23	80201-25900	ASSY-VENTILATOR DOOR WINDOW LH(FROM OCT-67)	1	1	ALL	N
	24	80270-14600	ASSY-CHANNEL SASH, DOOR VENTILATOR(R,H,)	1	1	1,6L	
	25	80270-25500	ASSY-CHANNEL SASH RH (FROM E/#R-40001)(TO SEP-67)	1	1	ALL	N
	26	80210-25900	ASSY-CHANNEL SASH DOOR VENT RH (FROM OCT-67)	1	1	ALL	N
	27	80271-14600	ASSY-CHANNEL SASH, DOOR VENTILATOR(L,H,)	1	1	1,6L	
	28	80271-25500	ASSY-CHANNEL SASH LH (FROM E/#R-40001)(TO SEP-67)	1	1	ALL	N
	29	80211-25900	ASSY-CHANNEL SASH DOOR VENT LH (FROM OCT-67)	1	1	ALL	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	30	80241-12900	WEATHERSTRIP DOOR VENTILATOR RH (TO SEP-67)	1	1	ALL	N
	31	80241-25900	WEATHERSTRIP DOOR VENTILATOR RH (FROM OCT-67)	1	1	ALL	N
	32	80242-12900	WEATHERSTRIP DOOR VENTILATOR LH (TO SEP-67)	1	1	ALL	
	33	80242-25900	WEATHERSTRIP DOOR VENTILATOR LH (FROM OCT-67)	1	1	ALL	N
	34	80243-12900	WEATHERSTRIP DOOR VENTILATOR RH (TO SEP-67)	1	1	ALL	
	35	80243-25900	WEATHERSTRIP DOOR VENTILATOR OUTER RH (FROM OCT-67)	1	1	ALL	N
	36	80244-12900	WEATHERSTRIP DOOR VENTILATOR OUTER LH (TO SEP-67)	1	5	ALL	
	37	80244-25900	WEATHERSTRIP DOOR VENTILATOR OUTER LH (FROM OCT-67)	1	5	ALL	N
*	38	80255-13000	GLASS-DOOR VENTILATOR (AS TEMPERED SHEET)	2	1	1.6L	
	39	80255-13002	GLASS-DOOR VENTILATOR (AS TEMPERED SHEET) (MVSS)	2	1	1.6L	Y
*	40	80255-13001	GLASS-DOOR VENTILATOR (AS TEMPERED SHEET) (FROM C/# SP311-00487, SPL311-00329)	2		1.6L	N
	41	80255-13003	GLASS-DOOR VENTILATOR (AS TEMPERED SHEET) (MVSS)	2	1	1.6L	Y
	42	80255-12901	GLASS DOOR VENTILATOR (FROM E/# R-40001 TO SEP-67)	2	1	ALL	Y
	43	80280-25900	GLASS DOOR VENTILATOR (FROM OCT-67)	2	1	ALL	N
	44	80256-12900	ASSY-SASH VENT RH	1	1	ALL	

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	45	80257-12900	ASSY-SASH VENT LH	1		ALL	
	46	80284-12900	RUBBER-GLAZING	2	2	ALL	
*	47	80292-25900	RUBBER VENT, SASH UPPER (FROM OCT-67)	2		ALL	
	48	00334-01010	BOLT-ROUND HEAD	2	50	ALL	
	49	80246-12900	WASHER-SPACER	2	10	1,6L	
	50	80246-25500	WASHER-SPACER (FROM E/# R-40001)	2	10	ALL	N
	51	80248-12900	WASHER-SPACER	2	10	ALL	
	52	80247-12900	WASHER-SPACER	2	10	ALL	
	53	80245-12900	HOLDER-BRACKET, PIVOT	2	1	ALL	
	54	80245-12901	HOLDER-BRACKET, PIVOT (RH) (TO E/# R-40000)	1	5	ALL	N
	55	80249-12900	HOLDER-BRACKET, PIVOT (LH) (TO E/# R-40000)	1	5	1,6L	N
*	56	80249-25500	HOLDER-BRACKET, PIVOT (LH) (FROM E/# R-40001)	1		ALL	N
	57	80206-12900	ASSY-HANDLE, CATCH, VENTILATOR (R.H.)	1	1	1,6L	
	58	80261-25500	ASSY-HANDLE, CATCH, VENTILATOR (FROM E/# R-40001)	1	1	ALL	N
	59	80207-12900	ASSY-HANDLE, CATCH, VENTILATOR (L.H.)	1	1	1,6L	
	60	80262-25500	ASSY-HANDLE, CATCH, VENTILATOR (L.H.) (FROM E/# R-40001)	1	1	ALL	N
	61	80263-12900	TUBE-DISTANCE, PIVOT BOTTOM	2	10	ALL	
	62	00911-34410	NUT-LOCK	2	50	ALL	
	63	00911-14410	NUT	2	50	ALL	
	64	00915-41410	WASHER-PLAIN	4	50	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	65	80247-32200	SPRING-DOOR VENTILATOR	2	10	ALL	
*	66	80220-10400	ASSY-CHANNEL, SASH, DOOR , REAR (R, H, )	1	1	1, 6L	
	67	80220-14600	ASSY-CHANNEL SASH DOOR REAR RH (FROME/#R-40001 TOSEP67)	1	1	ALL	Y
	68	80250-25900	ASSY-CHANNEL SASH DOOR REAR RH (FROM OCT-67)	1	1	ALL	N
*	69	80221-10400	ASSY-CHANNEL, SASH, DOOR , REAR (L, H, )	1	1	1, 6L	
	70	80221-14600	ASSY-CHANNEL SASH DOOR REAR LH (FROME/#R-40001 TOSEP67)	1	1	ALL	Y
	71	80251-25900	ASSY-CHANNEL SASH DOOR REAR LH (FROM OCT-67)	1	1	ALL	N
	72	00314-41210	SCREW TO FIX SASH REAR	4	50	ALL	
	73	00916-31410	WASHER-LOCK TO FIX SAS H REAR	4	50	ALL	
	74	80335-10400	RUBBER-GLASS RUN "A"	2	2	ALL	
	75	80245-25900	RUBBER-GLASS RUN "A" (FROM OCT-67 TO SEP- 68)	2	5	ALL	N
	76	80245-25900	RUBBER GLASS RUN A RH (FROM OCT-68)	1	5	ALL	Y
	77	80246-25900	RUBBER GLASS RUN A LH (FROM OCT-68)	1	5	ALL	N
	78	80247-25900	RUBBER-GLASS RUN "B" (NOT ADOPTED)	2	5	ALL	
	79	80336-10400	RUBBER-GLASS RUN "B"	2	2	ALL	Y
	80	00314-41210	SCREW TO FIX VENTILATO R	6	50	ALL	
	81	00916-31410	WASHER-LOCK TO FIX VEN TILATOR	6	50	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	82	80302-10400	ASSY-CHANNEL, DOOR GLASS BOTTOM	2	1	ALL	
	83	80302-14600	ASSY-CHANNEL BOTTOM RH (FROMC/#SPL311-4103TO SEP-67)	1	1	ALL	N
	84	80302-25900	ASSY-CHANNEL BOTTOM RH (FROM OCT-67)	1	1	ALL	N
	85	80303-14600	ASSY-CHANNEL BOTTOM LH (FROMC/#SPL311-4103TO SEP-67)	1	1	ALL	N
	86	80303-25900	ASSY-CHANNEL BOTTOM LH (FROMC/#SPL311-4103TO SEP-67)	1	1	ALL	N
	87	80316-12900	STOPPER-DOOR WINDOW GLASS	2	1	ALL	
	88	80316-14600	STOPPER-DOOR WINDOW GLASS (FROM C/# SPL311-4103)	2	5	ALL	N
	89	00314-41210	SCREW	2	50	ALL	
	90	00915-11410	WASHER-SPRING	2	50	ALL	
*	91	80306-13000	GLASS-WINDOW, DOOR (TO SEP-67)	2		ALL	
	92	80306-12900	GLASS-WINDOW, DOOR (TO SEP-67)	2	1	ALL	Y
	93	80306-13001	GLASS WINDOW DOOR (TO SEP-67) (MVSS)	2	1	ALL	Y
	94	80306-25900	GLASS-WINDOW, DOOR (FROM OCT-67)	2	1	ALL	N
*	95	80312-10400	RUBBER-GLAZING, DOOR GLASS	2	2	1, 6L	
	96	80312-14600	RUBBER-GLAZING DOOR GLASS (FROMC/#SPL311-4103TOSEP67)	2	5	ALL	Y
	97	80312-25900	RUBBER-GLAZING, DOOR GLASS (FROM OCT-67)	2	5	ALL	N

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	98	80328-25500	ASSY-GARNISH WITH W/S (RH)(FROM E/#R-40001 TO SEP-67)	1	1	ALL	
	99	80328-25900	ASSY-GARNISH WITH W/S (RH)(FROM OCT-67)	1	1	ALL	N
	100	80329-25500	ASSY-GARNISH WITH W/S (LH)(FROM E/#R-40001 TO SEP-67)	1	1	ALL	
	101	80329-25900	ASSY-GARNISH WITH W/S (LH)(FROM OCT-67)	1	1	ALL	N
	102	80341-12900	WEATHERSTRIP-DOOR WINDOW, OUTER (TO SEP-67)	2	1	ALL	
	103	80341-25900	WEATHERSTRIP DOOR WINDOW OUTER (FROM OCT-67)	2	3	ALL	N
	104	80330-12900	WEATHERSTRIP-DOOR WINDOW INNER (RH)(TO E/#R-40000)	1	1	1,6L	
	105	80331-12900	WEATHERSTRIP-DOOR WINDOW INNER (LH)(TO E/#R-40000)	1	1	1,6L	
	106	80330-25500	WEATHERSTRIP-DOOR WINDOW (FROM E/#R-40001 TO SEP-67)	2	1	ALL	N
	107	80330-25900	WEATHERSTRIP DOOR WINDOW INNER (RH)(FROM OCT-67)	1	1	ALL	N
	108	80331-25900	WEATHERSTRIP DOOR WINDOW INNER (LH)(FROM OCT-67)	1	1	ALL	N
	109	80314-10400	ASSY-STOPPER DOOR GLASS LOWER (TOE/#R-40000)	2	1	1,6L	
	110	80314-25500	ASSY-STOPPER, DOOR GLASS, LOWER (FROM E/#R-40001)	2	1	ALL	N
	111	80317-00800	CUSHION-GLASS, LOWER (TO SEP-67)	2	50	ALL	

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	112	80317-25900	CUSHION=GLASS, LOWER (FROM OCT=67)	2	10	ALL	N
	113	80317-A3200	CUSHION=GLASS, LOWER	2	5	ALL	Y
	114	80919-22500	CLIP=CUSHION (FROM OCT=67)	2	10	ALL	
	115	00314-41210	SCREW TO FIX STOPPER & GUIDE RAIL	4	50	ALL	
	116	00915-11410	WASHER=LOCK TO FIX STOPPER & GUIDE RAIL	4	50	ALL	
	117	80308-10400	ASSY=RAIL, GUIDE, REGULATOR	2	1	ALL	
	118	80316-10400	ANGLE=STOPPER, DOOR WINDOW (R, H.)	1	1	ALL	
	119	80316-12900	ANGLE=STOPPER, DOOR WINDOW (L, H.)	1	1	ALL	
	120	00314-41210	SCREW TO FIX STOPPER ANGLE	2	50	ALL	
	121	00911-14410	NUT TO FIX STOPPER ANGLE	2	50	ALL	
	122	00915-11410	WASHER=LOCK TO FIX STOPPER ANGLE	2	50	ALL	
	123	80400-10400	ASSY=HINGE, DOOR RH	2	1	ALL	
	124	80401-14600	ASSY=HINGE, DOOR (L, H.)	2	1	1, 6L	
	125	00114-41610	BOLT	32	50	ALL	
*	126	00915-11400	WASHER=LOCK	32		ALL	
	127	00915-11410	WASHER=LOCK	32	50	ALL	Y
	128	80410-14600	ASSY=LINK, CHECK, DOOR	2	1	ALL	
	129	82451-30000	RIVET	2	10	ALL	
	130	80691-26261	HANDLE=PULL	2	2	1, 6L	
	131	80691-25500	HANDLE=PULL ANTI-DAZZLE (FROM E/# R-40001 TO SEP=67)	2	1	ALL	Y

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
*	132	80691-23100	HANDLE=PULL ANTI-DAZZL E(FROM OCT-67)	2	2	ALL	N
	133	80691-A0600	HANDLE=PULL ANTI- DAZZLE (FROM OCT-67)	2	2	ALL	Y
	134	00314-01220	SCREW	4	50	ALL	
	135	00911-14010	NUT	4	50	ALL	N
*	136	00915-41000	WASHER=LOCK	4		ALL	N
	137	00915-41010	WASHER=LOCK	4	50	ALL	Y
	138	80510-25500	ASSY-COVER REMO CON RH (FROM E/# R-40001 TO SEP-67)	1	1	ALL	
*	139	80510-25900	ASSY-COVER REMO CON RH (FROM OCT-67)	1	1	ALL	N
	140	80512-25900	ASSY-COVER REMO CON RH (FROM OCT-67)	1	1	ALL	Y
	141	80511-25500	ASSY-COVER REMO CON LH (FROM E/# R-40001 TO SEP-67)	1	1	ALL	N
*	142	80511-25900	ASSY-COVER REMO CON LH (FROM OCT-67)	1	1	ALL	N
	143	00324-01010	SCREW TO ATTACH COVER (FROM E/# R-40001)	2	50	ALL	N
	144	80512-25900	ASSY-ESCUTCHION REMO CON RH	1	1	ALL	
	145	80513-25900	ASSY-ESCUTCHION REMO CON LH	1	1	ALL	
	146	80950-12900	ASSY-TRIMMING DOOR RH (RED)(TO E/# R-40000)	1	1	1.6L	N
	147	80950-25500	ASSY-TRIMMING DOOR RH RED(FROM E/#R-40001 TO SEP-67)	1	1	ALL	N
	148	80950-25900	ASSY-TRIMMING DOOR RH (RED)(FROM OCT-67)	1	1	ALL	N


S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
	149	80950-12901	ASSY-TRIM DOOR RH BLAC K(TO E/# R=40000)	1	1	1,6L	N
	150	80950-25501	ASSY-TRIM DOOR RH BLAC K(FROM E/# R=400001 TO SEP=67)	1	1	ALL	N
	151	80950-25901	ASSY-TRIM DOOR RH BLAC K(FROM OCT=67)	1	1	ALL	N
	152	80951-12900	ASSY-TRIM DOOR LH RED (TO E/# R=40000)	1	1	1,6L	
	153	80951-25600	ASSY-TRIM DOOR LH RED (FROM E/# R=40001 TO SEP=67)	1	1	ALL	N
	154	80951-25900	ASSY-TRIM DOOR LH RED (FROM OCT=67)	1	1	ALL	N
	155	80951-12901	ASSY-TRIM DOOR LH BLAC K(TO E/# R=40000)	1	1	1,6L	
	156	80951-25601	ASSY-TRIM DOOR LH BLAC K (FROM E/# R=40001 TO SEP=67)	1	1	ALL	N
	157	80951-25901	ASSY-TRIM DOOR LH BLAC K (FROM OCT=67)	1	1	ALL	N
	158	80919-14600	CLIP-DOOR FINISH	10	10	ALL	N
	159	80919-32200	CLIP-DOOR FINISH	18	50	ALL	
*	160	80811-12900	PLATE-KICKING DOOR INS IDE RH(TO E/# R=40000)	1	1	1,6L	
	161	80811-25500	PLATE-KICKING D/I RH (FROM E/# R=40001 TO SEP=67)	1	1	ALL	Y
	162	80811-25900	PLATE-KICKING DOOR INS IDE RH(FROM OCT=67)	1	1	ALL	N
	163	80812-12900	PLATE-KICKING DOOR INS IDE LH(TO E/# R=40000)	1	1	1,6L	
	164	80812-25500	PLATE-KICKING D/I LH (FROM E/# R=40001 TO SEP=67)	1	1	ALL	N

S	KEY NO.	PART NO.	PART NAME	Q'TY	SALES UNIT	MODEL	ICA
	165	80812-25900	PLATE-KICKING DOOR INS IDE LH(FROM OCT-67)	1	1	ALL	N
	166	00530-61010	SCREW TO FIX KICKING PLATE	10	50	ALL	N
	167	00510-61010	SCREW TO FIX KICKING PLATE	6	50	ALL	Y

**NOTE**



TOOL KIT

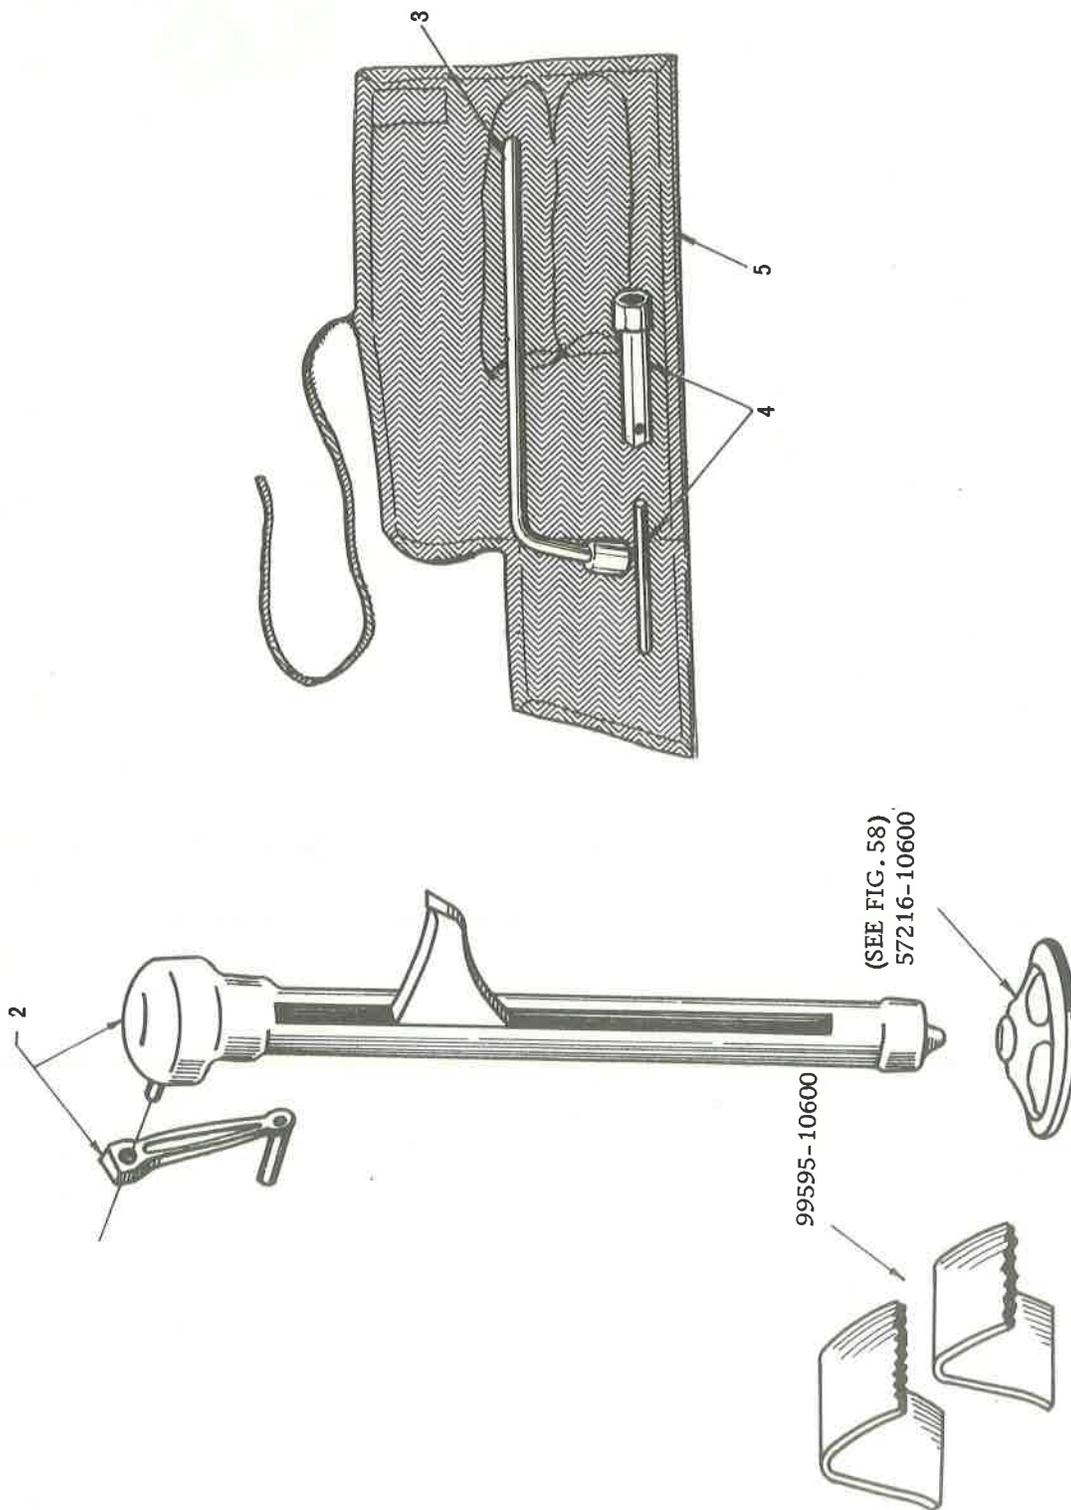

S	KEY NO.	PART NO.	PART NAME	QTY	SALES UNIT	MODEL	ICA
			<b>TOOL KIT</b>				
#	1	99500-14601	KIT-TOOL	1		ALL	
#	2	99550-12900	SET-JACK WITH HANDLE	1		ALL	
#	3	99545-16500	WRENCH-WHEEL NUT	1		ALL	
#	4	99505-61000	WRENCH-SPARK PLUG	1		ALL	
#	5	99595-75000	ASSY-BAG, TOOL	1		ALL	

**NOTE**

